



INSTALLATION GUIDE

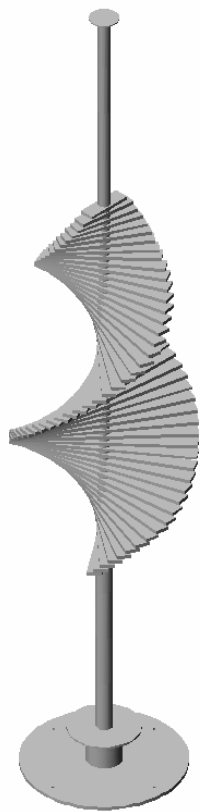

1-

1-
a- Screw the inserts tightly – four pieces to floor, four pieces to ceiling.


2-
a- Hold the radiator in position on the floor.
b- Mark the floor and the ceiling in circle around the contact position of the inserts
c- Drill the floor and the ceiling in the centre of the four circles

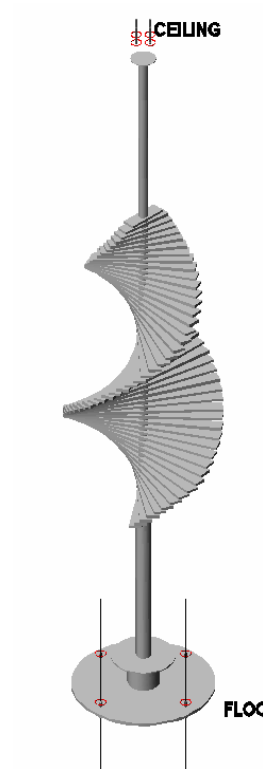


2-

3-

a- Fit the wedge anchor and high tensile set screws into the holes that you already drilled (on the floor and the ceiling).

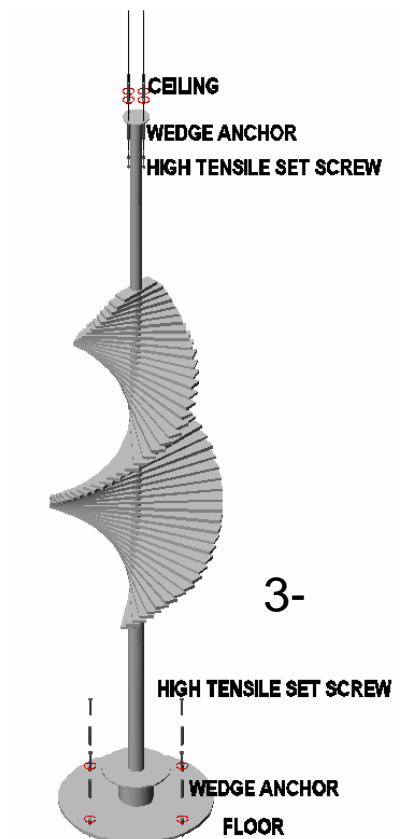


3-

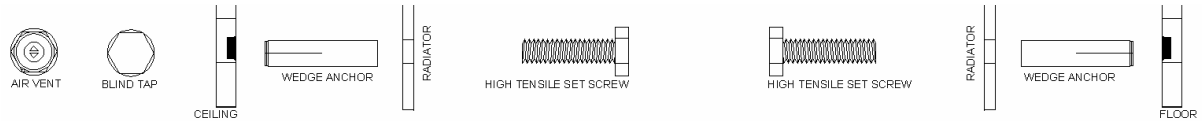

MODEL NAME	HEIGHT (mm)	LENGTH (mm)	WATER Content (LT)	WEIGHT (Kg)	TAPPING CENTRES (mm)	OUTPUT (BTU)	OUTPUT (Watt)
Ecstasy 35-E	2200-3000	350	3,90	36,22	100		
Ecstasy 50-E	2200-3000	500	6,27	52,64	100	8.416	2468

Test pressure : 13 BAR
 Max. Working pressure : 10 BAR
 Heat output to EN 442

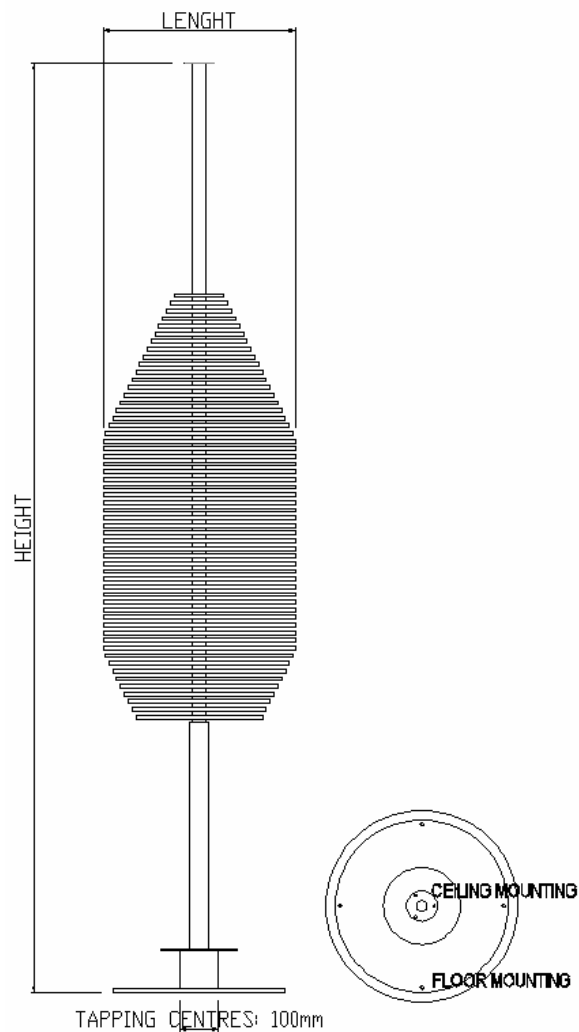

ECSTASY 50 - illustrated above

Floor to Ceiling mounted free standing radiator.



ECSTASY Radiators may only be installed vertical position as illustrated