


Bendy Curtain Rail

INSTALLATION AND USER MANUAL

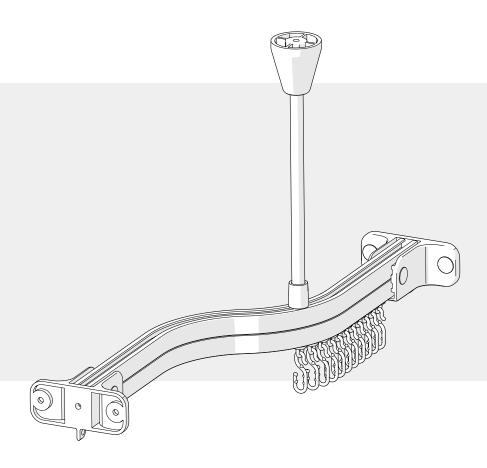

Please read all instructions before installation and leave this document with the end user for future reference as it contains important warranty information

Contents


Ref	Description	Illustration	Qty
А	Bendy Rail		1
В	Wall Bracket		2
С	Screw Cove	9	8
D	Hook		11
Е	Gliders		11
F	Ceiling Hanger Support		1
G	Ceiling Hanger Bracket		1
Н	Ceiling Hanger Rod		1
	Wall Plug		4
J	Small Screw		4
K	Self-tapping Screw	9	2
L	Wall Fixing Screw		5

Bending the rail

To create the shape you want use the outline of the shower tray as a guide. The curtain rail should always be positioned on the inside of a shower screen. Bend the rail over a smooth curved surface to the required shape. Do not over bend or use a sharp edge as this will distort the rail. After bending measure the rail carefully and cut to the desired length using a fine toothed saw.

Wall Fixing


Loosely assemble the Bendy Rail (A) and Wall Brackets (B). Position the rail and mark the hole positions of the wall brackets and measure the distance from the ceiling to the top of the wall brackets. The guide dimension for the rail position is 1880 mm above the shower tray. Remove the wall brackets and check the hole positions. Drill fixing holes into the wall using a 5 mm masonry drill (if you are in doubt about the suitability of the fixings for your wall type ask a skilled tradesman). Secure the wall brackets in place with the Wall

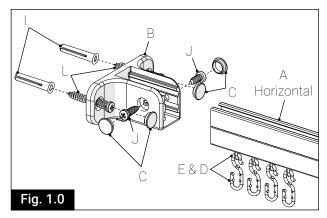

Fixing Screws (L - No.8 x $1\frac{1}{2}$ " pan). Lightly spray rail with silicone lubricant to help Ceiling Hanger Bracket (G) to slide in to the top section of the rail and the Gliders (E) in to the bottom section of the rail. Insert the rail into the wall brackets and secure with Small Screws (J - No.8 x $\frac{1}{2}$ " pan). Fix Screw Cover Caps (C).

Ceiling Fixing

Position the Ceiling Hanger Support (F) close to the bend in the rail where it can be secured into a ceiling joist. If a joist cannot be located use a cavity wall fixing for additional strength. Ensure rail is level before cutting Ceiling Hanger Rod (H). Fit ceiling hanger rod into Ceiling Hanger Bracket (G) and secure with Self-Tapping Screw (K - No. 4 x ¼" pan). Mark off hole position when ceiling hanger rod is vertical. Drill into ceiling and fix ceiling hanger support and secure onto ceiling hanger drop rod using self tapping screw.

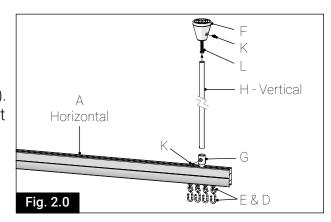

Contact Us



Orders & Quotes

01905 823 299 orders@akw-ltd.co.uk

General Enquiries

01905 823 298 sales@akw-ltd.co.uk

Technical Enquiries

01905 560 219 tech@akw-ltd.co.uk

Kitchen Enquiries

01905 823 262 kitchens@akw-ltd.co.uk

Fax

01905 823 297

AKW

Pointon Way, Hampton Lovett Droitwich Spa, WR9 0LR

www.akw-ltd.co.uk orders.akw-ltd.co.uk

Follow us on Social:









Guarantee

The life time guarantee applies only to manufacturing or material defects, conditional on the one-time correct installation of the product.

It does not apply to:

- Inappropriate use or accidental damage.
- Damage or defects that result from incorrect installation.
- Lack of maintenance including the build up of grime or damage resulting from inappropriate cleaning.
- Damage or defects that result from repairs or modifications undertaken by unauthorised persons.
- This guarantee excludes general wear and tear through usage and does not apply to surface finishes.

What to do if something goes wrong?

If you have a problem with this product, please contact your local installer. If this does not resolve the issue, contact the AKW Technical Enquiries who can provide further advice and, if necessary, arrange for a maintenance engineer to visit and report any issues. See the T&Cs on our website or catalogue for further information. None of the foregoing affects your statutory rights.

© AKW Medi-Care Limited 2021 07-005-012-02