

# About the heating in your home...



## **What is a Room Thermostat?**

A **room thermostat** controls the temperature at which your heating system operates. This will help you save energy by cutting down on wasteful overheating.

**1°C lower = 10% saving on your fuel bill**

## **How does the Room Thermostat work?**

The room thermostat controls the heating in your home by keeping it at the temperature you have set. The room thermostat switches off the heating when the room temperature reaches the required level, and switches it on again when the temperature drops. The heating will not come on if the room temperature is above the room thermostat set temperature.

## **Setting the temperature**

To set the room temperature turn the dial to the required position. A comfortable setting is usually between 18°C and 22°C.

## **Installer Details**

**Danfoss Ltd**

Amphill Road, Bedford, MK42 9ER, T: 0845 - 1217 400, F: 0845 - 1217 515

**[www.heating.danfoss.co.uk](http://www.heating.danfoss.co.uk)**