


- 1 - B 961716 XX
- 2 - B 960473 XX
- 3 - B 961438 XX
- 4 - B 961374 NU
- 5 - A 861181 NU
- 6 - B 961491 NU
- 7 - E 960059 NU
- 8 - B 961946 XX
- 8a - A 961625 XX
- 9 - B 961726 NU
- 10 - A 962991 XX
- 11 - B 961119 XX
- 12 - B 960845 NU


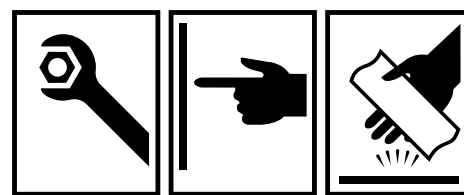
















06.2024 / B565154

The diagram illustrates the 6-step process for replacing the faucet cartridge:


1. Remove the top cap.
2. Remove the O-ring.
3. Remove the cartridge.
4. Insert the new cartridge.
5. Tighten the O-ring.
6. Reinstall the top cap.

A warning icon indicates not to over-tighten the O-ring.

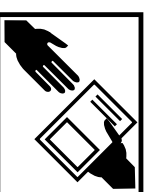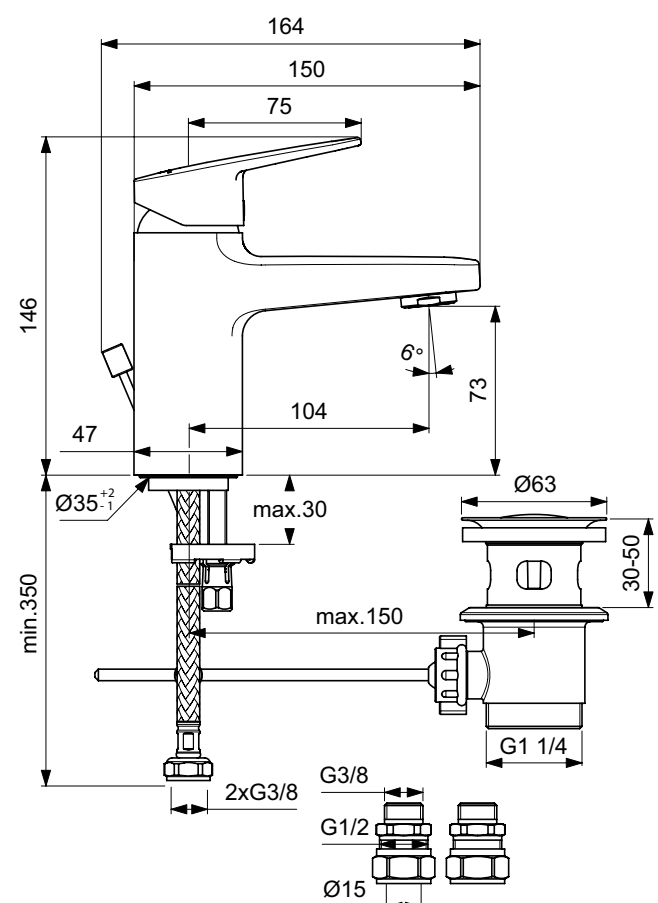

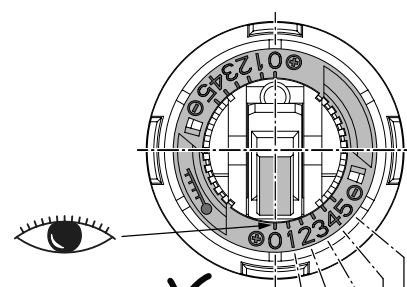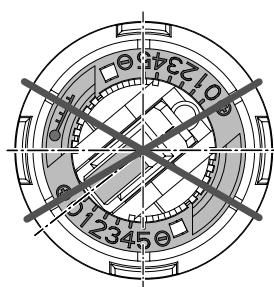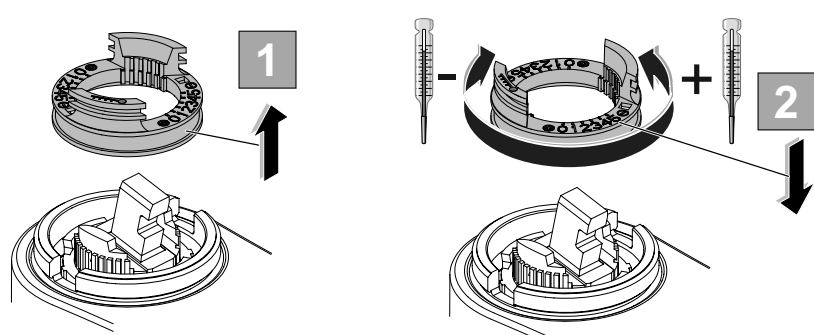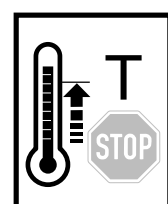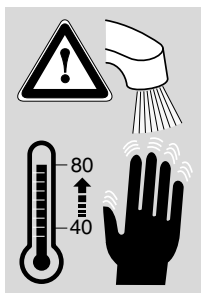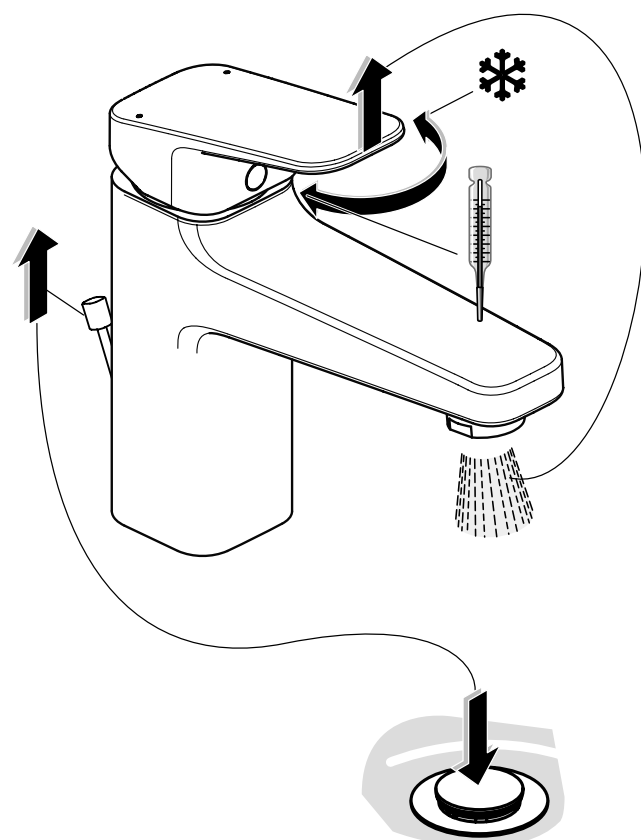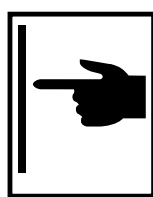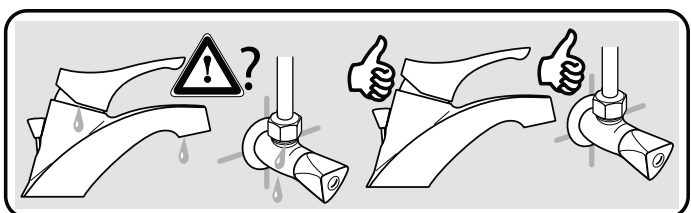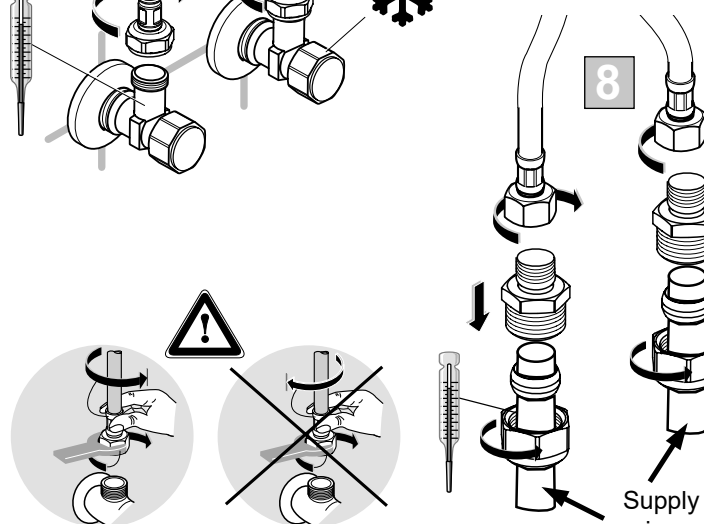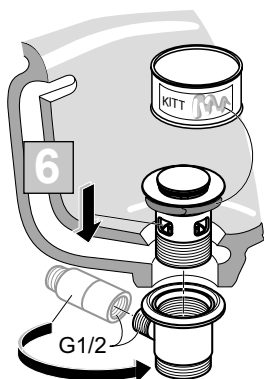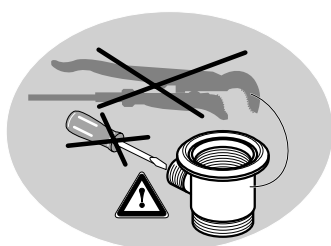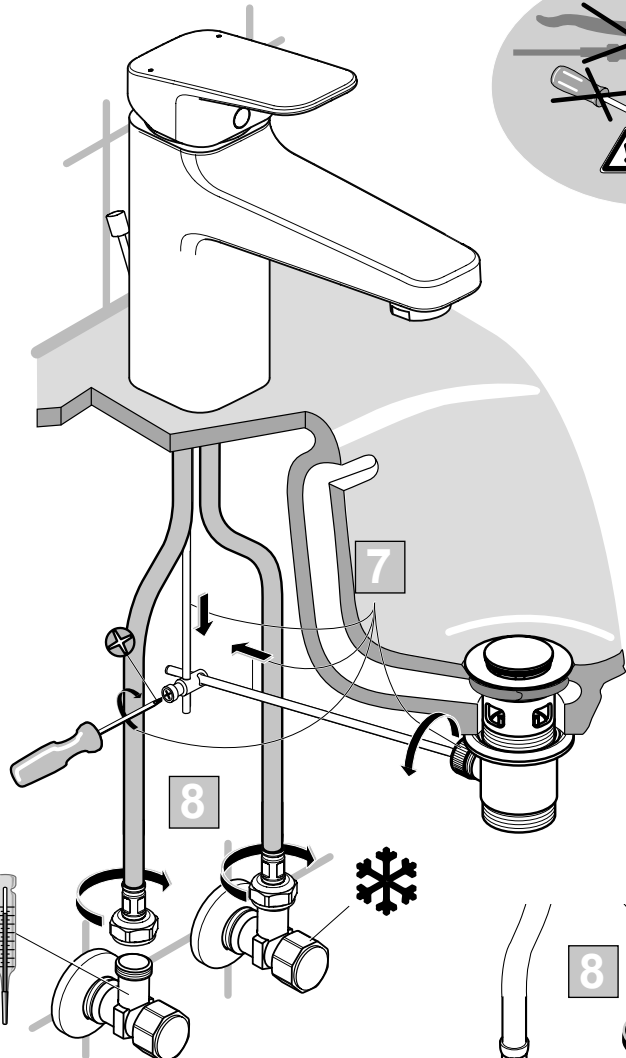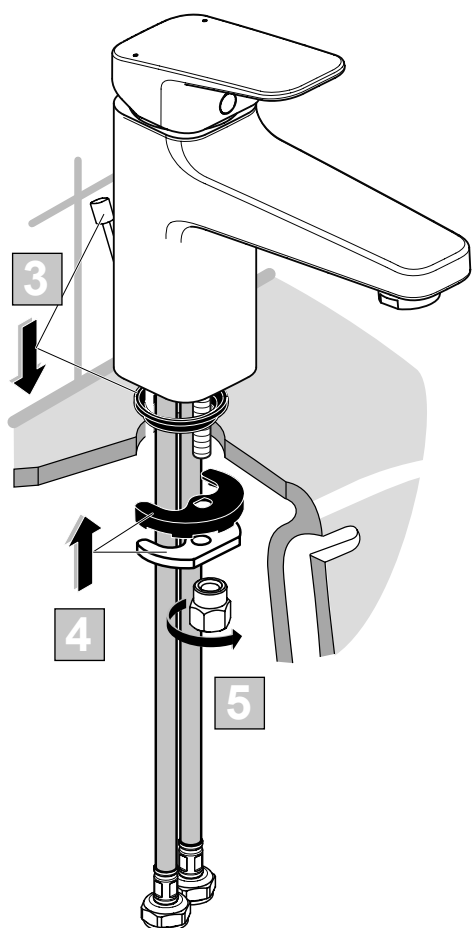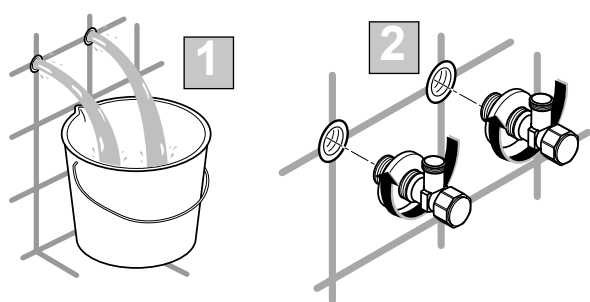

 P 0,3 MPa 3 bar			0	1	2	3	4	5
			°C	°C	°C	°C	°C	°C
	50°C	15°C	50	49	44	40	35	33
	65°C	15°C	65	63	57	50	44	40
	85°C	15°C	85	83	74	64	56	50

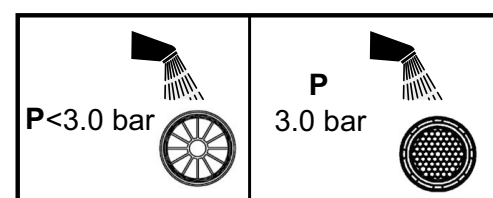

 P	bar	 0,2	 5		 Q (3 bar)
 T	°C	 MAX. 80	 65		