
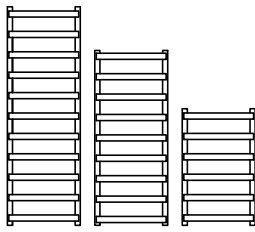
 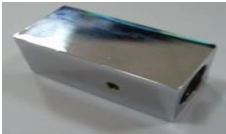



FLORA


INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

DESCRIPTION	ILLUSTRATION		DESCRIPTION	ILLUSTRATION
	 1500 1200 800 Radiator x1		Fixing choose the appropriate fixing for the wall material if required	
Brackets x4	 		PTFE tape	
Wall Anchors x 4			Electric drill	
Washers x4			Masonry drill bit appropriate to the fixings	
Fixing Screws x4			Adjustable spanner	
End plug x1			Radiator valve hex key	
Security Screws x4			Flat head and philips head screw drivers	
Air vent x1			1 lock shield valve and 1 gate or thermostatic valve	
			Spirit level	
			Measuring tape	

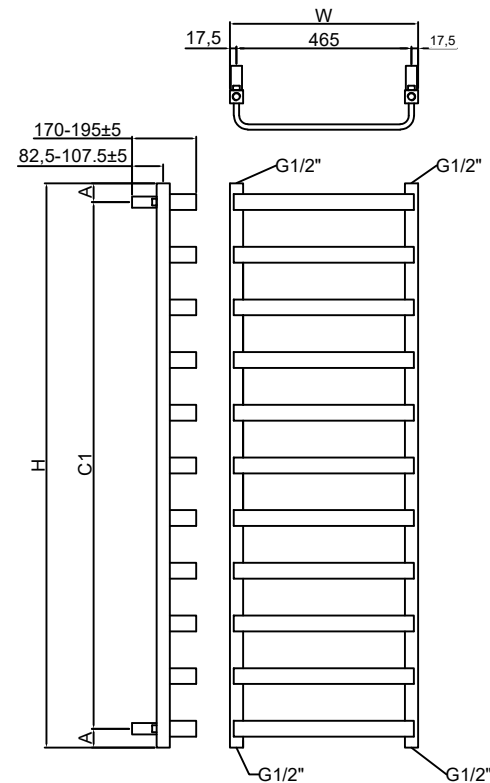

HEIGHT H	WIDTH W	CONNECTION AXIS C1	(A)
800	500	700	50
1200	500	1120	40
1500	500	1420	40

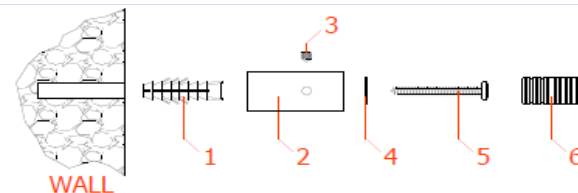

A The radiator should not be mounted closer than 50mm below any overhanging surface (i.e. shelf) and no lower than 100mm from the floor. Transfer the bracket drill position measurements to the wall.

B Drill the wall and insert wall anchors (1) (or other suitable fixings).

C Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).

D Screw the brackets (6) onto the nuts welded on the back of the radiator.

E Insert brackets (6) into the brackets (2) and tighten the security screws (3)

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.