




How to choose the right TRV for a LST Standard radiator

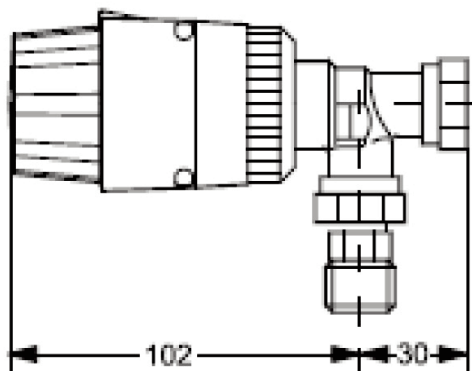


The valve should always have a 90° body.

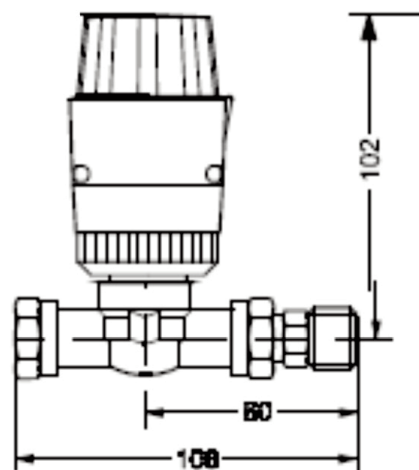

The valve on this TRV is straight.

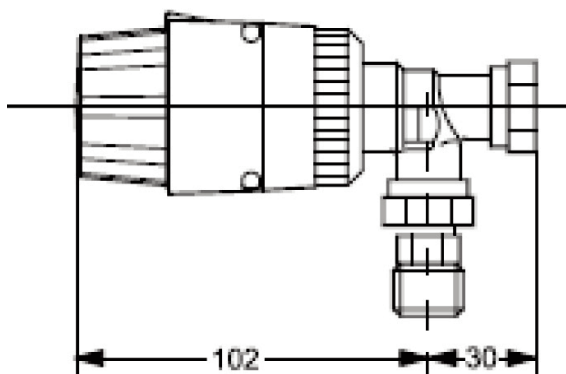

The TRV head and tail centres should be in line.

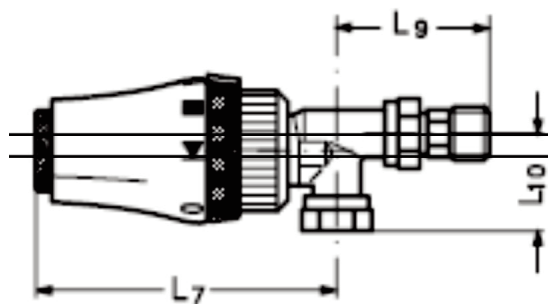

The TRV head and tail centres are not in line in this valve.






The valve must be bi-directional with the tail fitted in line with the TRV.



The valve and the TRV fitted at right angles.

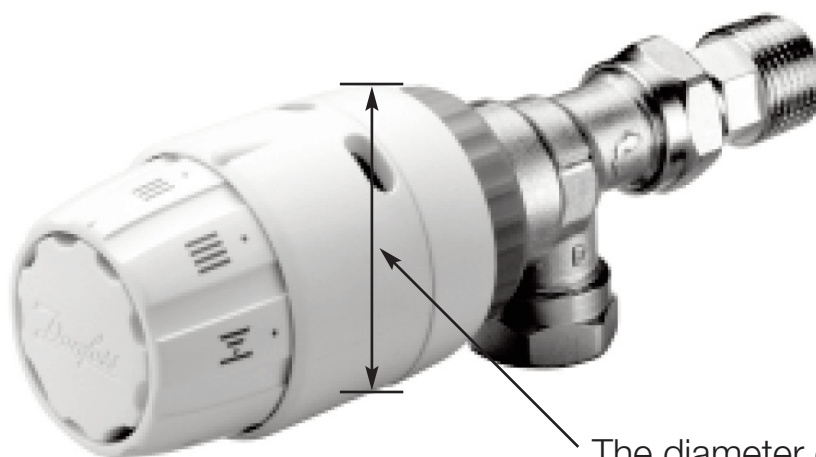

The diameter of the TRV head must be 50mm MAX