

## Customer/technical services

For any technical or installation queries please contact Vado on 01934 745163.

## Guarantee

This product is guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown below.

### The guarantee is only valid if:-

1. The product has been installed, used and maintained in accordance with Vado's instructions and subjected to normal use only.
2. The defect is not due to use of an unsuitable or inadequate water or power supply.
3. The defect is not due to accident, misuse, neglect or repair other than by Vado or Vado authorised agents or damage caused by foreign objects or substances.
4. We have received from you the completed Guarantee Registration Form. Vado accepts no responsibility for any forms lost in the post and returns by registered means is therefore recommended.

Under this guarantee (which is non-transferable) Vado will, at its option, repair or replace free of charge any product (or replacement part) found to be defective. The guarantee does not extend to any consequential loss or damage. After repair or replacement the relevant guarantee period will be calculated from the original date of purchase.

### The relevant guarantee periods are:-

1. Twelve years on chrome finish products.
2. Six years on Vado Identity products.
3. Three years on all other products with the exception of Stuart Turner Pumps which carry a 2 year Guarantee on Monsoon Range and 1 Year Guarantee on Showermate Range.

All claims under the guarantee must be submitted in writing to the person who supplied the product to you and must be received no later than the last day of the relevant guarantee period. All claims must be accompanied by proof of purchase (sales receipt or delivery note).

Vado operates a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice.

This guarantee is in addition to and does not affect your statutory rights as a consumer.

### Vado


Wedmore Road, Cheddar, Somerset, England BS27 3EB  
tel 01934 744466. fax 01934 744345  
technical@vado-uk.com  
www.vado-uk.com

### GUARANTEE REGISTRATION

NAME				
ADDRESS				
	POSTCODE			
RETAILER				
ADDRESS				
	POSTCODE			
PURCHASE DATE	ARTICLE NUMBER	(SEE BOX)		
PRODUCT DESCRIPTION				
WHO INSTALLED THE PRODUCT?	RETAILER	PLUMBER	BUILDER	SELF
FOR VADO USE				



## Installation & maintenance instructions

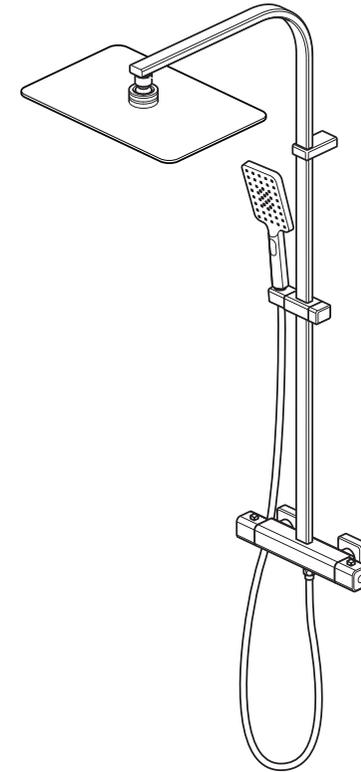

# phase

exposed shower mixer with kit

Please leave these instructions with the customer

## Important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing (BS8558) Regulations.

We strongly recommend that you use a qualified and registered plumber.

Installer must comply with current regulations.

Before making any inlet pipe connections, all supply pipes MUST be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit. Water Supply (Water Fittings) Regulations 1999 Schedule 2 Section 13.

This product has single check valves fitted on the hot and cold inlets. However, depending on the installation set up, additional check valves may be required. Please check with the local water undertaker if you are uncertain.

Operating pressures (on hot and cold line) should be kept as balanced as possible in order to assure optimum efficiency.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.

## Care of the mixer

Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.

We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of ALL cleaning products i.e. powders and liquids.


If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.

## Maintenance

To remove any build up of limestone on the shower head and handset, just rub your fingers lightly over the nozzles.

## Operation

In the off position. Turning the handle forward will operate the fixed head, and turning the handle backwards will operate the handset.

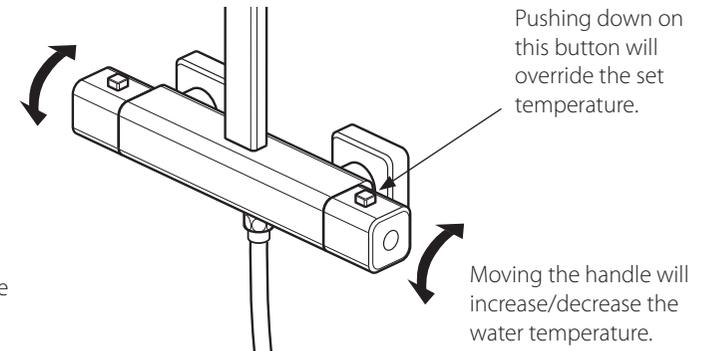

## Maintenance

This thermostatic valve is fitted with a double filtering facility. Filters are fitted on the water inlets and on the thermostatic cartridge.

Depending on the water quality, filters may become dirty, causing reduced flow and inefficient working of the valve.

Shut off the water supply to both inlets at the isolating valves.

### Inlet Filters.

Undo both locking nuts at the back of the valve and remove from the wall. Remove the filter and washer, rinse in water to remove the dirt, and then soak them in vinegar or descaling agent.


### Cartridge Filters

To clean the filters, you must first remove the cartridge from the housing.

Removing the Cartridge

1. Remove the handle (see temperature resetting).
2. Unscrew the grub screw on the underside of the body and pull out the cartridge.
3. Clean the filters by rinsing them in water to remove the dirt and soaking them in vinegar or descaling agent.
4. Before reassembling the cartridge, clean its housing with a wet cloth and grease the 'O' rings on the cartridge.
5. Reassemble the cartridge into the body aligning up the hole in the cartridge with the grub screw, then place the plastic stop ring onto the cartridge with the stop at the 12 o'clock position.
6. Make sure everything is tight and secure and turn on the water supply at the isolating valves.
7. Now check the water temperature (see temperature resetting).
8. Ensure that the stop on the stop ring is at 12 o'clock and replace the handle with the temperature override button also pointing at 12 o'clock being careful not to turn the spline of the valve.
9. Secure the handle.

## Temperature resetting

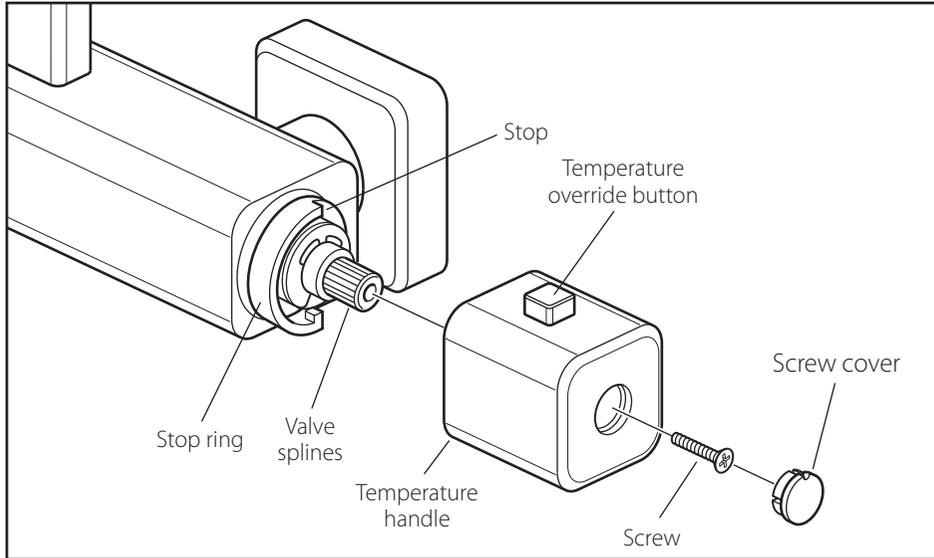

The valve has been factory set under balance pressures and hot water supply at 65° C. When your specific operating conditions are significantly different from the above, the temperature of the water may vary from the setting.

When the difference is too great, you can adjust the calibration of the valve to suit individual requirements of the installation:


**Note: mixed water temperature at terminal fitting should never exceed 46°C**

1. Select 38° C on the handle and check the temperature of the water being delivered to the outlet with a thermometer.
2. If the temperature is unacceptable proceed to reset the calibration as follows: Remove the temperature control handle by prising off the screw cover, removing the screw and pulling off the handle (do not remove the plastic stop ring). Turn the spline of the valve clockwise to decrease the temperature and anti-clockwise to increase the temperature until 38° is achieved.
3. Ensure that the stop on the stop ring is pointing at 12 o'clock, replace handle with the temperature override button pointing at 12 o'clock being careful not to turn the splines of the valve.

The valve setting is now calibrated to suit your requirements.

Replace the handle.

## Dimensions

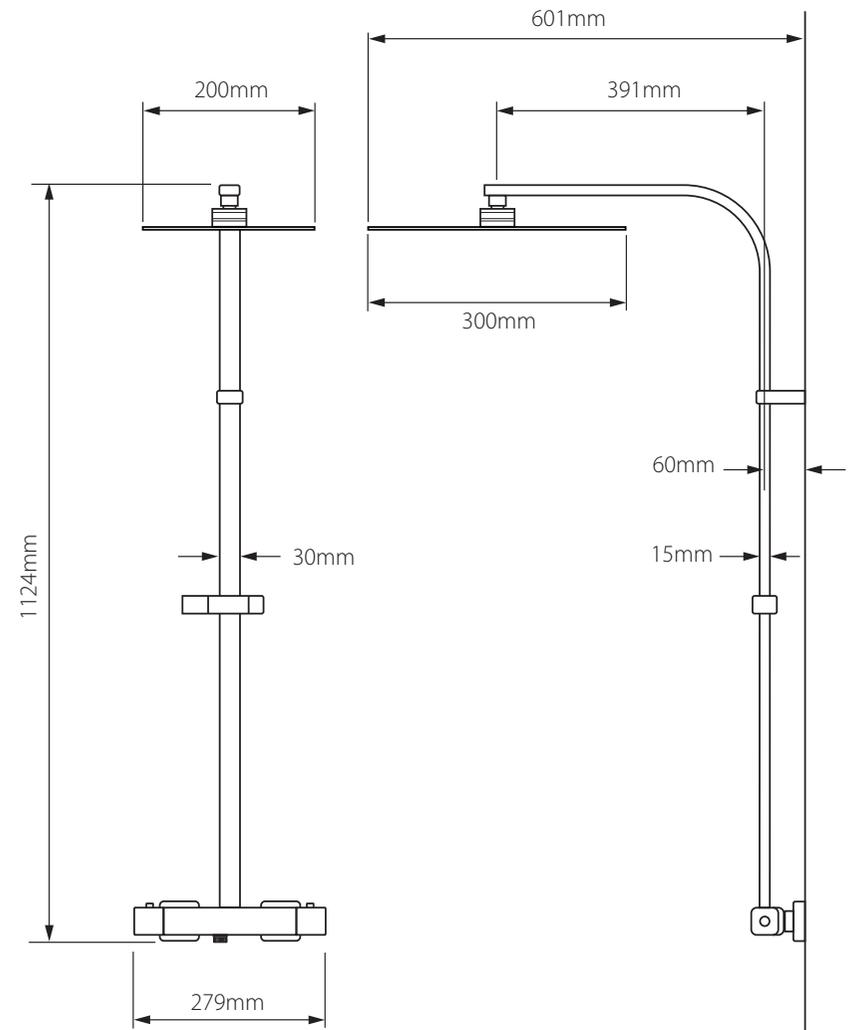

## Operating Specifications

### Hot Water Supply Temperature:

Maximum: 85° C


Minimum: 10° C higher than the maximum required mixed temperature (advise 65° C)

### Operating Pressure:

Minimum operating pressure 1 bar

Maximum operating pressure 5 bar

## Installation - valve

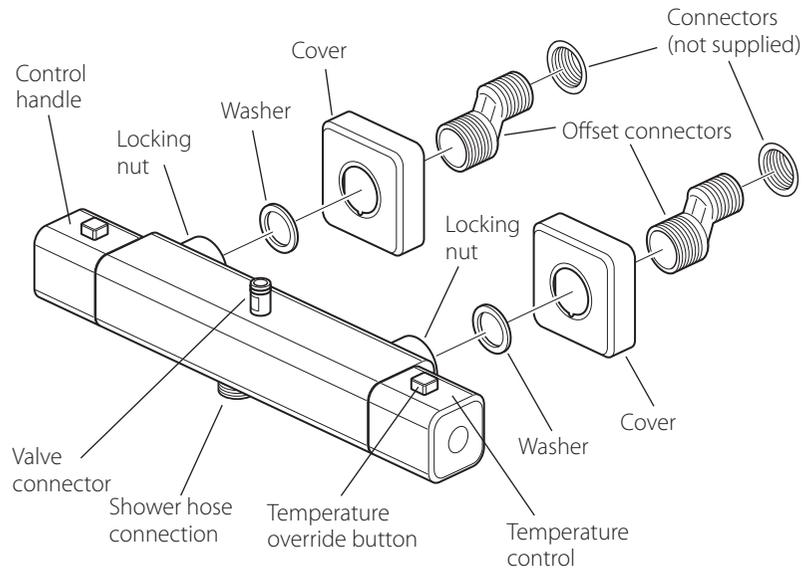

**Warning!** Please check for any hidden cables and pipes before drilling holes in the wall.

**Note:** The valve must be connected to rigid pipe work for support.


Before installing your new mixer, flush through the pipe work to ensure removal of debris, turn off the water supply.

Prepare the wall with 2 flush ½" connectors at 150mm centres. Connect the water supply to the inlet pipes. The hot water should be connected to the left hand pipe. Screw on the 2 offset connectors followed by the covers.

Place a washer in each of the locking nuts on the valve and screw onto the connectors, some adjustment can be made to the offset connectors to align the centres and level up the valve.

## Installation - riser

Temporarily push the riser assembly onto the valve connector, being careful not to damage the seals. With a pencil mark around the support bracket. Remove the riser rail. Place the mounting bracket centrally within the marked position and mark the screw hole.

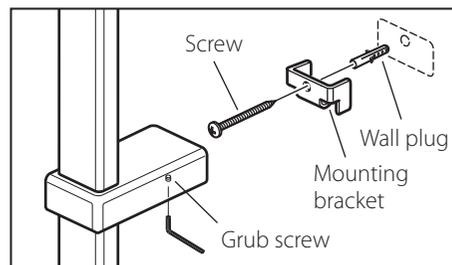

## Installation - riser


Fix the mounting bracket in position using the supplied wall plug and screw.

Push the riser rail assembly onto the valve connector being careful not to damage the seals.

Push the support bracket onto the mounting bracket and secure from underneath with the hexagonal grub screw using the supplied allen key.

At the bottom tighten the grub screw at the back of the riser to secure the riser to the valve.

Finally, make sure the rubber washer is positioned in the shower head and screw onto the riser.

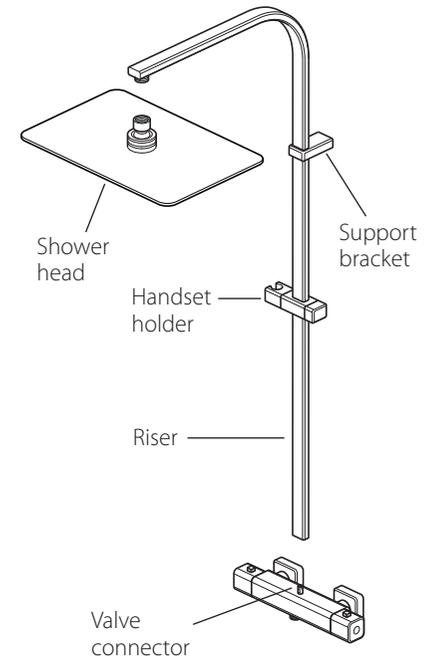

### Handset

Place one of the rubber washers into the cone end of the hose and screw to the handset, slot the cone into the handset holder on the riser. To adjust the height of the handset holder turn the holder handle 90 degrees, move to the required position then return the holder handle to original position.

Place the second rubber washer into the nut end of the hose and attach it to the underside of the valve.

### Operation

The handset has 3 different spray patterns. Press the button on the handle to select the required spray pattern.

