

DUCHY

WADEBRIDGE WALK IN SHOWER ENCLOSURES


FITTING INSTRUCTIONS

IMPORTANT CHECK LIST

PLEASE ENSURE

- The walls are reasonably flat and that the shower tray is level
- There is no pipework or cables behind walls where drilling
- Shower door is correct size door for tray(see measurement below)
- There is no visual defect on door(as claim will not be accepted after installation)
- Proper fixings used if cavity wall or other

TRAY Size	Dimension A Min-Max	Dimension B Min-Max
1445*910	1425-1440	890-905
1410*810	1390-1405	790-805

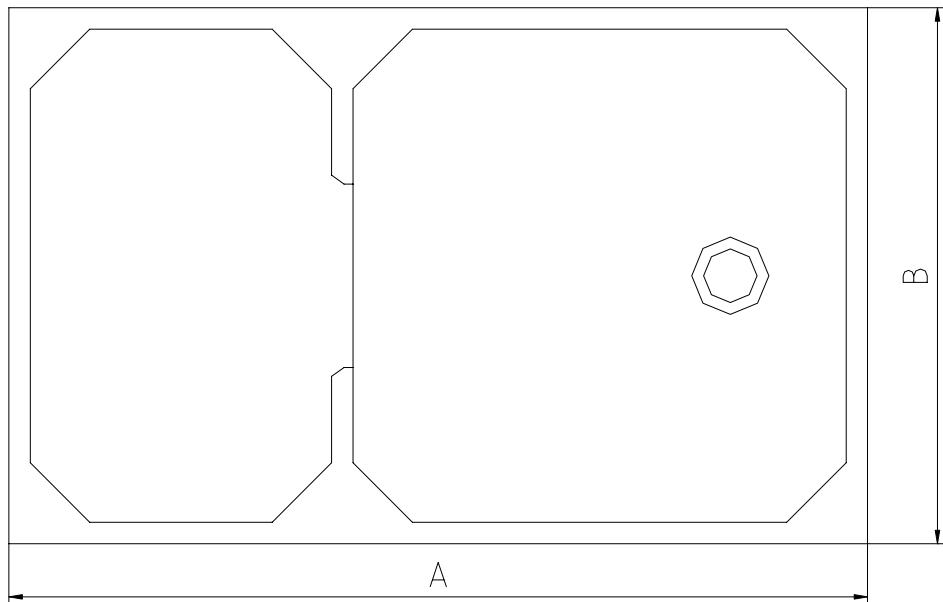

INSTRUCTION MANUAL

Inspect door after opening

Please read instructions carefully, check amount of accessories and whether the shower door is in good condition and if there are any problems contact your supplier or our company.

