


SHOWER SEAL

Visit us at
www.showerseal.co.uk

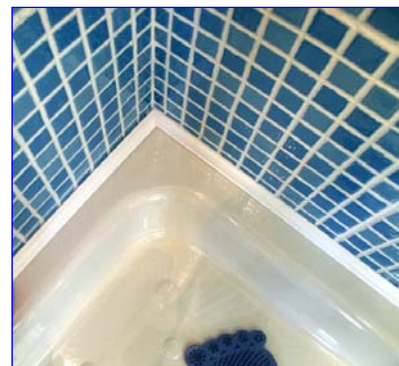

Suitable for all shower trays with maximum Dimensions of 1m x 1.5m

Tools required to complete the installation.





- Stanley Knife or similar
- Stanley scraper or similar
- Junior hacksaw
- Tape measure
- Sealant gun
- Kitchen roll to wipe fingers



All above are available as a kit from your ShowerSeal supplier.

Installation instructions

- Clear away old sealant from shower tray with knife and scraper and carefully measure internals of tray as per diagram opposite. Use the cleaning wipe provided to clean the area where the profile will sit. (wall, tray, profile)
- Transfer the trays internal measurements to **ShowerSeal** profiles taking care **not to cut the shaped ends**.
- Cut the profiles to length and place them inside the shower tray to check they fit OK. They will fit over one another if fitted correctly.
- Remove the profiles and take the sealant with the **large nozzle** and infill the edges of the tray with sealant. It is important that enough sealant is used to completely fill the gaps between the tray and wall.
- Apply sealant to each end of the profiles before fitment. This will ensure no water can sit in the corners of the tray when in use.
- Place the profiles one by one into the wet sealant.
- **Gently** push the profile into place onto your shower tray.
- Immediately wipe away with your finger any excess sealant that has squeezed out from above or below the profile.
- Change the coarse sealant nozzle to the **fine nozzle** and infill carefully the top and bottom edges and corners of the newly installed profile.
- Once complete, wipe with a wet finger to smoothe the sealant and remove any excess. This operation ensures a complete seal and once done there is no where for the water to sit on the profile.
- Leave for two hours minimum and **ShowerSeal** is ready for use.

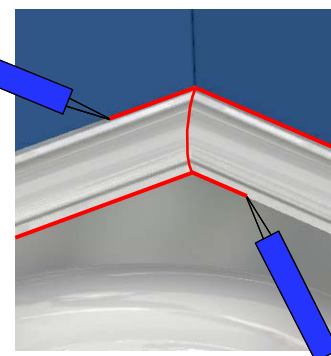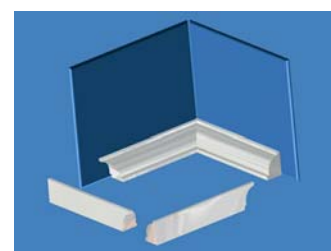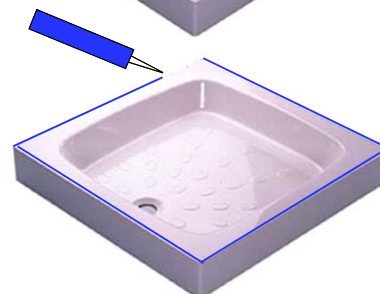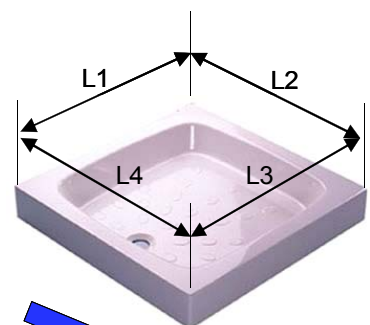

See our website for more installation pictures - www.byretech.com

Note. Byretech recommends that all black mould in the bathroom is removed prior to fitting its products.



Byretech Ltd

The Bathroom Water Damage Prevention specialists

Byretech Ltd
Unit 49 Padgets Lane, South Moons Moat,
Redditch, Worcestershire B98 0RD UK.
Phone: +44 (0) 1527 522 522 Fax: +44 (0) 1527 522 111
E-mail: info@byretech.com Web: www.byretech.com