

AKW MEDI-CARE SHOWER ENCLOSURES

THRESHOLD FOR WET FLOOR AREAS

IMPORTANT

IT IS ESSENTIAL THAT THIS THRESHOLD SYSTEM IS FITTED TO A LEVEL AREA AROUND SHOWER (see plan below) SO THAT DOORS AND/OR PANELS CAN BE FITTED ONTO THRESHOLD LEVEL AND POSTS CAN BE FITTED ONTO THRESHOLD PLUMB. PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE COMMENCING INSTALLATION

PARTS LIST

ITEM	QTY	DESCRIPTION
1	1	Threshold Section L.H.
2	1	Threshold Section R.H.
3	1	Plastic Corner Piece
4	2	Plastic End Pieces
5	2	Plastic Trims - Handed
6	7	No8 x 38 pan hd s/tapping screws
7	7	Plastic Plugs
8	2	Fixing Adaptors
9	2	No8 x 19 pan hd s/tapping screws
10	2	No8 x 16 csk hd s/tapping screws
11	2	No6 x 16 pan hd s/tapping screws

ITEMS 8, 9, AND 10 ARE USED IF VERTICAL POSTS AND/OR SIDE PANELS ARE TO BE FITTED TO THRESHOLD

ITEMS 8 AND 11 ARE USED IF DOUBLE ACTION DOORS ARE TO BE FITTED TO THRESHOLD.

FITTING INSTRUCTIONS

STEP 1

Place threshold sections (1) and (2) on floor with plastic corner piece (3) and end pieces (4) under threshold. Ensure that threshold sections are square and against walls, then mark off fixing holes, remove and drill into floor with a No.10 masonry drill and fit plugs (7).

See Fig. 1

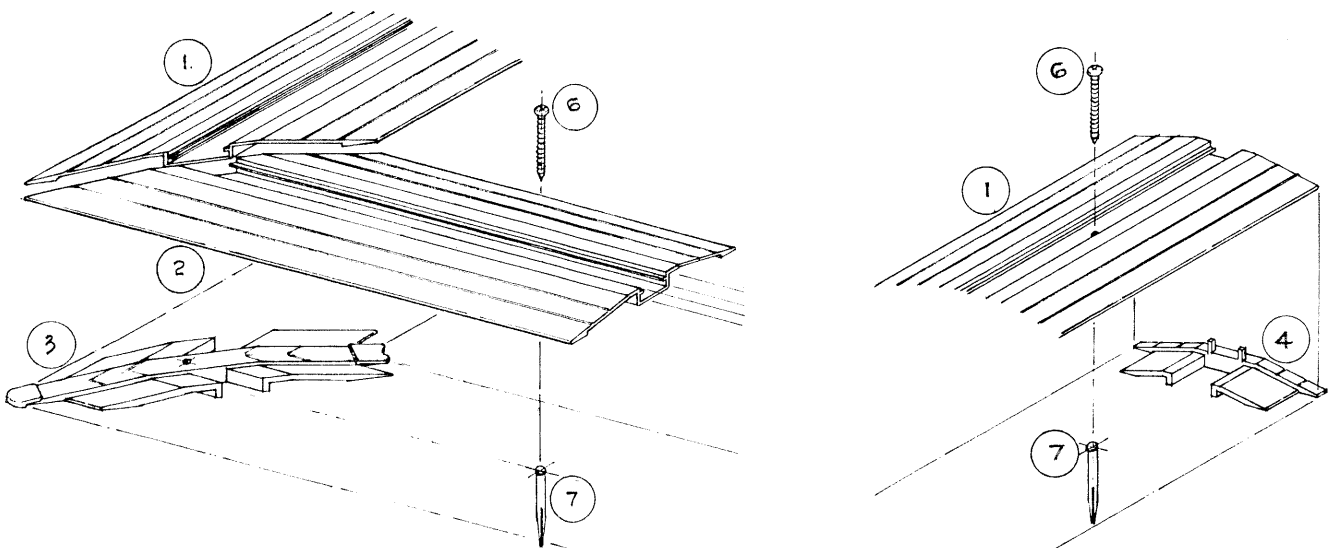


Fig. 1

BEFORE FIXING TO FLOOR READ THE FOLLOWING:

FITTING POSTS TO THRESHOLD

Screw post blocks [supplied with screen] to adaptors (8) with screws (9) and slide into threshold (1) or (2).

See Fig 2

FITTING SIDE PANELS TO THRESHOLD

Screw washers [supplied with screen] to adaptors (8) with screws (10) and slide into threshold (1) or (2).

See Fig 2

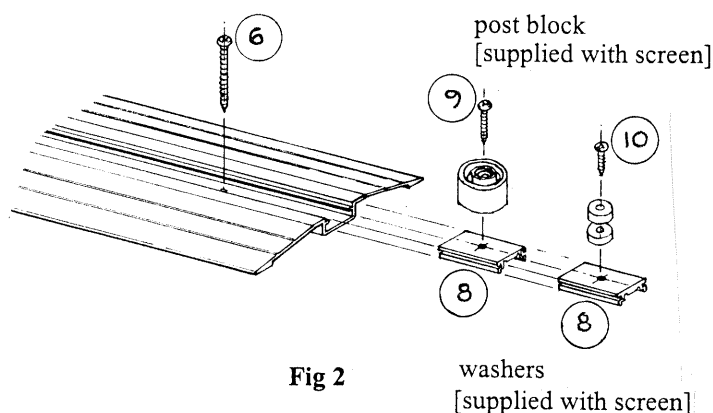


Fig 2

STEP 2

Apply silicone sealant to joints between thresholds and parts (3) and (4) and underside of threshold between floor, then fix with screws (6). Cut plastic trims (5) to size and clip into thresholds.

ENSURE THRESHOLDS ARE SEALED FOR FULL LENGTH AT JOINTS BETWEEN FLOOR

See Fig. 3

FITTING POSTS AT CORNER OF THRESHOLD

Screw post block [supplied with screen] to blind hole in plastic corner piece (3) with screw (9).

See Fig 4

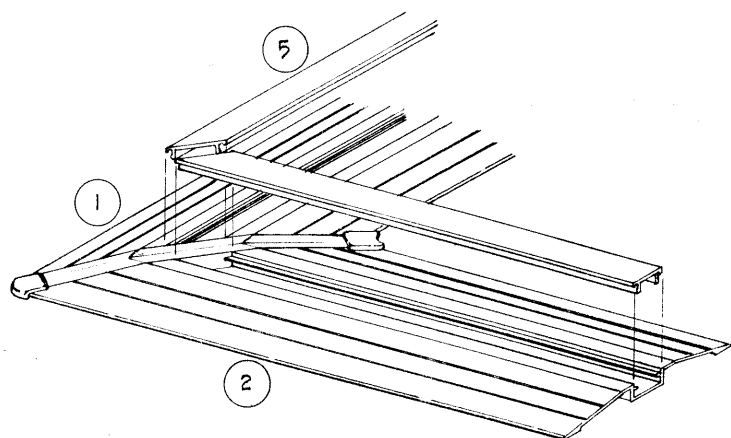


Fig. 3

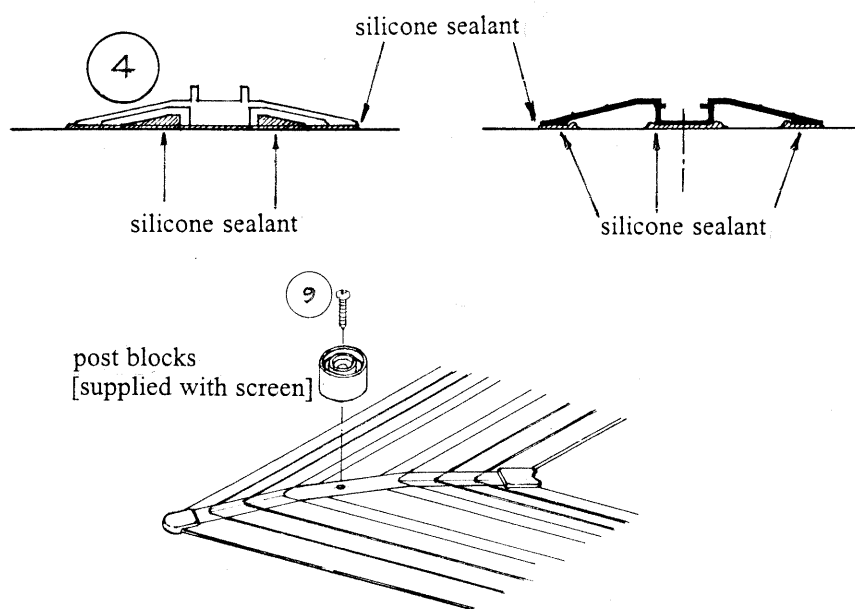


Fig 4

NB: WHEN FITTING DOUBLE SWING DOORS ONTO THRESHOLD SEE INSTRUCTION DOCUMENT NO. 148