



Options P/PW Shower Screens

INSTALLATION AND USER MANUAL

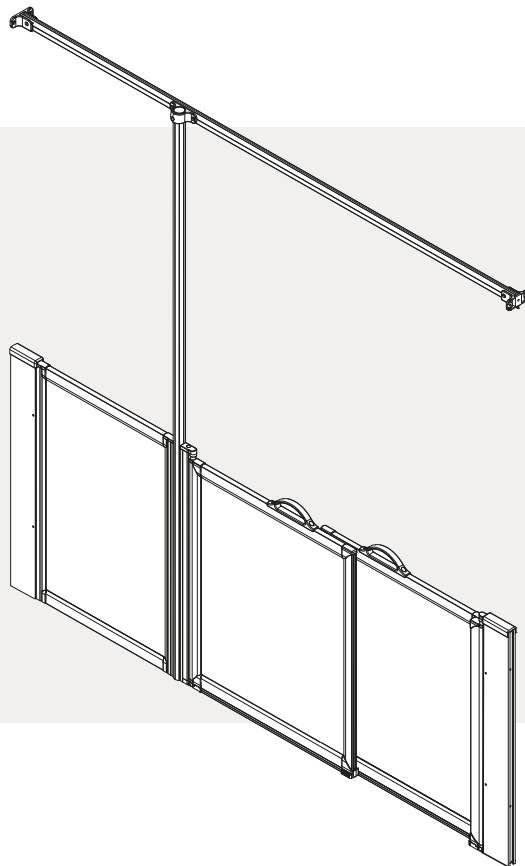

Please read all instructions before installation and leave this document with the end user for future reference as it contains important warranty information

Screen Options

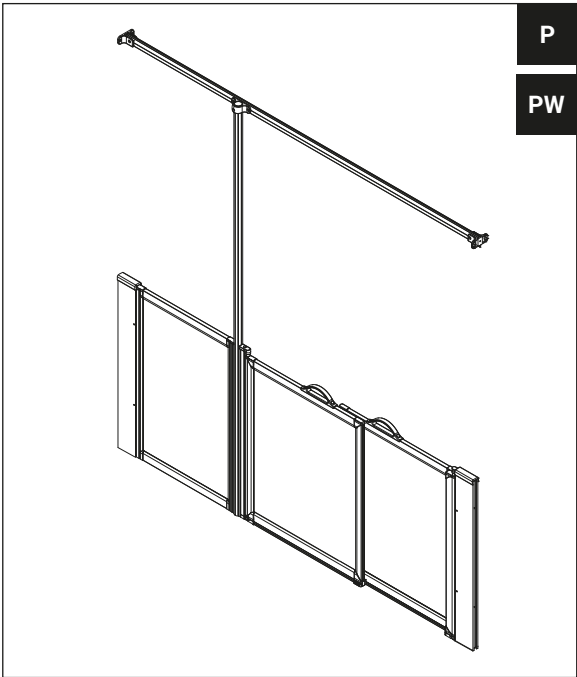


These screens can be fitted to normal trays and trays with integral or optional pipework ducts. The extra wide wall compensators are required for trays with pipework ducts.

Read the instructions to see how everything fits together. Determine the position of each element and its screw hole positions by way of a dry fit, but do not drill any holes until the positions are finalised.

1. Locating the Compensator


Remove the adjustment mechanism from the side of the compensator. Remove the plastic infill if present.

Place the compensator on the tray and push it up against the wall. Line the outside edge of the compensator up with the edge of the tray. The slots in the compensator for the adjustment mechanism should be on the inside of the showering area.

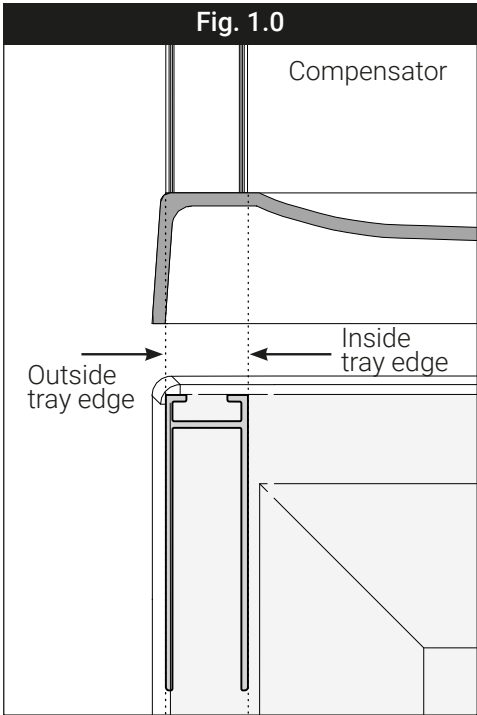


2. For Altro/Safety Flooring

Trim the corner blocks to suit the curve of the wet floor. File or sand the trimmed edges down to leave a smooth finish.

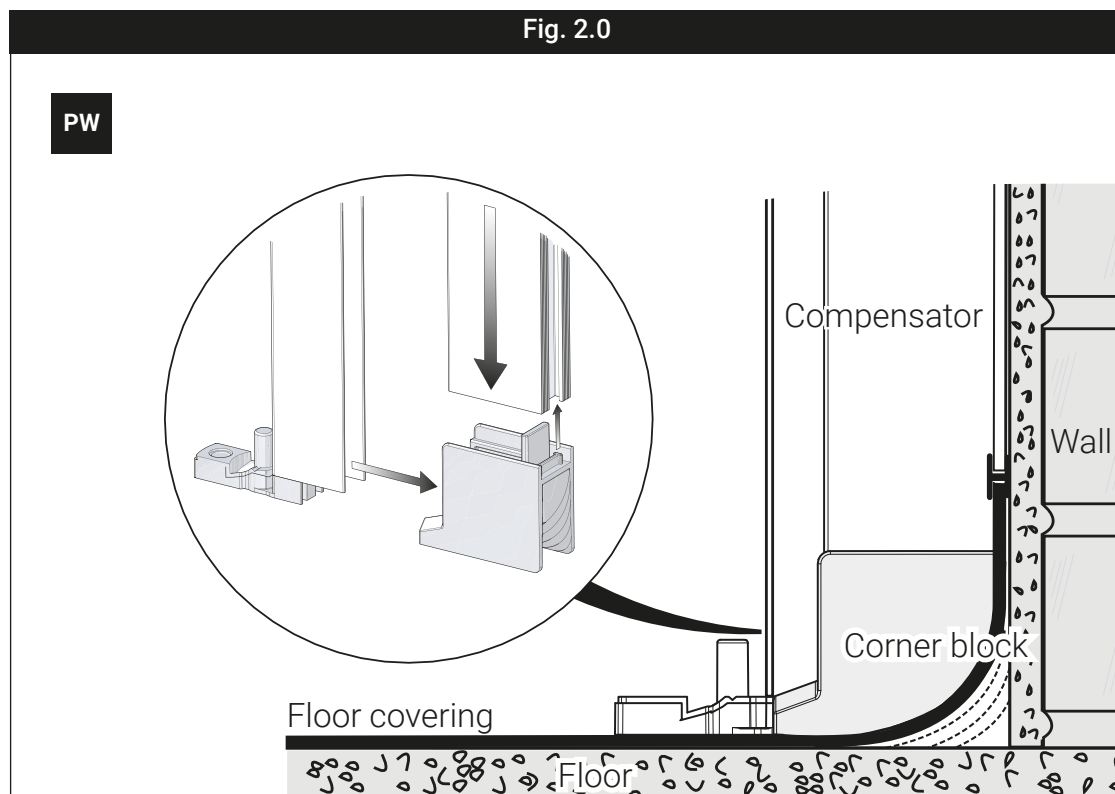

3. Installing Compensator to Wall


With the wall compensator positioned correctly, mark the hole positions on the wall. NB, seat the compensator on the corner block for wet floor installations. Remove the compensator and drill the holes in the wall. Insert any wall plugs and replace the compensator. Screw the compensator to the wall with 4.2 x 38 mm pan head screws (No.8 x 1 1/2").

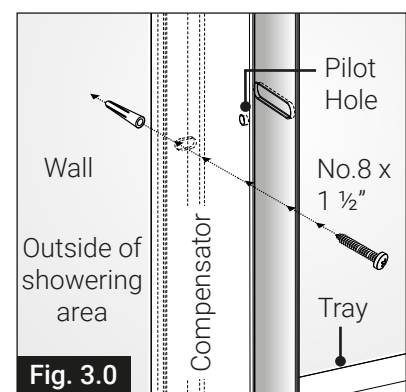

Installation

4. Mounting a Door or Panel to Compensator

Slide the door or panel into the compensator. Re-attach the adjustment mechanism and loosely tighten the clamping plate using a 3.5 x 19 mm pan head screw (No.6 x ¾"). Note, illustrations viewed from inside of tray.

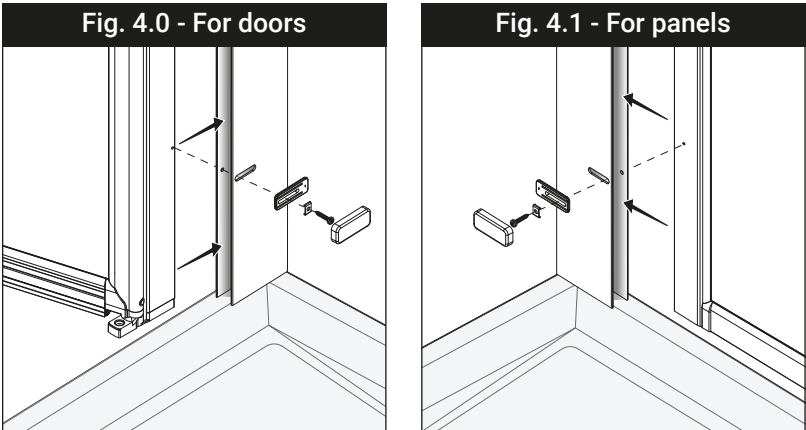

5. Installing Post

Note - different hole sizes for post block and bottom pivot

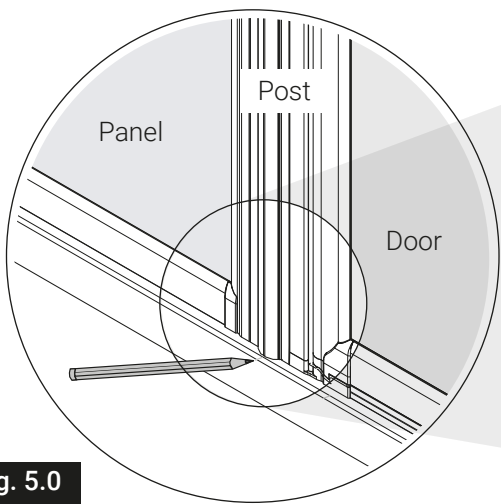


Fig. 5.0



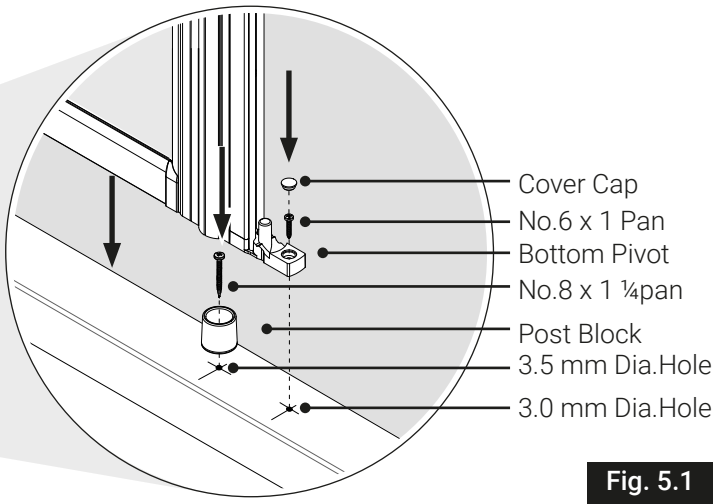


Fig. 5.1

Mark and drill the screw hole positions. NB, the holes are different sizes. Screw the post block down with a 4.2 x 32 mm pan head screw (No.8 x 1 ¼"). Replace the post and door, then screw the pivot block down with a 3.5 x 25 mm pan head screw (No.6 x 1").


6. Installing Inline Door, Hinged Door or Panel to a Post

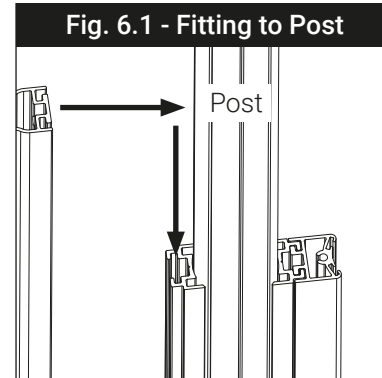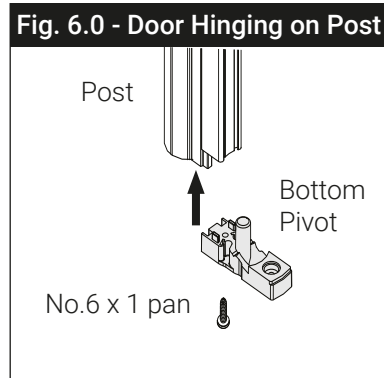

For a panel, overlap the extrusions and slide it down the post. For a door, apply a thin layer of clear silicone to the mating face of the bottom pivot block. Attach it with a 3.5 x 25 mm pan head screw (No.6 x 1") and then slide the door down the post.

7. Fitting Tops Caps to Door


Place the spring into the door. Screw the top cap down using a 3.5 x 25 mm pan head screw (No.6 x 1") and fit the screw cap.

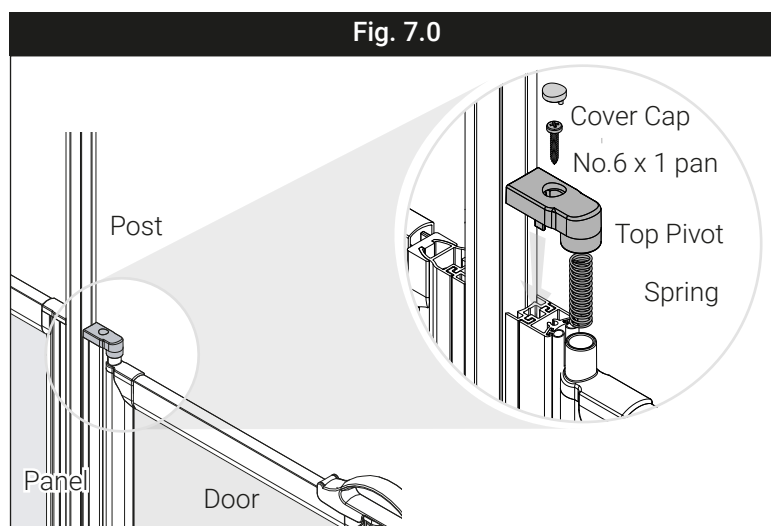

Installation



8. Installing Bottom Pivot

Drill a 3 mm pilot hole for the bottom pivot's screw and fasten using a 3.5 x 25 mm pan head screw (No.6 x 1"). Insert the screw cover cap.

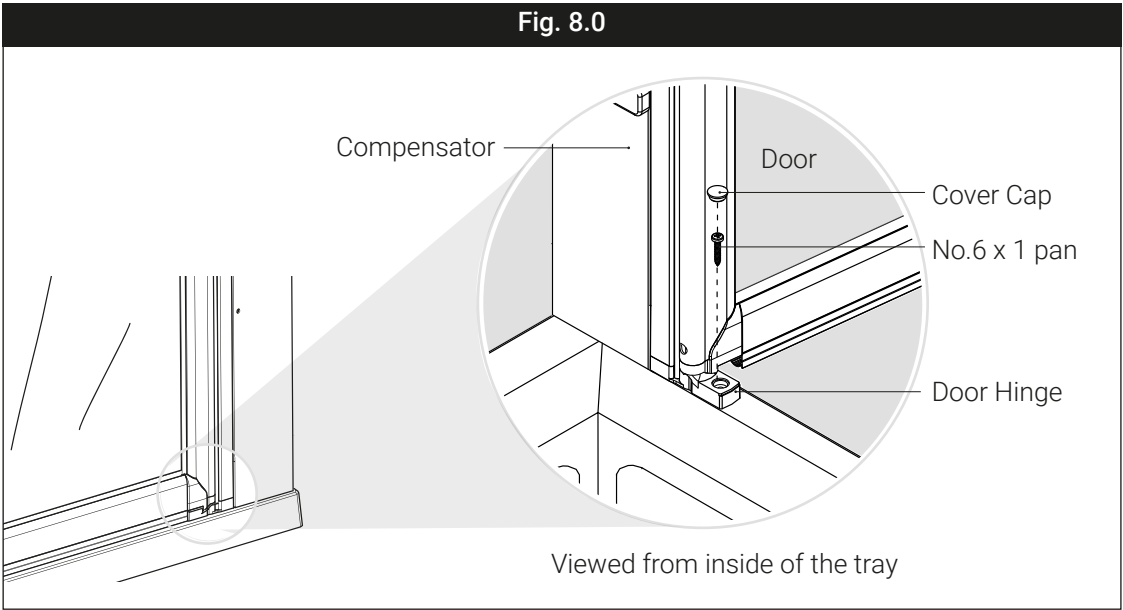


9. Adjusting Door or Panel Angle

The screen may need adjusting if the wall is not square with the floor. Adjust the screen so that the bottom seal is touching the tray along its full length.

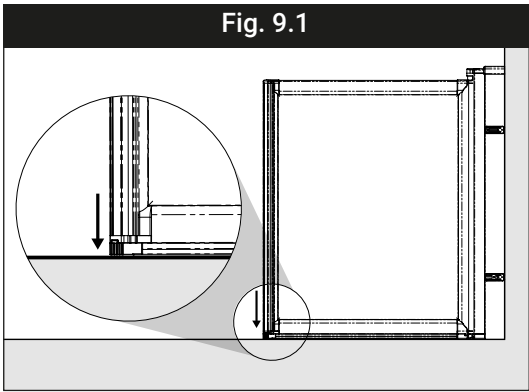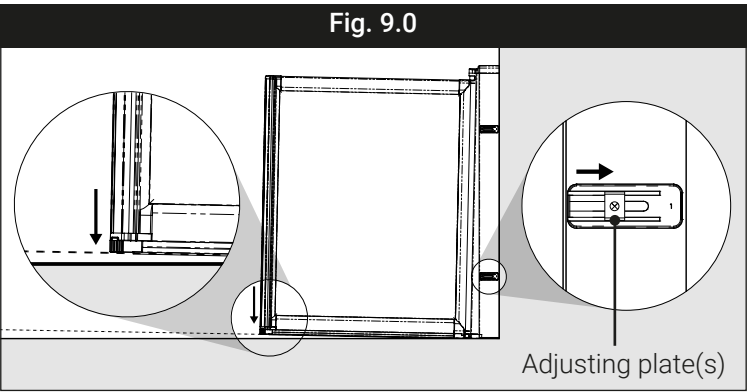


10. Securing the Door and Panel to the Compensators

Fully tighten the screws on the adjustment mechanism on the inside of the compensators. Drill a 3.5 mm pilot hole through the hole on the outside of the compensator. Insert a 4.2 x 13 mm pan head screw (No.8 x ½") through a folding screw cap and screw into the pilot hole.

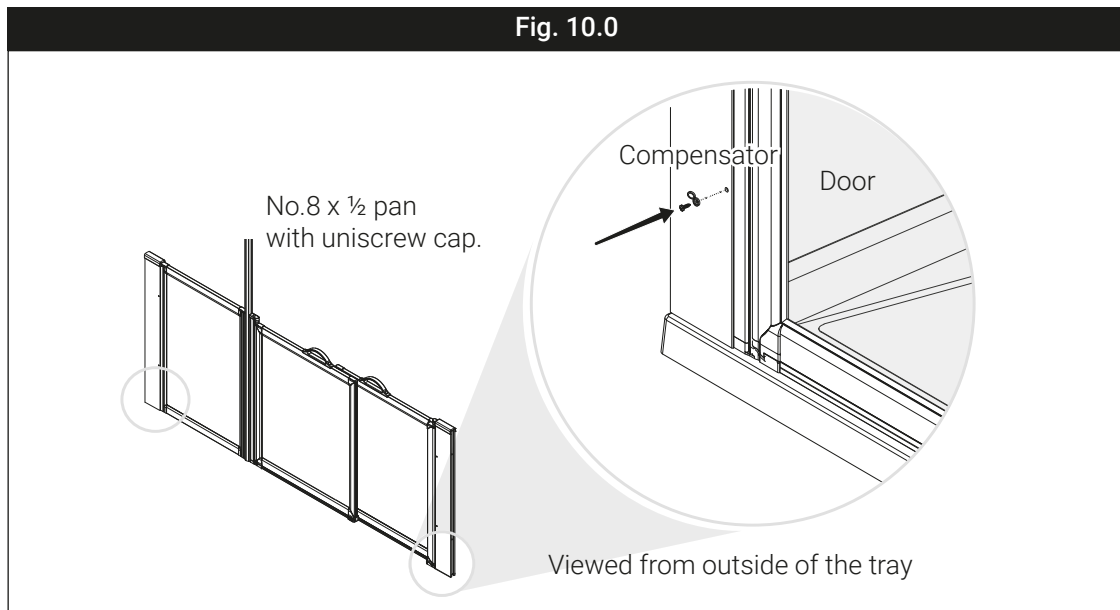

11. Fit all remaining Caps

Fit all panel stile caps and compensator caps.

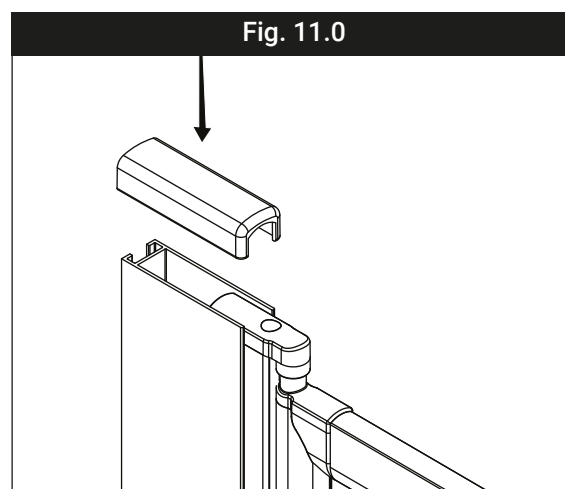


Installation

12. Waterproof Seal


On the outside of the screen, apply silicone sealant along the bottom of the compensator or corner block (for wet floors) and along the bottom of the fixed panel.

On the inside of the screen, apply silicone sealant up the side of the compensator. In general, Horizontally on the Outside, Vertically on the Inside.

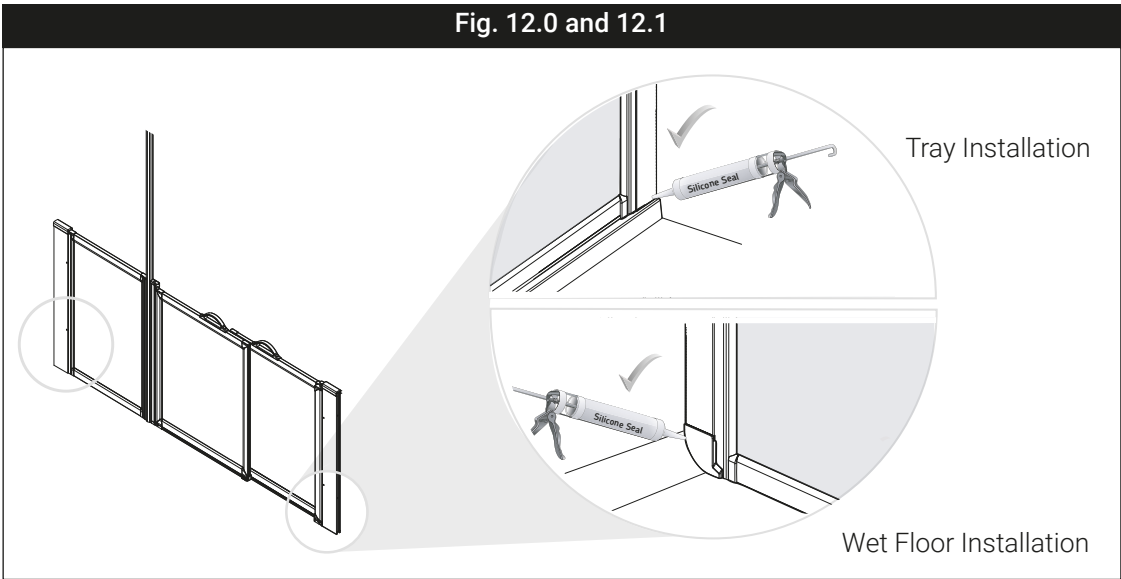


13. Positioning the Magnetic Closing Strip

Place the magnetic closing strip on the inside of the outer door in roughly the right position. Bring the doors almost to a close to verify the position of the closing strip. Once its position is set, drill 3 mm pilot holes into the rails through the hole in the part at each end. Remove the backing paper from the double sided tape and firmly press the strip onto the panel. Fasten the closing strip to the door using 3.5 x 16 mm countersunk screws (No.6 x 5/8").

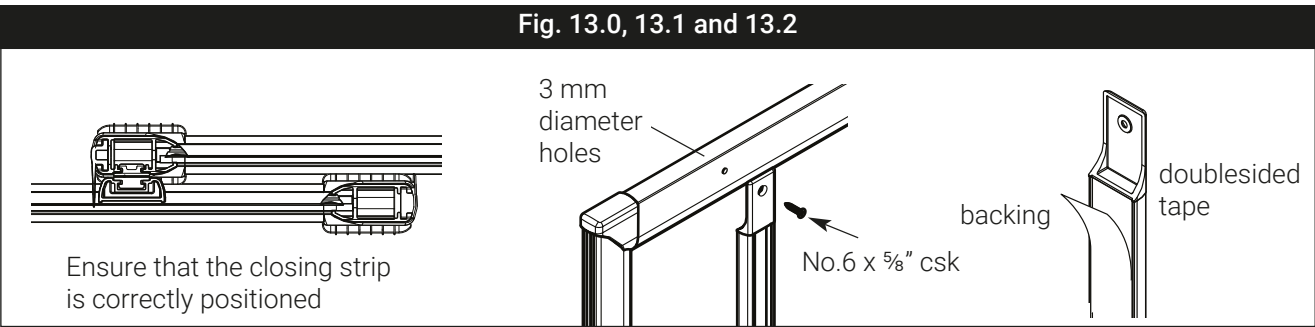

14. Fitting Door Handles


Drill 3 mm pilot holes for the handles and screw down with 3.5 x 9.5 mm pan head screws (No. 6 x $\frac{3}{8}$ "). Fit the screw covers.

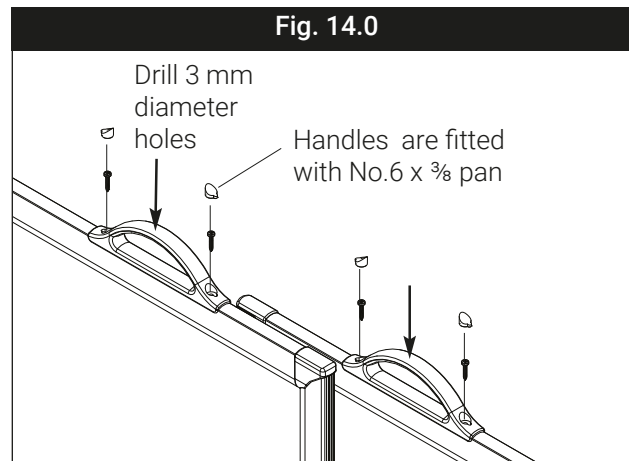

15. Curtain Rail


Curtain rails are supplied oversize and will need cutting to size. Fit the correct amount of hooks and gliders before installation.

Position the curtain rail to be just inside the screen. Mark the wall bracket's screw hole positions, drill, insert wall plugs, and fasten the bracket to the wall using 4.2 x 38 mm pan head screws (No.8 x $1\frac{1}{2}$ "). Attach the rail to the wall bracket with 4.2 x 13 mm pan head screws (No.8 x $\frac{1}{2}$ "). Insert the screw caps.

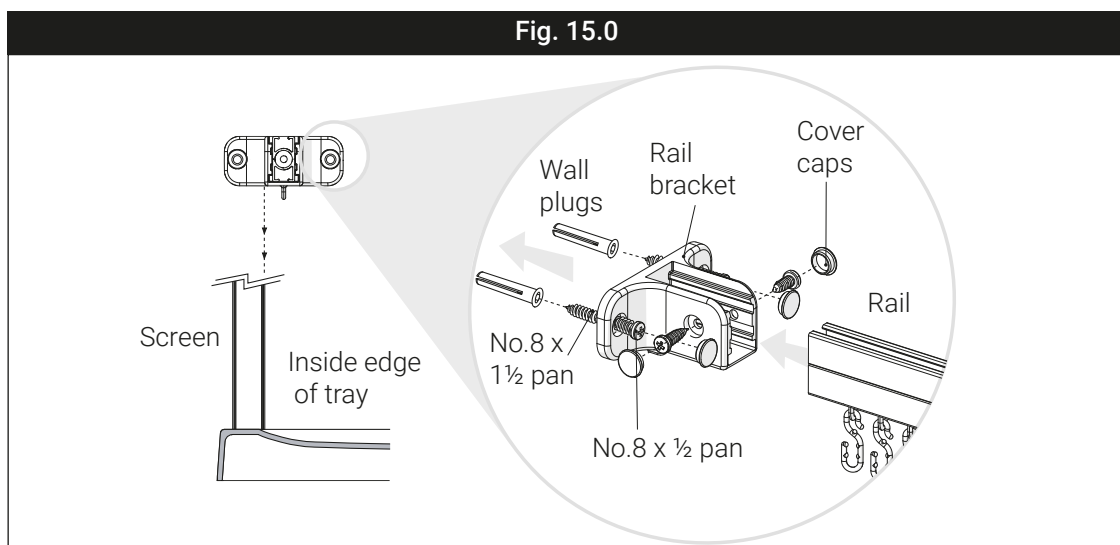

16. Secure Curtain Rail to Post

Slide the bracket onto the post, drill 3 mm pilot holes, and screw together using 4.2 x 13 mm pan head screws (No.8 x ½"). Insert the post cap and screw caps.

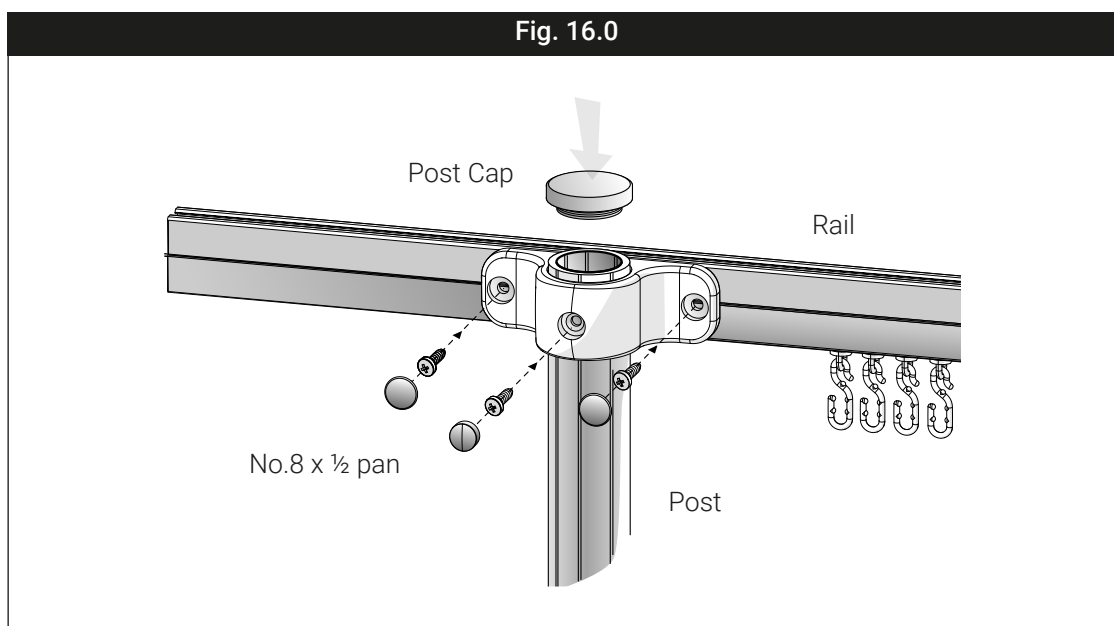

It is important to clean areas such as seals and keep moving parts clear from build up of grime and water deposits to maintain good working order. Dry with a towel to prevent new water spots from forming. Whenever possible always rinse down the screen, the shower, the shower rail and curtain after use to remove soap and any other deposits.

After cleaning, the user should always rinse with water and wipe thoroughly with a soft damp cloth to remove any cleaning material residues before drying off.

AKW does not approve or recommend autoclave cleaning of any of the components due to the damage that this can cause to the components' material.

Where disinfecting is necessary, standard procedures for disinfecting equipment should be used taking due care and attention to the warnings concerning possible effects of aggressive chemicals on plastics or other surfaces. Do not use abrasive cloths, strong acidic or alkali, or chlorinated cleaning materials as these may discolour or otherwise damage the product. The use of such products will invalidate any warranty.

AKW products should be installed by experienced and competent persons using fixings appropriate for the maximum rated user load and selected to suit the condition of the surfaces on which the product is to be attached. The selection of any specific fixings must be made by the installer based upon the requirements for each individual installation.

Power showers should not be specified for use with AKW shower trays and screens. It is recommended that only AKW screens be used with AKW shower trays. These products have been designed to complement each other. Use of non-AKW products may adversely affect the integrity of the water seals.

Shower Curtain Information

The shower curtain must fall inside the screen to keep the water in the showering area. When fitted to level access trays, the curtain should drag on the tray by roughly 25 mm.

Material Specification

100% woven polyester
Plain White Curtain
Weighted seam
Rust proof eyelets and stain resistant

Warnings

DO NOT place matches, cigarettes or naked flames on or near this product.
Machine wash on gentle cycle at 40°C or less.
DO NOT use chlorine bleach.
DO NOT dry clean.
Iron at maximum temperature of 110°C.
Hang to dry only.
After cleaning, the user should always rinse with water to remove any cleaning material residues before hanging extended to dry off.

Contact

AKW
Life Made Better

Orders & Quotes

01905 823 299
orders@akw-ltd.co.uk

General Enquiries

01905 823 298
sales@akw-ltd.co.uk

Technical Enquiries

01905 560 219
tech@akw-ltd.co.uk

Kitchen Enquiries

01905 823 262
kitchens@akw-ltd.co.uk

Fax

01905 823 297

AKW

Pointon Way, Hampton Lovett
Droitwich Spa, WR9 0LR

www.akw-ltd.co.uk

orders.akw-ltd.co.uk

Follow us on Social:



Guarantee

The life time guarantee applies only to manufacturing or material defects, conditional on the one-time correct installation of the product.

It does not apply to:

- Inappropriate use or accidental damage.
- Damage or defects that result from incorrect installation.
- Lack of maintenance including the build up of grime or damage resulting from inappropriate cleaning.
- Damage or defects that result from repairs or modifications undertaken by unauthorised persons.
- This guarantee excludes general wear and tear through usage and does not apply to surface finishes.

What to do if something goes wrong?

If you have a problem with this product, please contact your local installer. If this does not resolve the issue, contact the AKW Technical Enquiries who can provide further advice and, if necessary, arrange for a maintenance engineer to visit and report any issues. See the T&Cs on our website or catalogue for further information. None of the foregoing affects your statutory rights.