

DW90 Low Height Dry Waste

INSTALLATION INSTRUCTIONS





Stock Code
25418




Stock Code
25419


Components & Installation

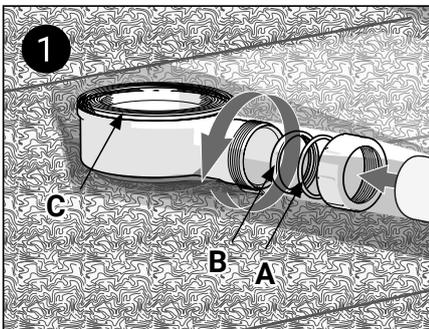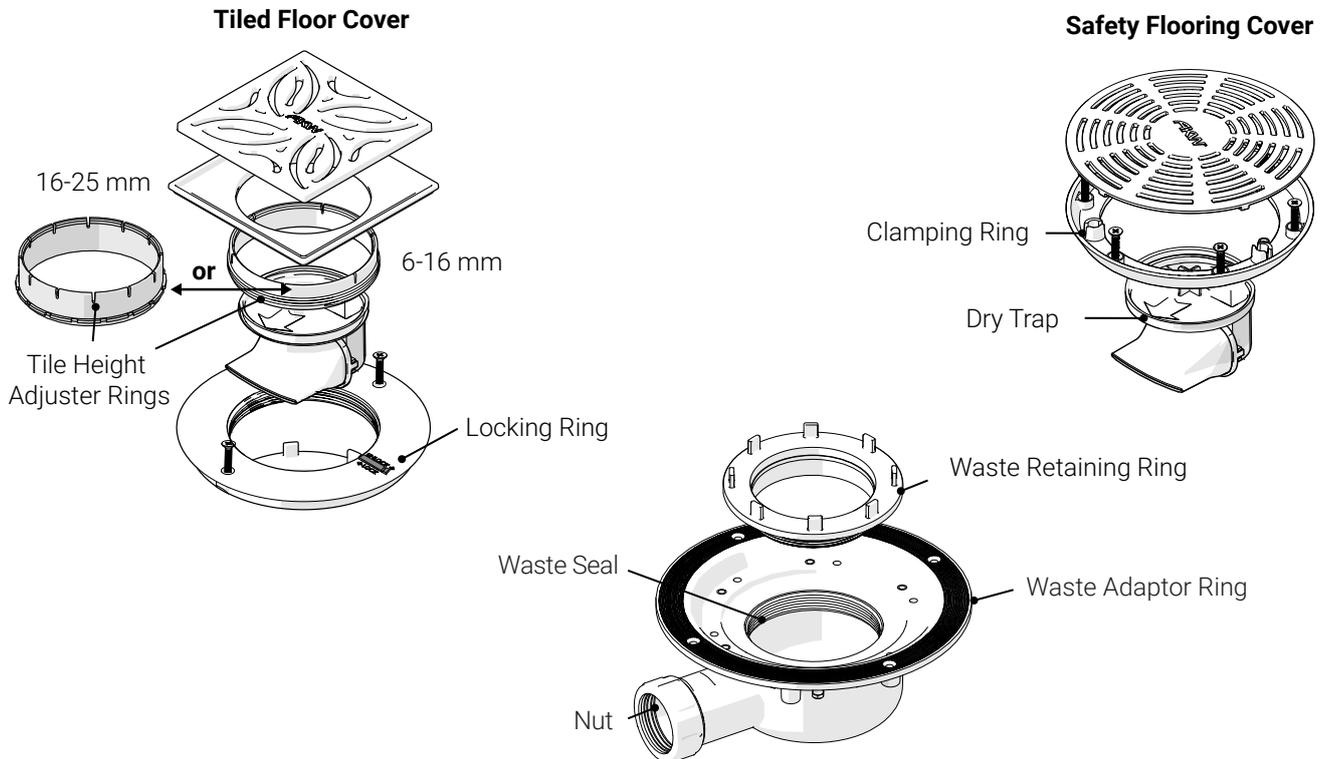


As a "dry run", first place the tray into the desired location and determine the position, the depth and the clearance required for the waste with at least a 1 in 40 fall. Ensure there is sufficient support around the waste, see separate former or tray instructions. Before fitting the waste, place the nut onto the waste pipe, followed by the washer (A) and the seal (B). Insert waste pipe into the waste and tighten the nut. Check that the pipe connection is correctly assembled, sealed and watertight. Ensure that the waste seal (C) is positioned into the recessed section on the top of the waste body before connecting to the tray.

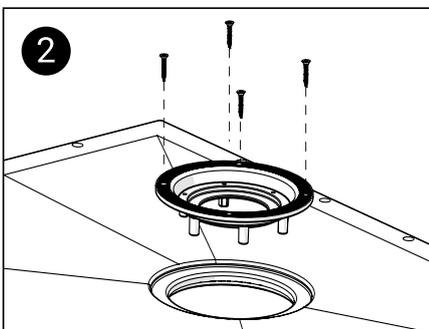

Attach the waste adaptor ring to the former.

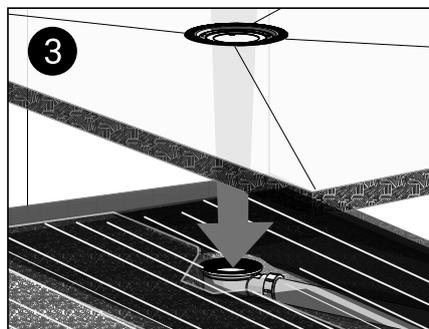


Lower the former into position over the waste.

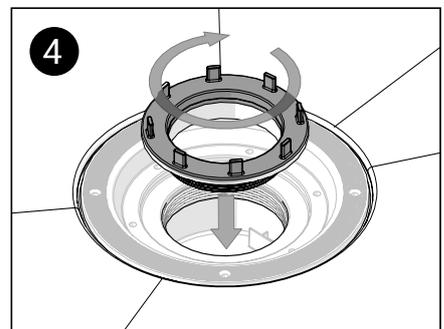


Screw the waste retaining ring to the waste body until it creates a water tight seal.


Tiled floor waste cover

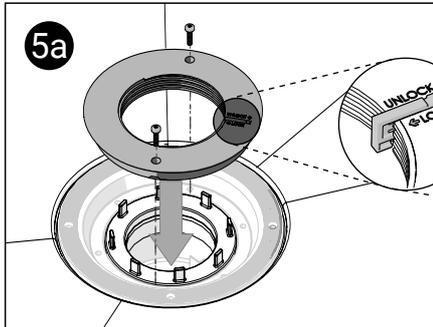


Secure the locking ring to the waste adaptor with the screws. Note: for the safety flooring waste cover, see step 5b.

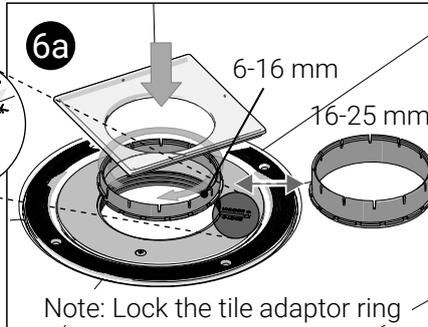

Depending on the thickness of your tiles select either 6-16 or 16-25 mm tile height adjuster ring.

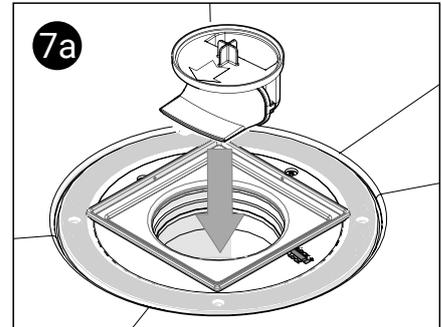


Lower the dry trap into the waste main body making sure that the valve faces towards the waste outlet pipe.

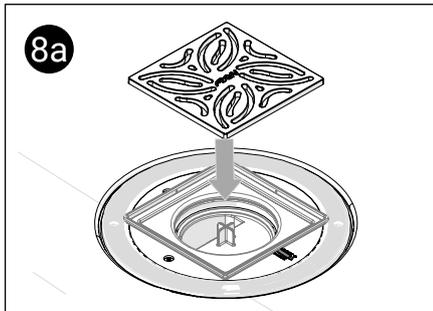


Temporarily cover the waste whilst tiling to prevent tile adhesive entering the waste. When the installation is complete then insert the metal cover.


Safety flooring waste cover

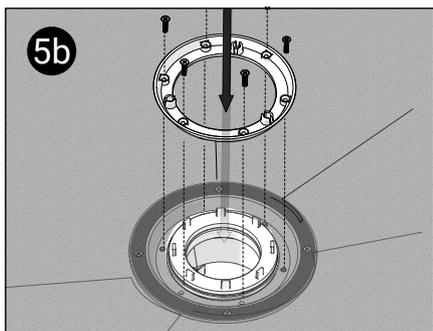

Follow steps 1-4 installing the waste adaptor.
Screw the clamping ring to the waste adaptor ring, clamping the safety floor.

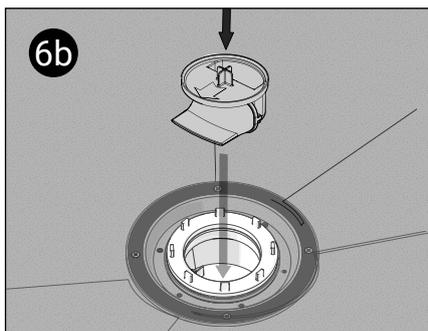

Lower the dry trap into the waste main body making sure that the valve faces towards the waste outlet pipe.

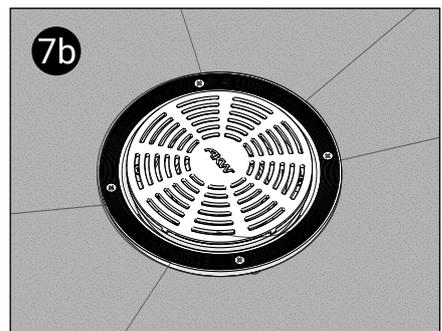

Whilst work continues in the area. Temporarily cover the waste area to protect the trap from any debris entering. Once complete attach the safety floor waste cover ensuring the location pegs are inserted into the clamping ring.

Finishing the waste installation

Remove any debris and clean up inside the waste area of tile grout and cement – remove temporary waste blanking material, clean any grout and cement or other rubbish from the waste. Re-fit the cover. It should sit level with the edge of the frame and the finished floor surface.

Contact Us

AKW[®]
Life Made Better

Orders & Quotes

01905 823 299
orders@akw-ltd.co.uk

General Enquiries

01905 823 298
sales@akw-ltd.co.uk

Technical Enquiries

01905 560 219
tech@akw-ltd.co.uk

Kitchen Enquiries

01905 823 262
kitchens@akw-ltd.co.uk

Fax

01905 823 297

AKW

Pointon Way, Hampton Lovett
Droitwich Spa, WR9 0LR

www.akw-ltd.co.uk
orders.akw-ltd.co.uk

Follow us on Social:



Warranty

Warranty applies only to manufacturing or material defects, conditional on the one-time correct installation of the product. It does not apply to:

- Inappropriate use or accidental damage.
- Damage or defects that result from incorrect installation.
- Lack of maintenance including the build up of grime or damage resulting from inappropriate cleaning.
- Damage or defects that result from repairs or modifications undertaken by unauthorised persons.
- General wear and tear through usage and does not apply to surface finishes.

Warranty period starts from the date of installation. See the T&Cs on our website for further information.

Select 1 of 2 ways to activate your warranty



1. Scan using your Smart Device



2. Visit Online

akw-ltd.co.uk/warranty-information

What to do if something goes wrong?

In the event that you encounter a problem with this product, follow the trouble shooting guide if applicable, then contact your local installer. If the issue is still unresolved, contact AKW Technical Enquiries who will provide further advice and arrange for a maintenance engineer to visit if necessary. None of the foregoing affects your statutory rights.