
## PIVOT DOOR

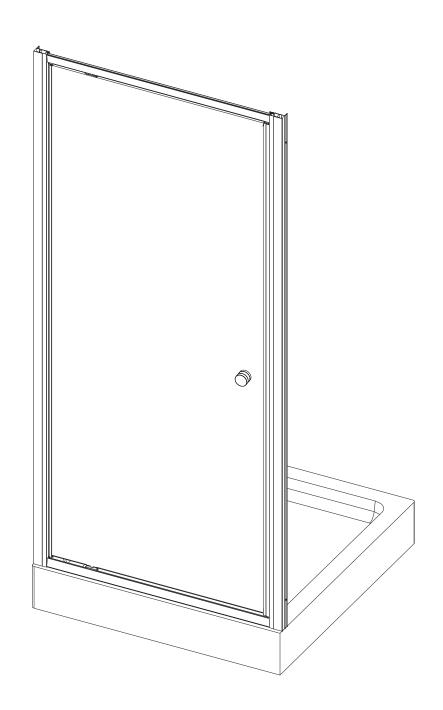


## **INSTALLATION GUIDE**

| Size | Product code | Adjustment | Opening space |
|------|--------------|------------|---------------|
| 760  | A1206B0      | 710-750    | 490           |
| 800  | A1206D0      | 750-790    | 530           |
| 900  | A1206E0      | 850-890    | 630           |


## **ATTENTION**


If you install the product in a way that differs from this manual this will void all guarantees. Before installation check that the product meets all your requirements and is not damaged. By proceeding with installation, You accept the condition of the product. The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult your local hardware supplier for the correct type.

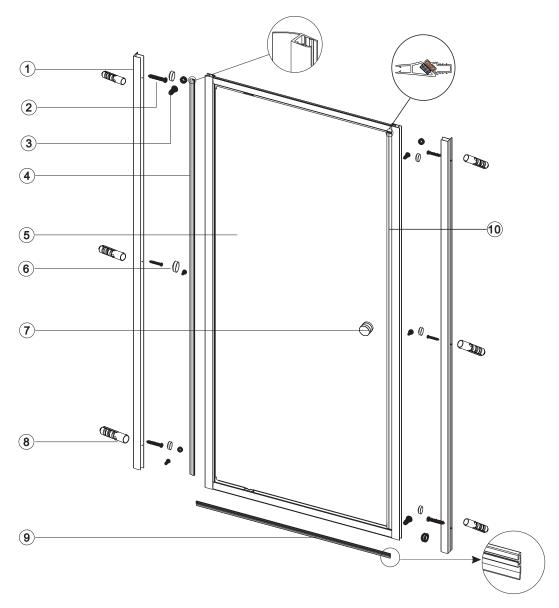



| NO. | Qty | Part No. |
|-----|-----|----------|
| 1   | 2   | A02S0020 |
| 2   | 6   | 2SY51    |
| 3   | 6   | 2SY50    |
| 4   | 1   | A02S0033 |
| 5   | 1   | А        |


| NO. | Qty | Part No. |
|-----|-----|----------|
| 6   | 12  | C070     |
| 7   | 1   | A12S0023 |
| 8   | 6   | 2SP12    |
| 9   | 1   | C055     |
| 10  | 1   | A02S0040 |

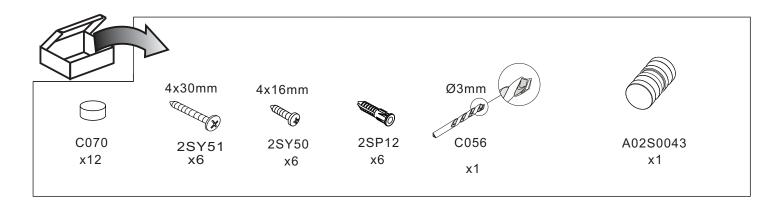

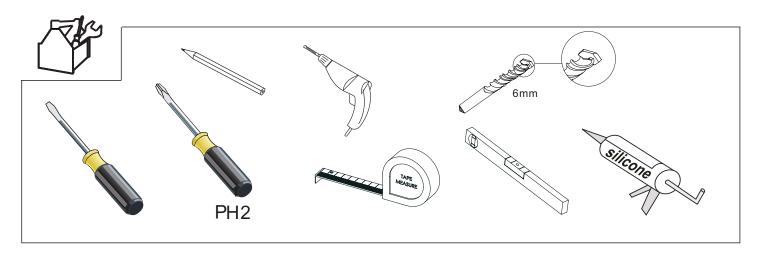

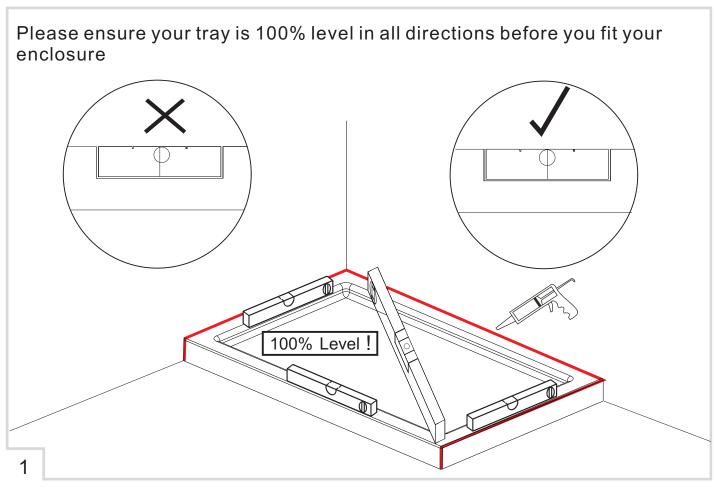

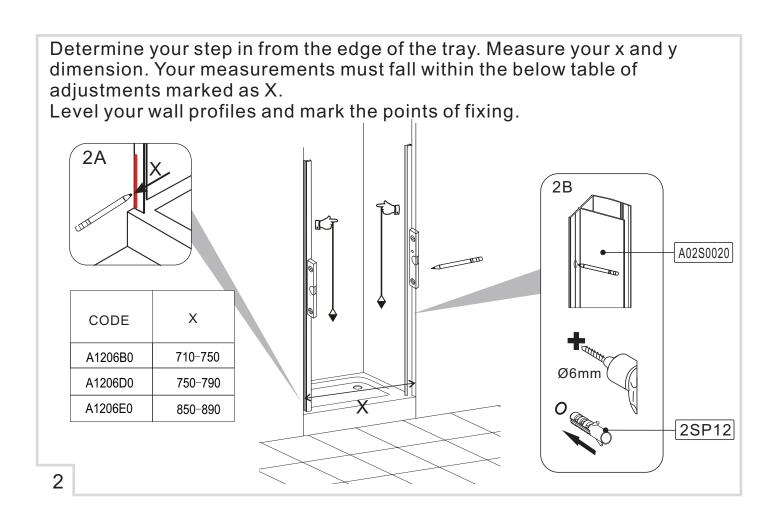

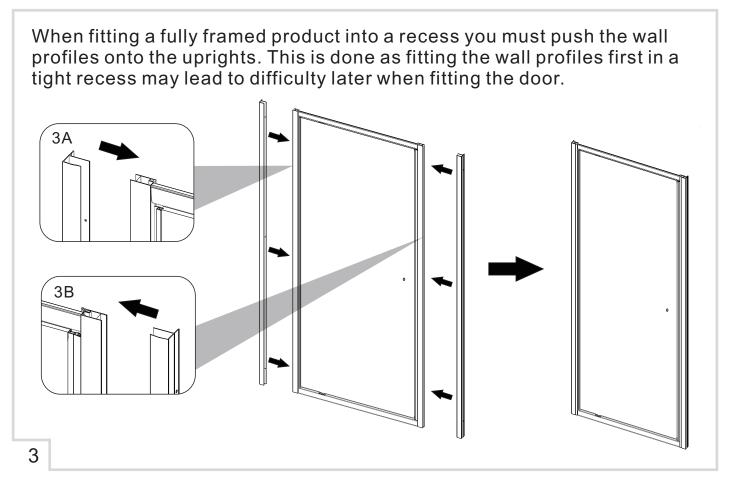

When the enclosure is between your two walls you can then fix your wall profiles to the walls using the fixing screws provided.

Equalise the gaps on either side of the upright profiles and fix using 2SY50 as shown in 4C. Also make sure that the Gaps shown in 4D are equal.

