

AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces.

All surface finishes will wear if not cleaned correctly, the only safe way to clean your fitting is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture.

As gold and special effect finishes are softer than chromium plate, special care must be taken when cleaning; a 3 year guarantee covers these finishes.

NOTE: - the 5 year guarantee is invalidated if damaged by any waterborne debris.

In the interests of continuous product development we reserve the right to alter specification as necessary

PRODUCT CODE: JET2 C / JET3 C

TELEPHONE HELP LINE! +44 (0) 870 4425553

Bristan Limited
Birch Coppice Business Park
Dordon
Tamworth
Staffordshire
B78 1SG
UK


Web site: www.bristan.com
Telephone: +44 (0) 870 4425556
Facsimile: +44 (0) 870 4425554
Email: enquiry@bristan.com

(FI JET2/3)

(Rev. D1)

(B)

Body Jet

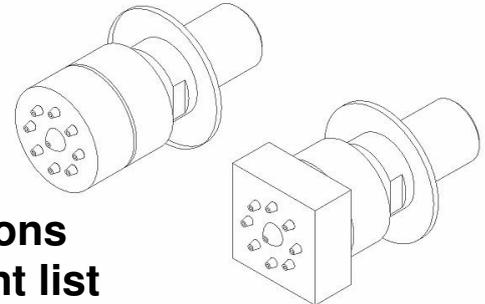

Fitting Instructions & Content list

Please keep these instructions for future reference and request of replacement parts

Body jets are intended to be used in conjunction with other products, such as the blending valve, diverters and stopcocks from the Bristan pick and mix ranges in order to create a system to suit your requirements.

COMPONENTS

1. Body jet
2. Cover plate
3. Tee connector (not supplied)

INSTALLATION


Body jets should be arranged in your system to provide the necessary spray outlets to suit the application.

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Depending on application the body jet can be panel mounted using a backnut (not supplied) or set into the wall on rigid pipe work. If panel mounting care should be taken to ensure connection can be made after securing with the backnut.
3. Connect body jet to pipe work using recommended 1/2" BSP connections (not provided) with thread sealing compound where necessary.


NOTE: - Before finishing wall turn on water supplies to check both correct system function and for leaking from joints/connections.

4. Complete wall finish.
5. See over the page for aftercare instructions.

INSTALLATION DIAGRAM

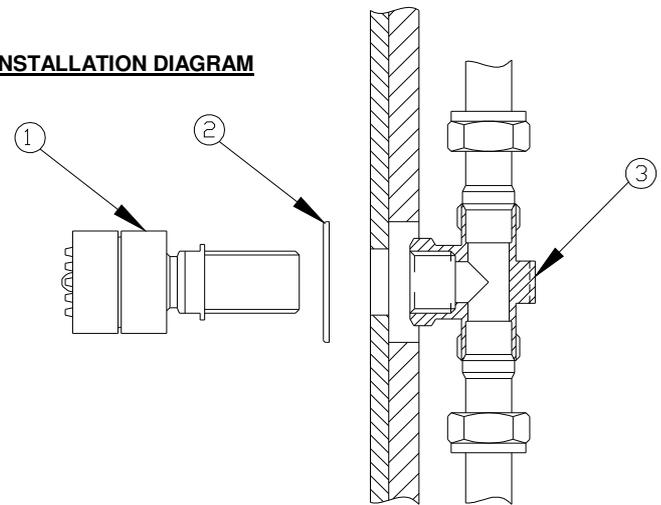

Multiple body jets will require installation in parallel using a pressure-balancing loop, as shown below:

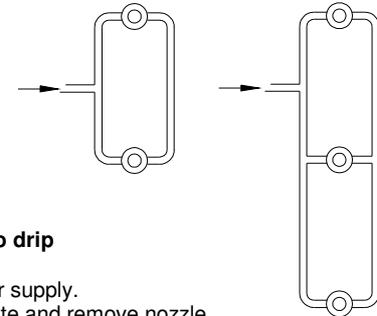

MAINTENANCE

If the fitting begins to drip

1. Turn off the water supply.
2. Unscrew face plate and remove nozzle.
3. Carefully clean seating, rubber seal and nozzle.
4. Replace rubber seal, nozzle and screw on face plate.
5. Contact our help line if problem persists.