

## IMPORTANT:

### 1. Tools Required (not supplied)

Cross Headed Screwdriver  
6mm Diameter Drill Bit  
Tape Measure  
Pencil  
Spirit level

### 2. Tools Required (supplied)

Hex Key

### 3. Before You Start

The screws and wall plugs supplied are only suitable for use in solid walls. If fitting to other types of wall, ensure suitable fittings are used which are available from any Hardware Store.

Ensure there are no hidden service pipes and cables where you intended to drill.

If drilling into ceramic tiles, use a special bit for ceramic tiles.

Where possible, drill your holes between ceramic tiles in the grout.


## CARE AND MAINTENANCE:

Suggest cleaning the product surface with cleanwater or soft detergent, and then dry with soft towel.

Please do not use any detergent containing hydrochloric acid or caustic chemicals.

Avoid scratching the surface with hard objects, and do not use a coarse cloth to wipe.

The product should be installed by a professional, following the recommended installation instructions.

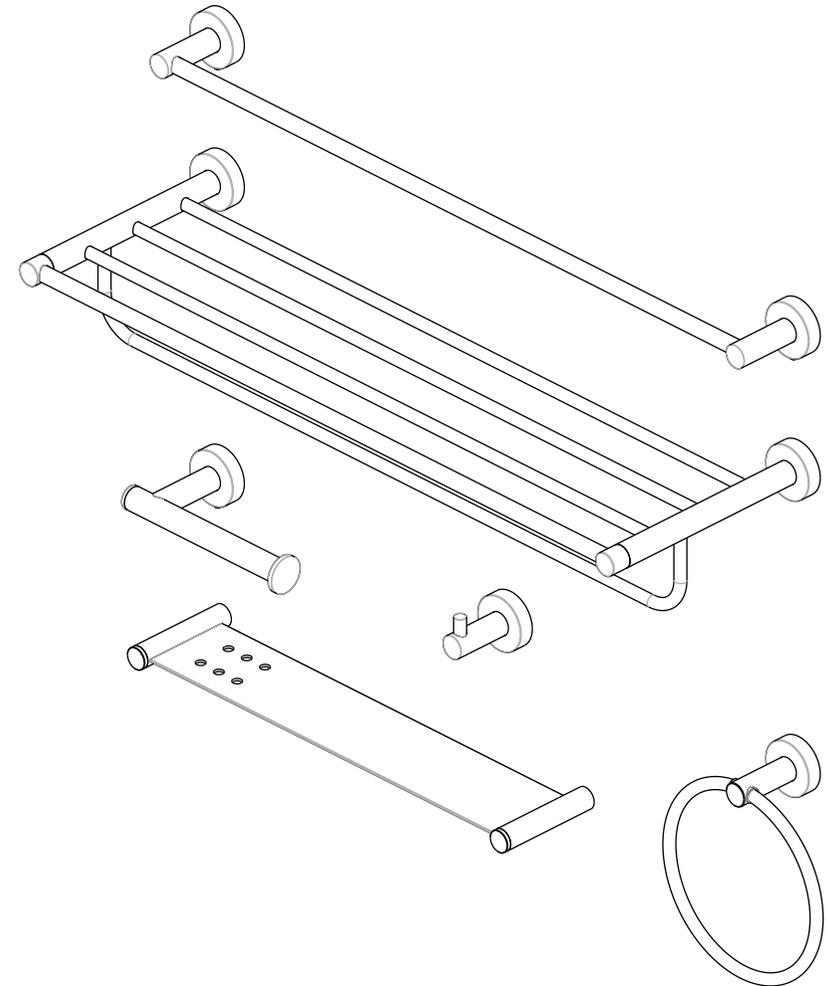

## ASSEMBLY INSTRUCTION:

A. Measure and mark the desired location and ensure the mounting bracket is aligned correctly. Use the mounting bracket as a template to mark the drill holes on the wall.

B. Drill two holes into the wall at the marked location.

C. Push in 2 wall plugs ensuring correct plugs for wall type are used.

D. Attach mounting bracket tightly to the wall by inserting 2 screws using a cross headed screwdriver. If necessary, repeat step A-D to locate the second mounting bracket. Ensure the mounting brackets are aligned horizontally by checking with a spirit level before drilling the second fitting.

E. Attach fixture onto mounting bracket.

F. Tighten the grub screw using the provided Hex Key until the fixture is secure.

Assembly Example of Robe Hook:

