

### SAFETY


- Please read these installation instructions carefully before proceeding.
- Keep guide for future reference.
- If you are unsure about any part of the installation, please contact our technical department on 01460 258 682
- Incorrect installation will invalidate the guarantee.
- Make sure there are no hidden pipes or cables in the floor or walls where you intend to drill.
- Ensure you have all of the appropriate PPE.

**Important note: This shower tray must be used with showers that have flow rates of 12 l/min or less.**


### CARE

- Please protect the surface of the shower tray during installation.
- Please do not walk on the tray with shoes on.
- Only use mild household detergents to clean the product.
- Do not use polish or abrasive cleaners on the surface of the tray.
- Ensure the shower tray is thoroughly cleaned after installation and before first use.


### Component Content List

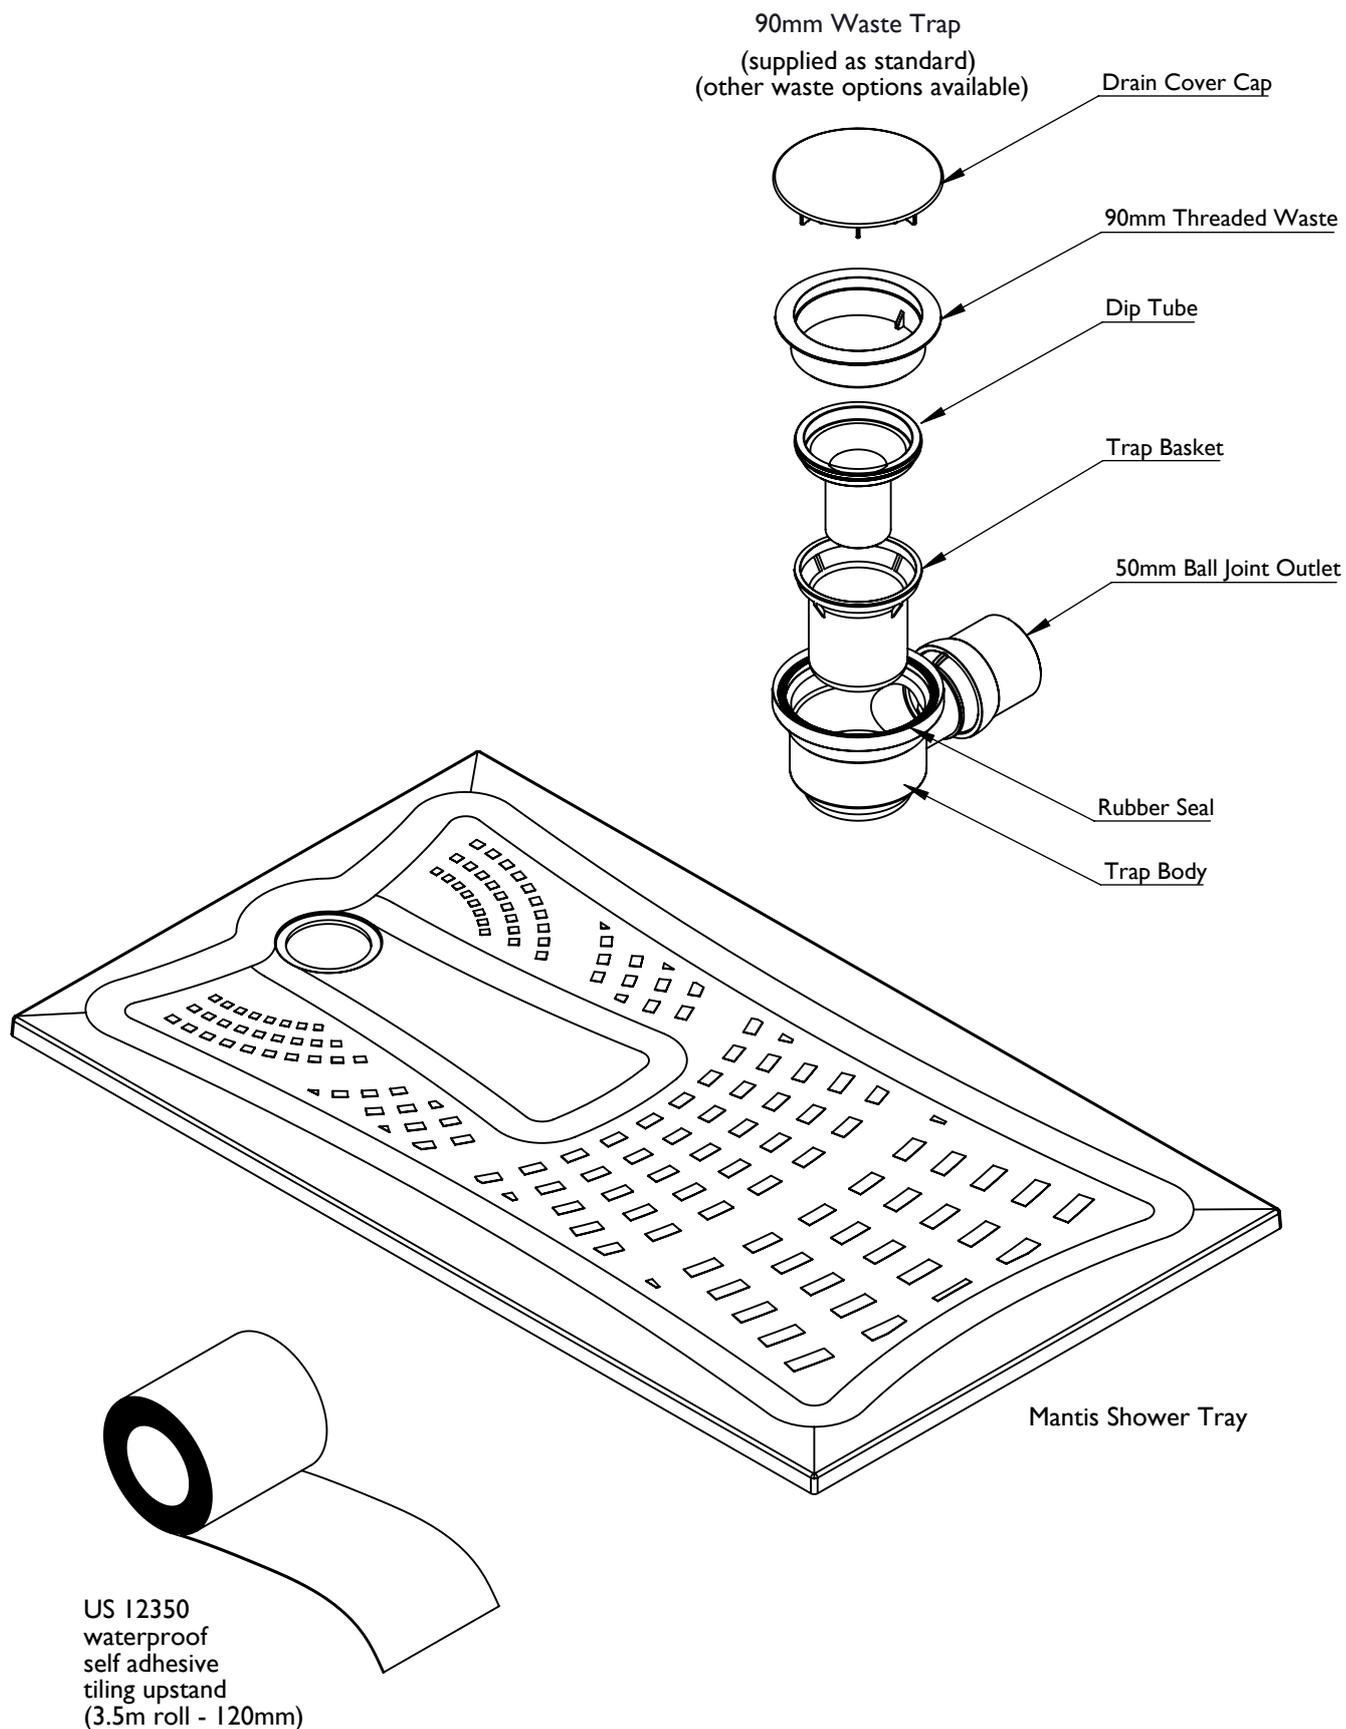


This guide is non specific to timber or concrete floors, it may refer to timber floors but in general the process of installation is the same regardless of floor type. In both cases great care must be taken when either lifting floor board or excavating the floor for waste installation.

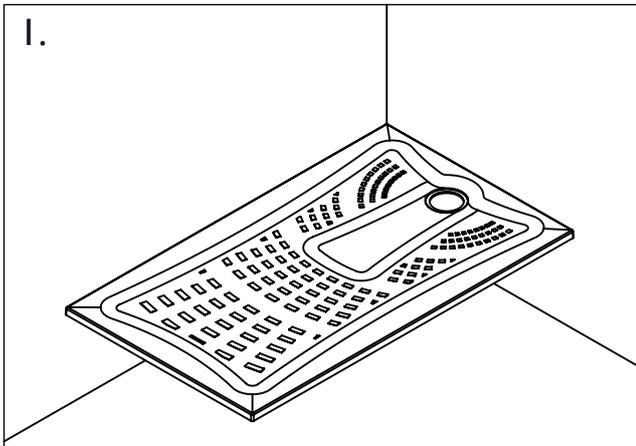

1. Determine which corner the tray is to be fitted into. This will establish which edges the fabric up stand will be attached to.

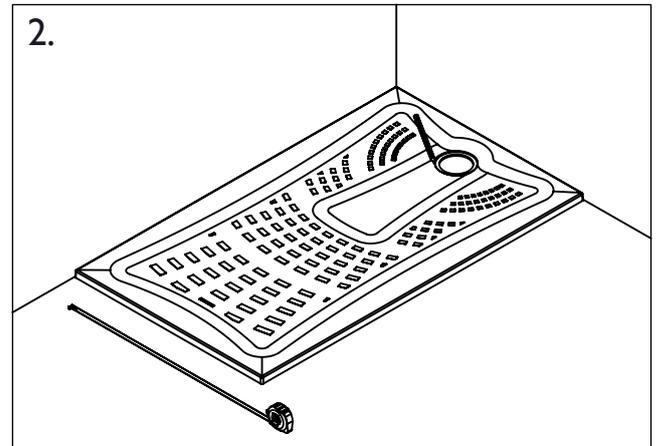


2. Place the tray in the desired location and mark position of shower trap.

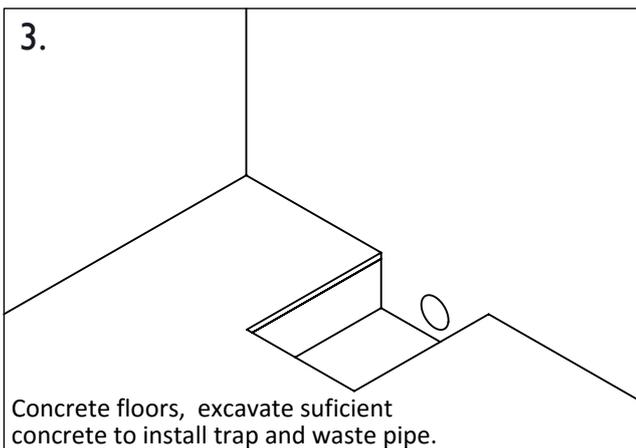


3. Concrete floors, excavate sufficient concrete to install trap and waste pipe.


Using a suitable saw, remove enough floor boards to receive the shower tray and any drainage pipework. Use extreme care whilst cutting the floor as there may be hidden pipes and cables.

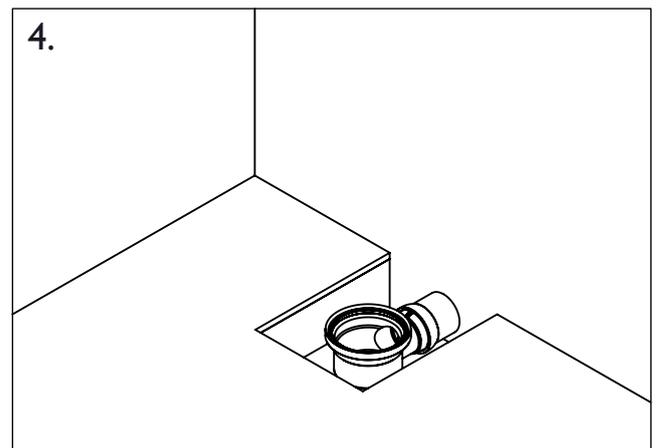

4. Position the trap so that it aligns with the hole in the shower tray and connect it to the waste pipe. Remove internal parts of the trap and place to one side, as they will be required later.

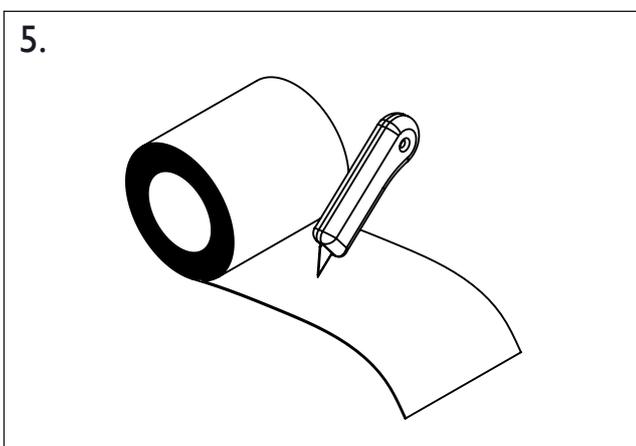


5. Measure and cut the required length of fabric tile up-stand. The length will be determined by measuring the sides of the tray the are against a wall.

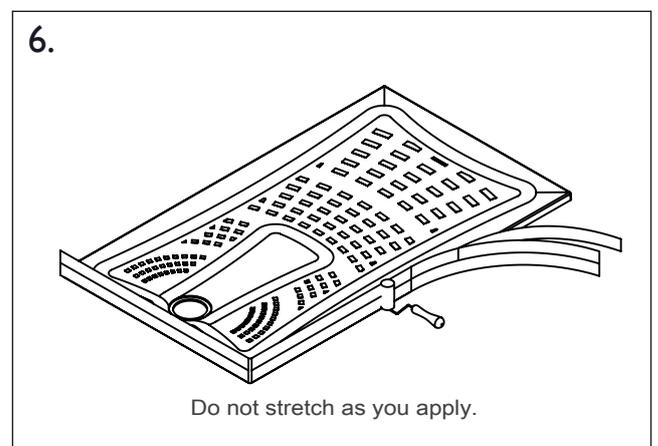


Do not stretch as you apply.

6. First remove the backing paper. Carefully position against the tray and press firmly into place ensuring there are no bubbles or creases. We recommend using a roller to do this.


This guide is non specific to timber or concrete floors, it may refer to timber floors but in general the process of installation is the same regardless of floor type. In both cases great care must be taken when either lifting floor board or excavating the floor for waste installation.

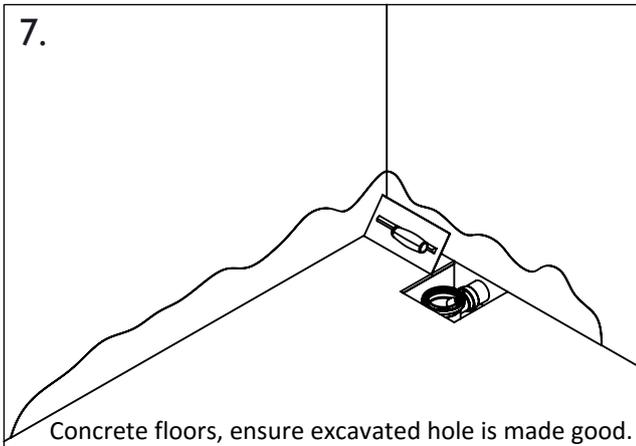


Apply tile adhesive to the wall ready for the tile upstand. It may be desirable to bed the shower tray down on sand and cement or tile adhesive. This can assist with levelling the shower tray and offer additional support.

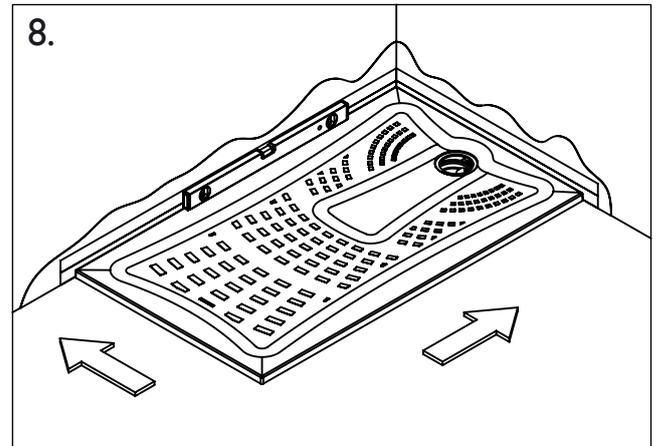

Put the tray in position and press the upstand into tile adhesive ensuring there are no air gaps. Ensure the tray is level on all four sides. Allow 24 hours before exposing to water.

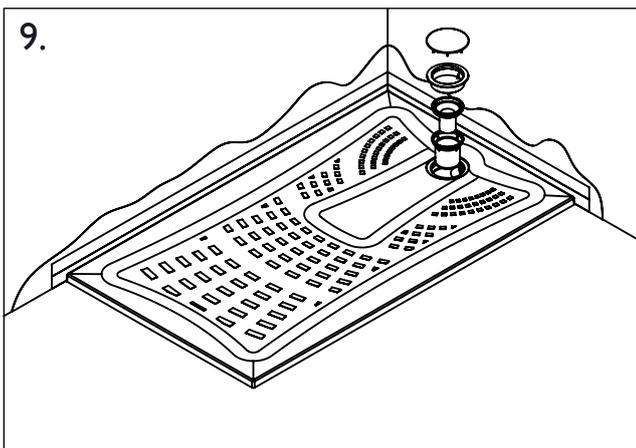

The trap can now be reassembled and connected to the tray.

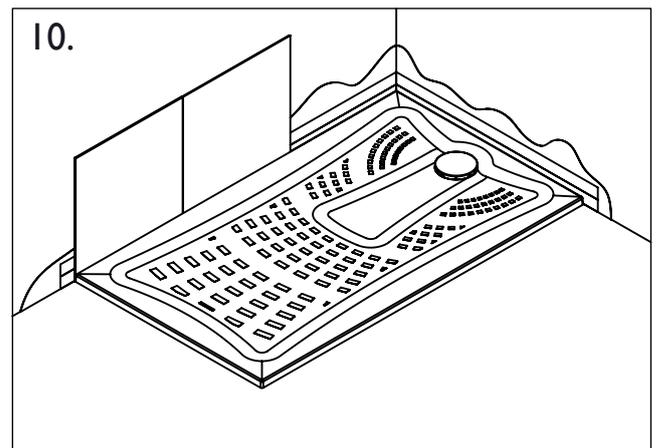

Tiling can now be completed in an approved manner.

If you require any further information about this product please contact our technical department on: 01460 258 682  
Impey Showers  
Conquest Business Park  
Ilton  
Somerset  
TA19 9EA

TEL: 01460 256090  
FAX: 01460 259800

info@impeyshowers.com  
www.impeyshowers.com