


# Supreme Glass Shower Panel Installation Guide

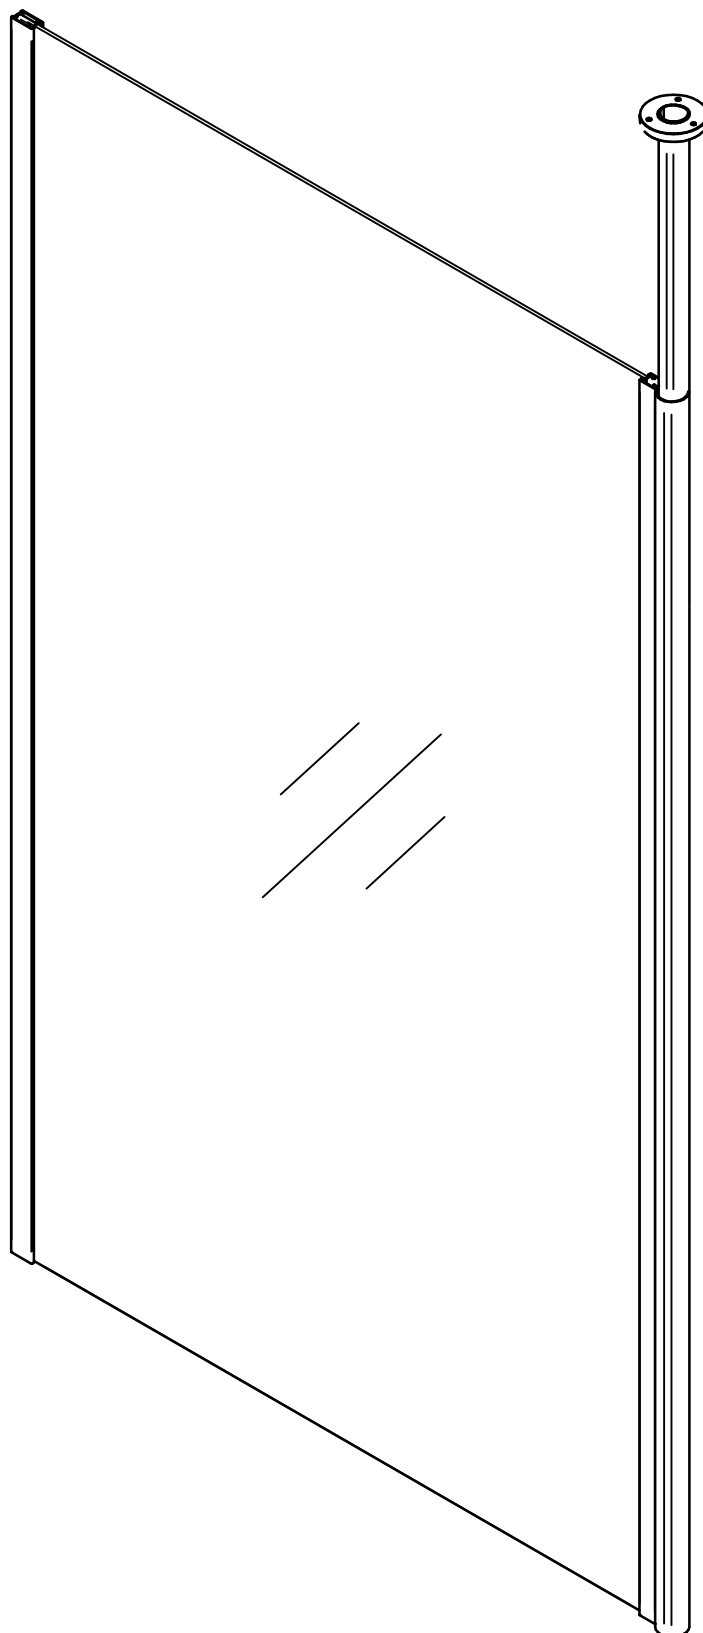

# Supreme Glass Shower Panel Installation Guide



*Please read these installation instructions carefully and keep for future reference. Incorrect fitting will invalidate the guarantee.*

## SAFETY

- Handle glass with care. Although the glass is very tough, sharp impacts can damage both the glass and metal frame.
- Do not remove the plastic corner protectors from the glass panels until the panels are about to be fitted
- As the parts are large, we recommend that two people are needed to carry out parts of the installation.
- Make sure there are no hidden pipes or cables in the floor and walls where you intend to drill.
- Wear safety goggles, shoes and appropriate clothing.
- If you are unsure about any part of the installation, please contact our technical department on: 01460 258682.

## EQUIPMENT NEEDED:

Spirit level, pencil, crosshead screwdriver, silicone sealant, tape measure, knife, power drill, scissors and selection of drill bits.

**Supreme Glass Shower Panel is suitable for use with shower trays or wetroom floor systems**

## SCREW PACK



Wall Plug x 7  
PN6021000



No.8 x 32mm Screw x 3  
PN6030400



No.10 x 1 1/2" Screw x 4  
PN6031200




Washer x 4  
PN8212



M4 Grubscrew x 1  
PN6037200




Tube Cap x 3  
PN6047350

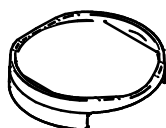


Foot Cap x 1  
PN5035600



Tigerfix x 1  
PN6047250

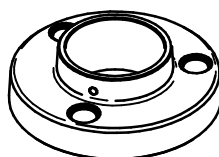


Ceiling Bracket x 1  
PN6046350

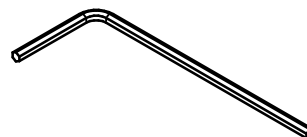


2mm Allen Key  
PN6041800

# Supreme Glass Shower Panel Installation Guide

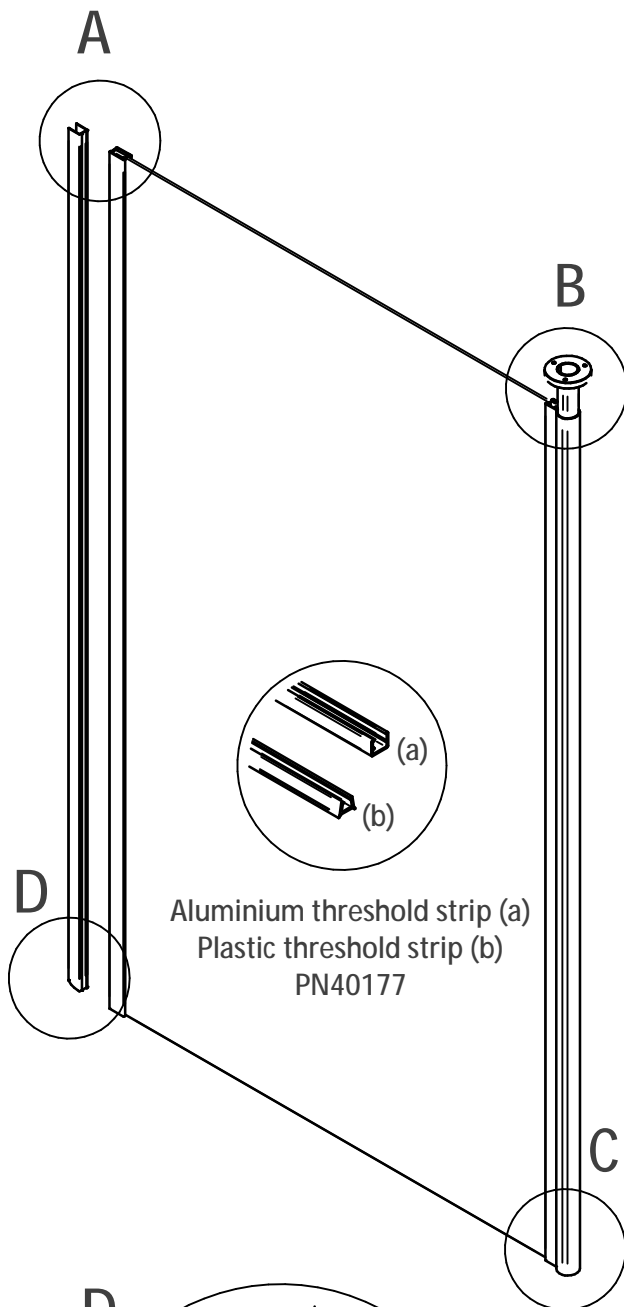

Flipper Seal x 4  
PN4016605  
Wall Channel  
PN1075450  
Coving Extension  
Profile (optional)  
ICEP2000

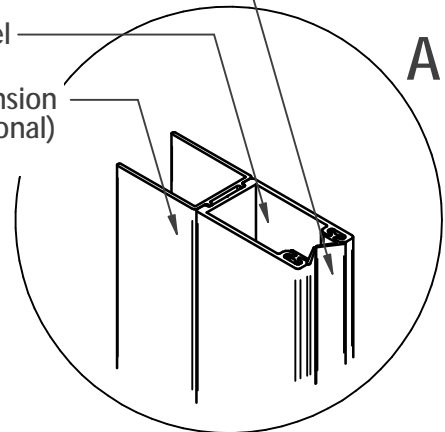



Screws

Ceiling Bracket

Telescopic Pole (Inner)  
PN1098650

Telescopic Pole (Outer)  
PN1098550


Tube Caps

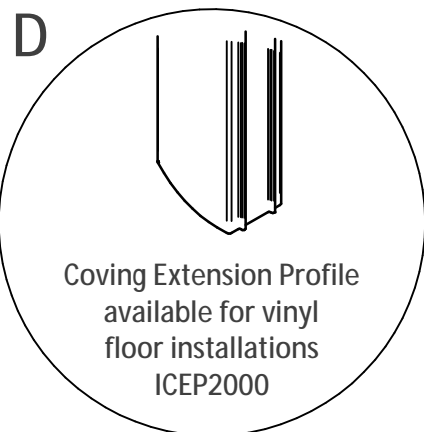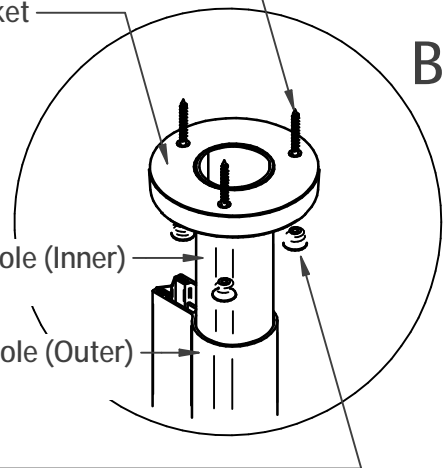

Tigerfix Foot Cap


Tigerfix Glue Carrier

Tigerfix Wall Plate

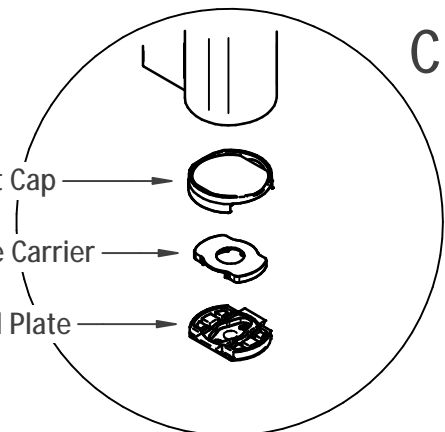


# Supreme Glass Shower Panel Installation Guide

*If using the Coving Extension Profile, assemble as shown in diagram A before marking the wall*

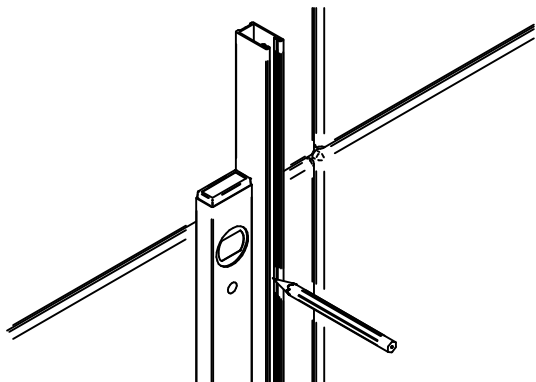


- 1** Place the wall channel in desired location and mark position of the four holes onto the wall.

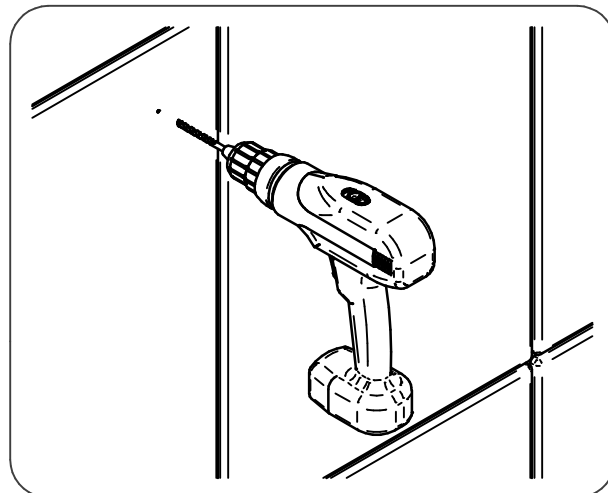


- 2** Using a 6mm drill bit, drill the marked holes and insert the wall plugs if required.

*Apply silicone sealant to the back of the wall channel.*

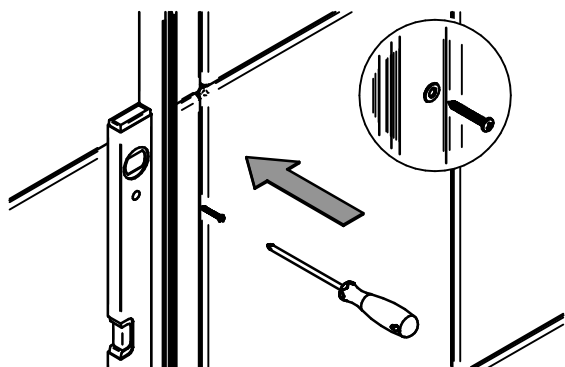


*If using the Coving Extension Profile use the 2 1/2" screws provided*

- 3** Place the washers over the 1 1/2" screws and screw the wall channel into position, ensuring it remains vertical.

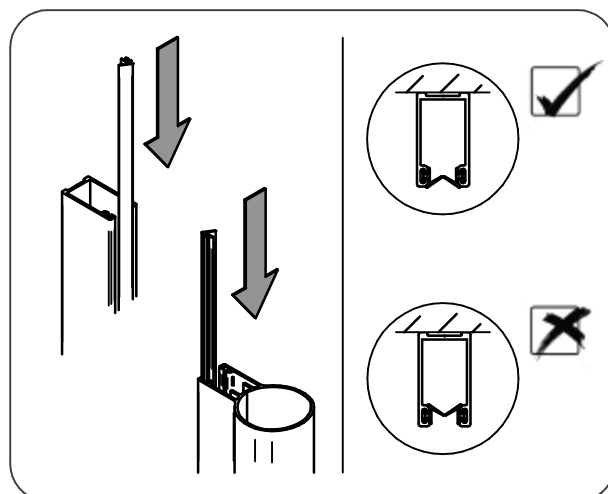


- 4** Slide both seals down into the channel and cut off any excess. Note the orientation of the soft flippers.

*Ensure the glass coating is on the inside of the showering area as indicated on the glass label*

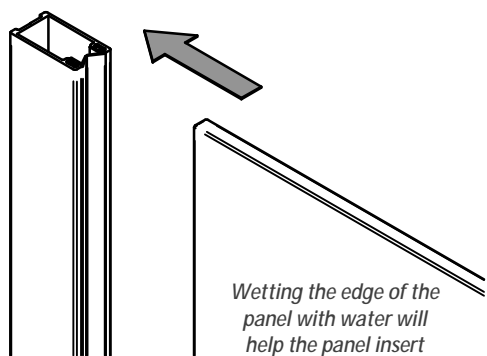

- 5** Place the glass panel into the wall channel (correct way around) and temporarily attach the floor to ceiling pole.


*OPTIONAL THRESHOLD STRIPS*

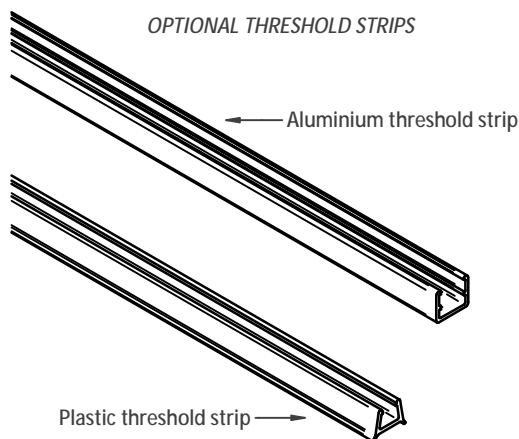

- 6** If using the threshold strip, there are 2 types available and 2 fitting options: fitting up to the wall channel (stage 7), fitting inside wall channel (stage 8).


# Supreme Glass Shower Panel Installation Guide

*FITTING STRIPS UP TO THE WALL CHANNEL*

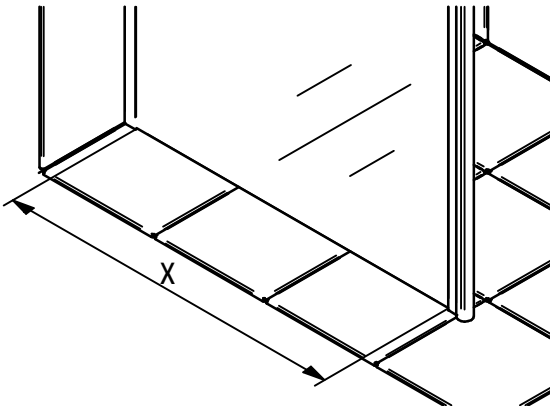


- 7** Carefully measure the distance between the wall channel and the outer pole (X), then trim your chosen threshold strip to length (X). Remove the panel.

*FITTING ALUMINIUM STRIPS UP TO THE WALL CHANNEL*

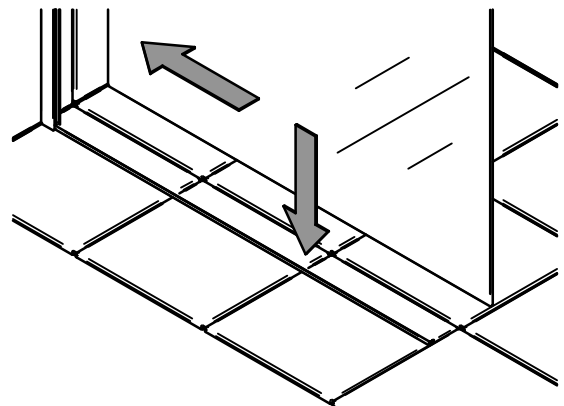


- 7a** Position the strip up against the wall channel. At the same time, angle the panel and carefully push into the wall channel and threshold strip.

*FITTING PLASTIC STRIPS UP TO THE WALL CHANNEL*

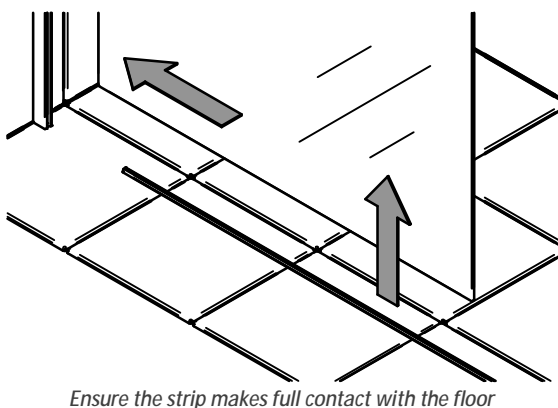


- 7b** Position the strip onto the bottom of the panel, flush with the front edge, then carefully push the panel into the wall channel.

*FITTING STRIPS INSIDE THE WALL CHANNEL*

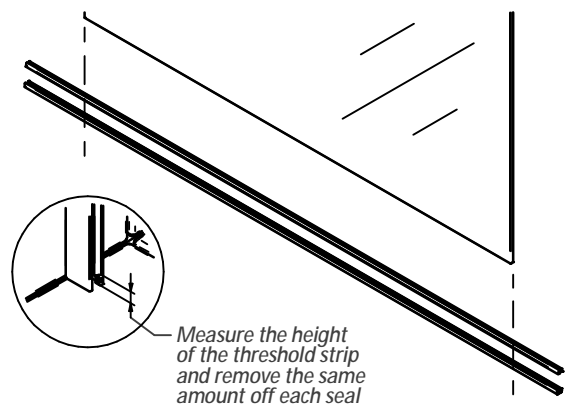


- 8** Remove the panel. Carefully trim your chosen threshold strip down to the same width as the panel.

*FITTING ALUMINIUM STRIPS INSIDE THE WALL CHANNEL*

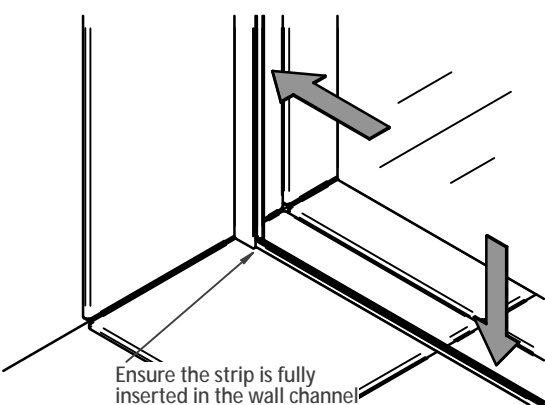


- 8a** Position the strip inside the wall channel. At the same time, angle the panel and carefully push into the wall channel and threshold strip.

*FITTING PLASTIC STRIPS INSIDE THE WALL CHANNEL*

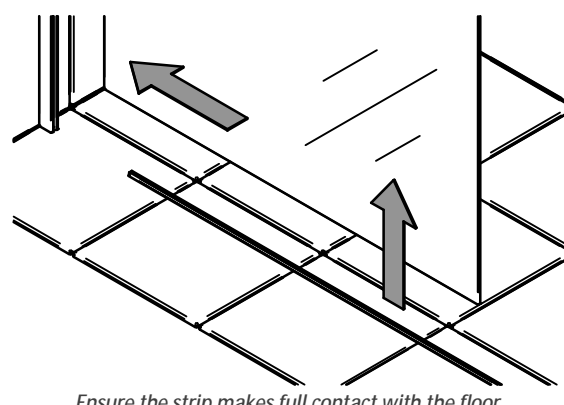


- 8b** Position the strip onto bottom of the panel, flush with the front edge, then carefully push into the wall channel.


# Supreme Glass Shower Panel Installation Guide

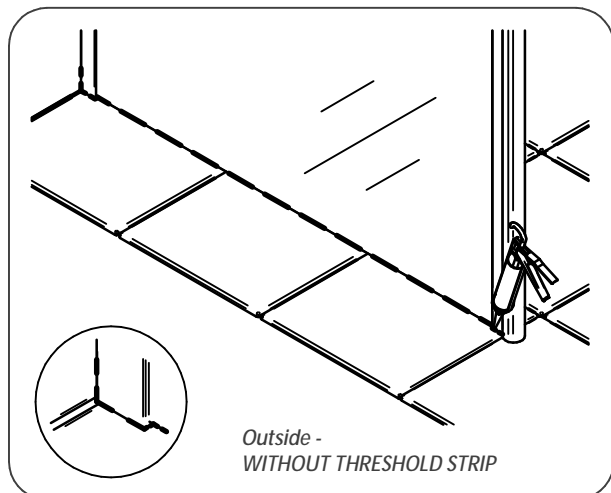


**9a** Apply silicone sealant along the bottom of the panel and wall channel and 50mm up the wall channel.

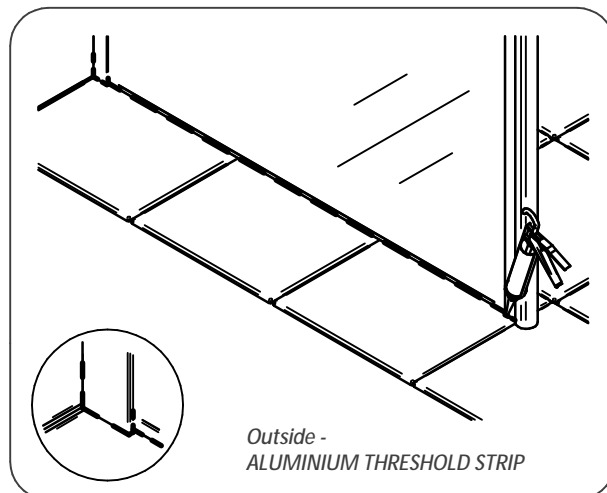


**9b** Apply silicone sealant along the bottom of the threshold strip and wall channel, 50mm up the wall channel and up the joint between the wall channel and threshold strip.

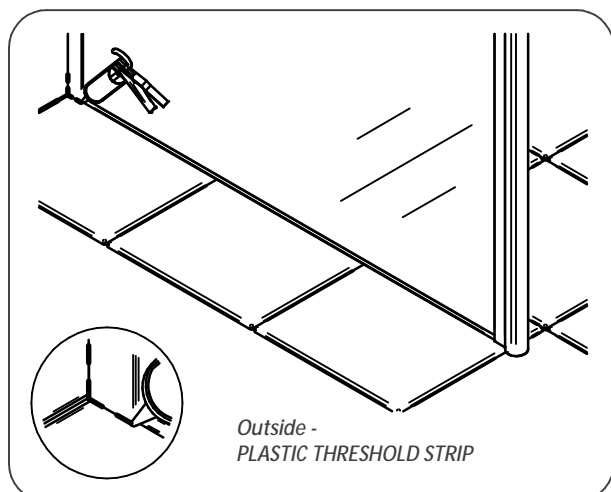


**9c** Apply silicone sealant along the bottom of the wall channel and 50mm up the wall channel.

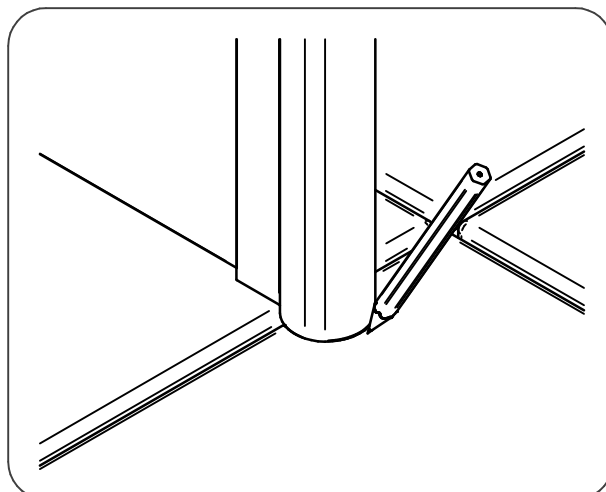

**10** Mark location of the floor to ceiling pole as shown.

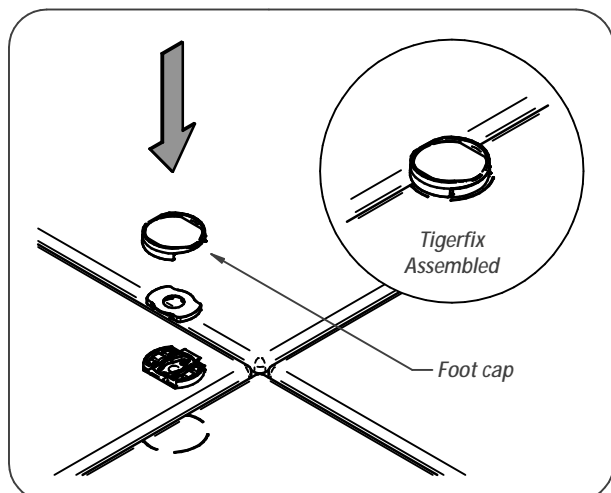


**11** Attach the Tigerfix to the floor within the marked area, leave for 30 minutes to cure.

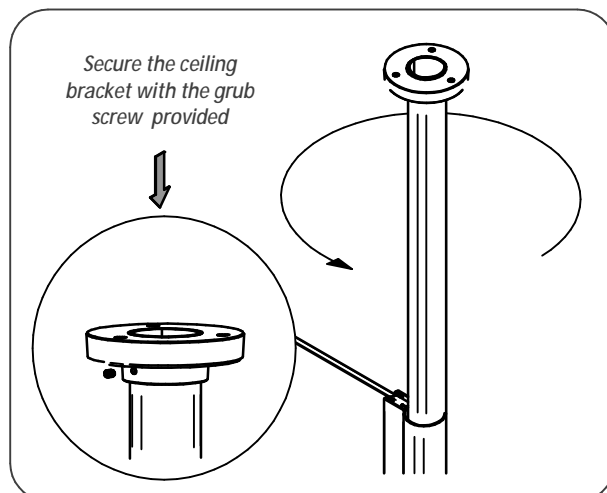


**12** Fit the ceiling bracket to the inner pole. Then extend the pole to required height and rotate it until it locks in the position.


# Supreme Glass Shower Panel Installation Guide

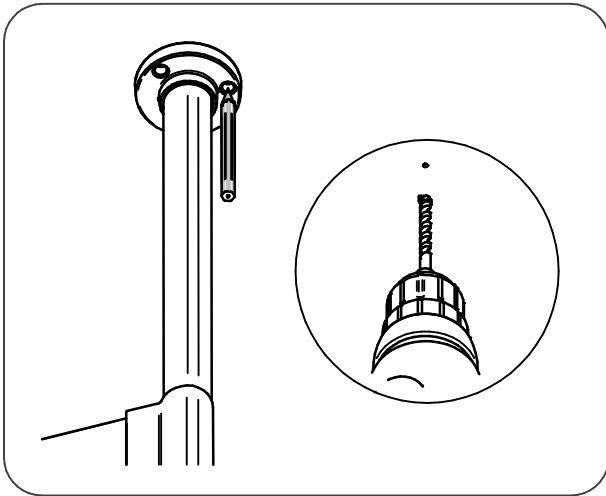


**13** Mark the position of the holes on the ceiling, unlock and lower the inner pole, then drill the positions marked.

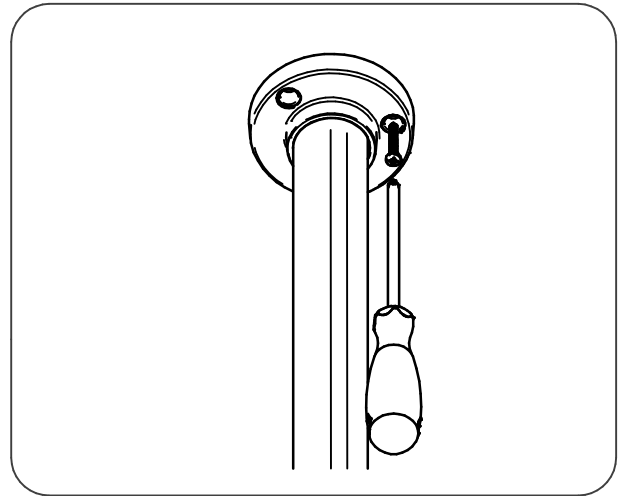

**14** Raise the inner pole, lock in position and screw the ceiling bracket in place.

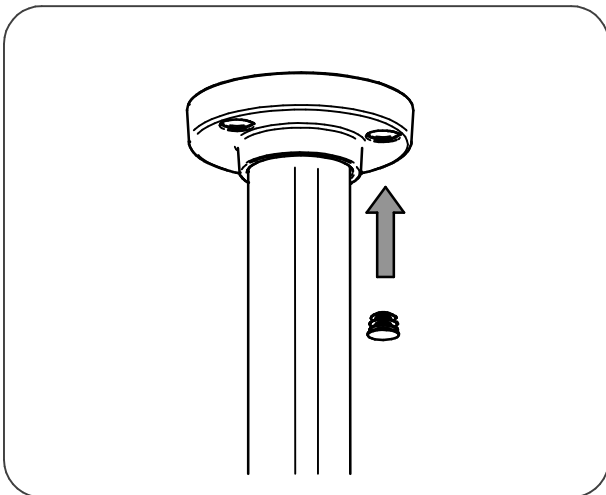

**15** Push fit the tube caps.

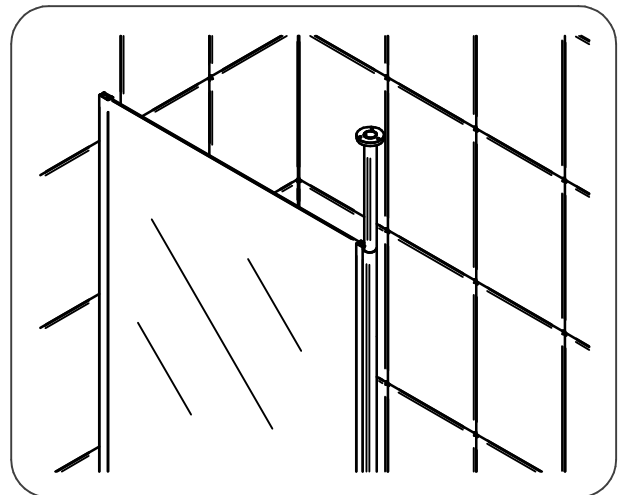

**16** The installation of the Supreme Glass Shower Panel is now finished.



IMPEY SHOWERS LIMITED, CONQUEST BUSINESS PARK, ILTON, SOMERSET TA19 9EA  
TEL: 01460 256 090 | FAX: 01460 259800 | EMAIL: [info@impeyshowers.com](mailto:info@impeyshowers.com)

[www.impeyshowers.com](http://www.impeyshowers.com)



[facebook.com/impeyshowers](https://facebook.com/impeyshowers)



[@impeyshowers](https://twitter.com/impeyshowers)