

INSTALLATION GUIDE

Hinge Door

MERLYN™
M

8
Series

IMPORTANT

Thank you for choosing Merlyn. Please familiarise yourself with the fitting instructions before commencing fitting.

- 1 Check that you have the tools required ☐
- 2 Check that the installation site is compatible ☐
with size of door supplied
- 3 Check all the enclosure components ☐
- 4 Check that the installation kit is complete ☐


DO NOT attempt to install the product unless you can tick **ALL 4** boxes as satisfactory.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud - partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type.


It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect shower enclosure before fitting. No claims will be accepted after product has been installed.

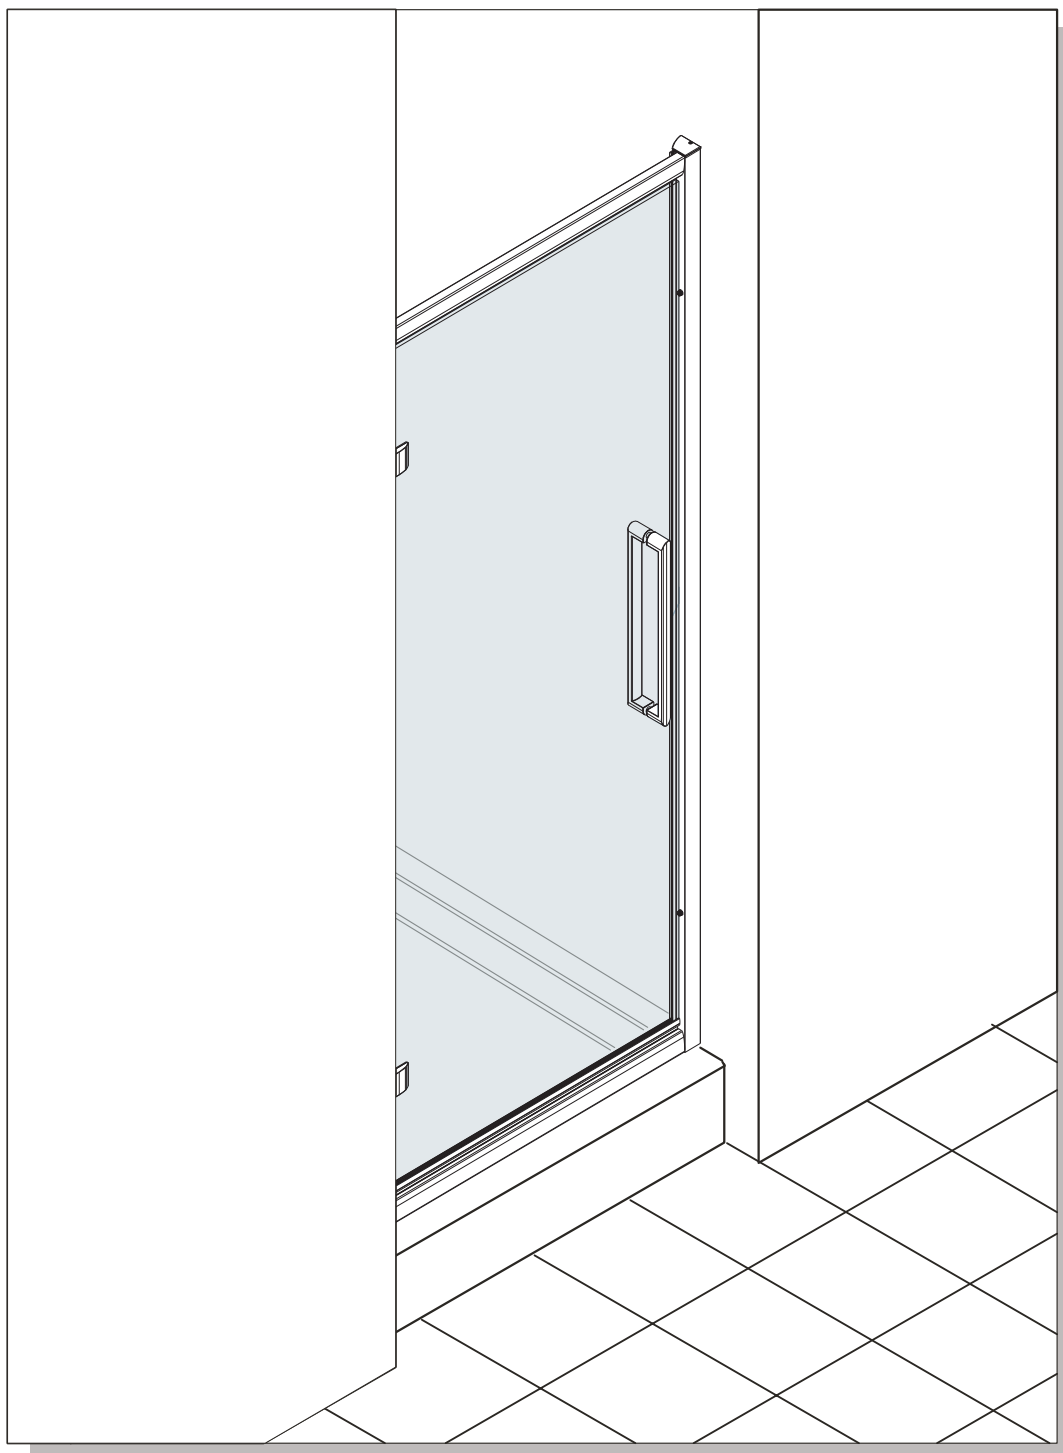

COMPONENTS AND BOX CONTENTS





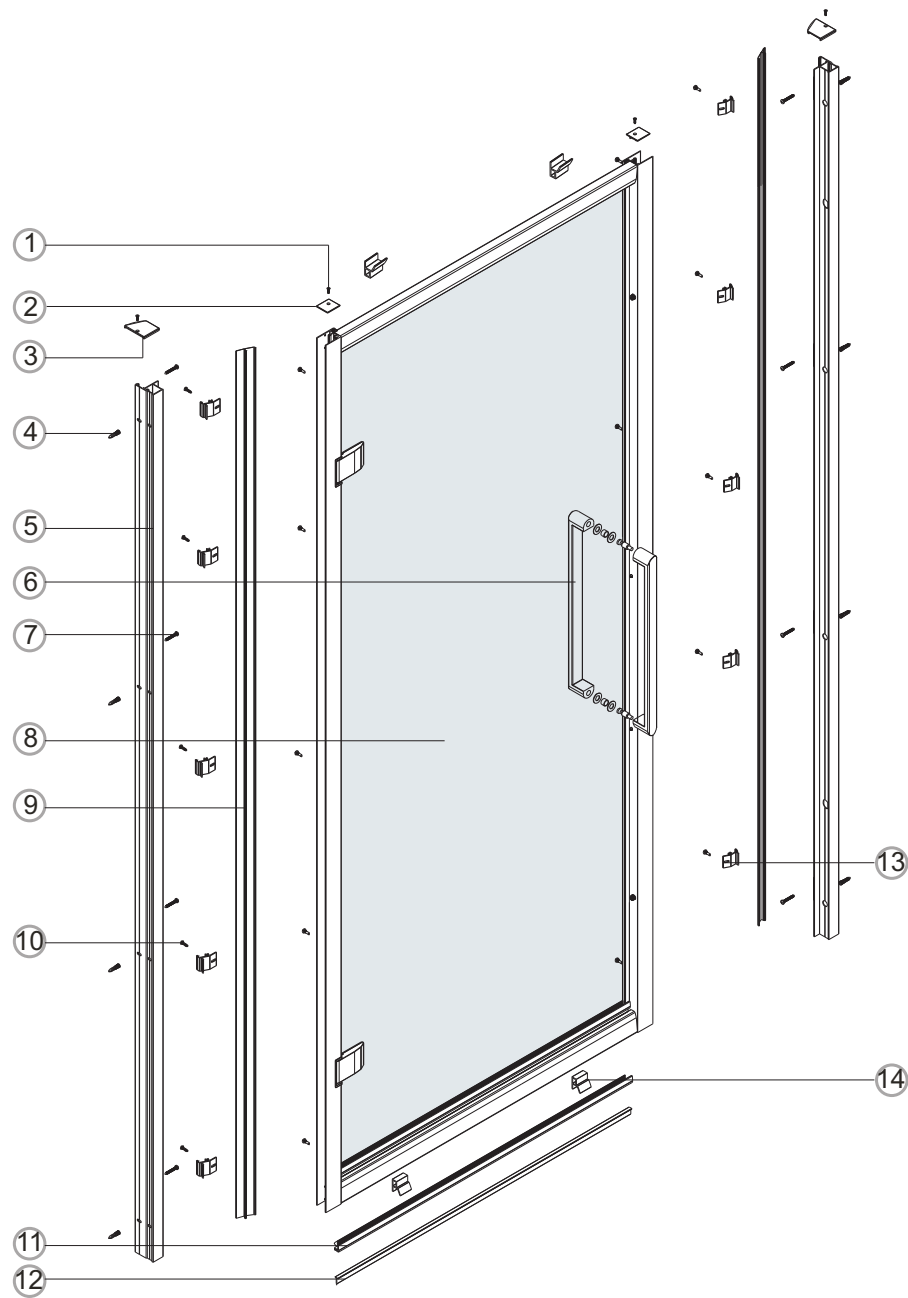


No.	Description	Qty	Part No.
1	Wall profile cover caps screw	4	8S410045
2	Upright profile cover cap	2	8SSJ035L/R
3	Wall profile cover cap	2	8SSJ036L/R
4	Wall plug	8	8SSJ066
5	Wall profile	2	8SALMJ9071
6	Handle complete inside & outside	1	8SCU056B
7	Wall fixing screw(4x30)	16	8S410044
8	Moving panel	1	A
9	Trim strip	2	8SAL0002
10	Frame fixing screw(4x12)	10	8S410047
11	Bottom chrome deflector strip	1	B
12	Bottom deflector strip seal	1	8SSJ05605
13	Nylon clip	10	8SSJ037
14	Door spacer	4	8SSJ059

Note: Further part details for fixing kit available on Page 2

FIXING KIT COMPONENTS, TOOLS REQUIRED, SITE CONDITIONS

Fixing Kit components *parts shown are not to scale*

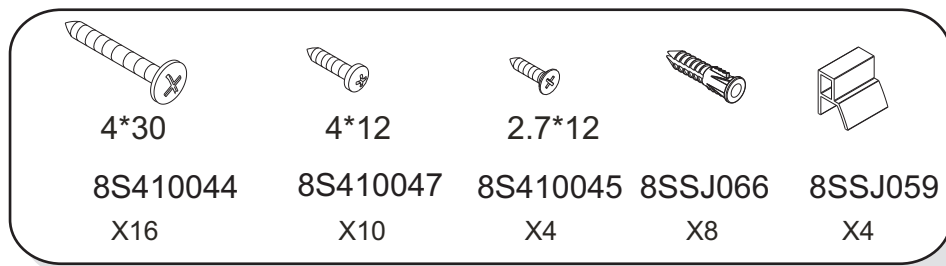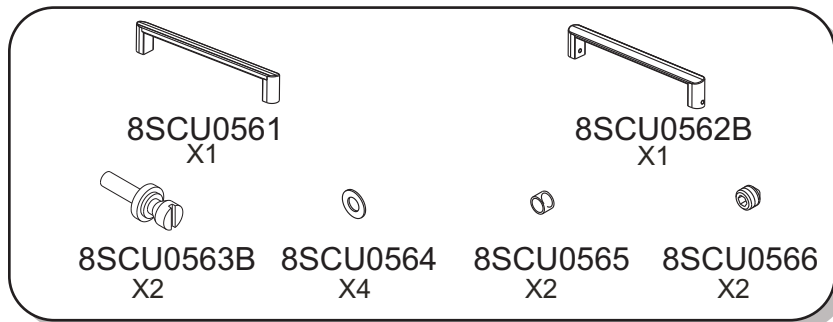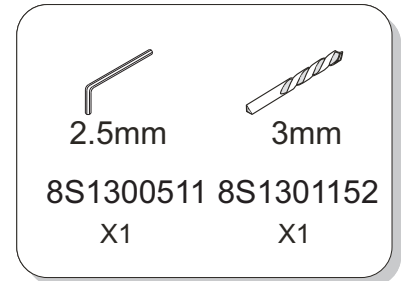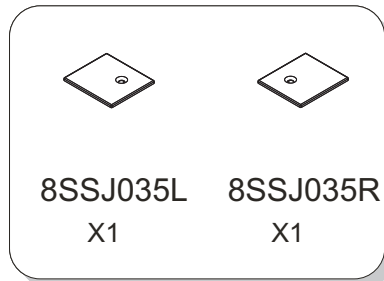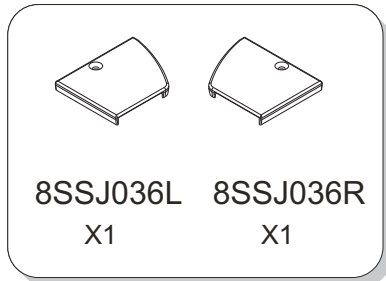


Tools required

- 6mm masonry drill bit
- Power drill
- Quality silicone
- Pencil
- Spirit level and tape measure
- #2 and #1 Philips head screw driver
- Spirit level with horizontal and vertical level indicators
- 2.5mm hex key (for handle)

IMPORTANT - Installation Site

- 1.Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
- 2.The tiling or other wall finishing should be effectively sealed at the tray edges.
- 3.Tiles should extend at least to the corners of the tray and a minimum of 2 metres from the top of the tray.

TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

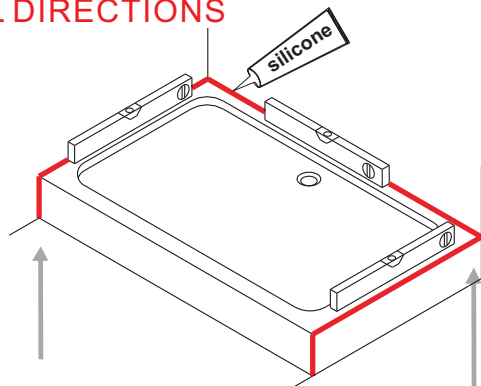

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.

Step 1

Place the wall profile **8SALMJ9071** 20mm from the edge of the tray. Ensure the wall profiles are plumb.

Step 2

Mark the position for fixing the wall profile to the wall.



IMPORTANT: MARK THROUGH THE CENTRE OF THE SLOT.

Step 3


Drill holes with 6mm masonry bit.

Step 4

Insert the wall plugs **8SSJ066**.

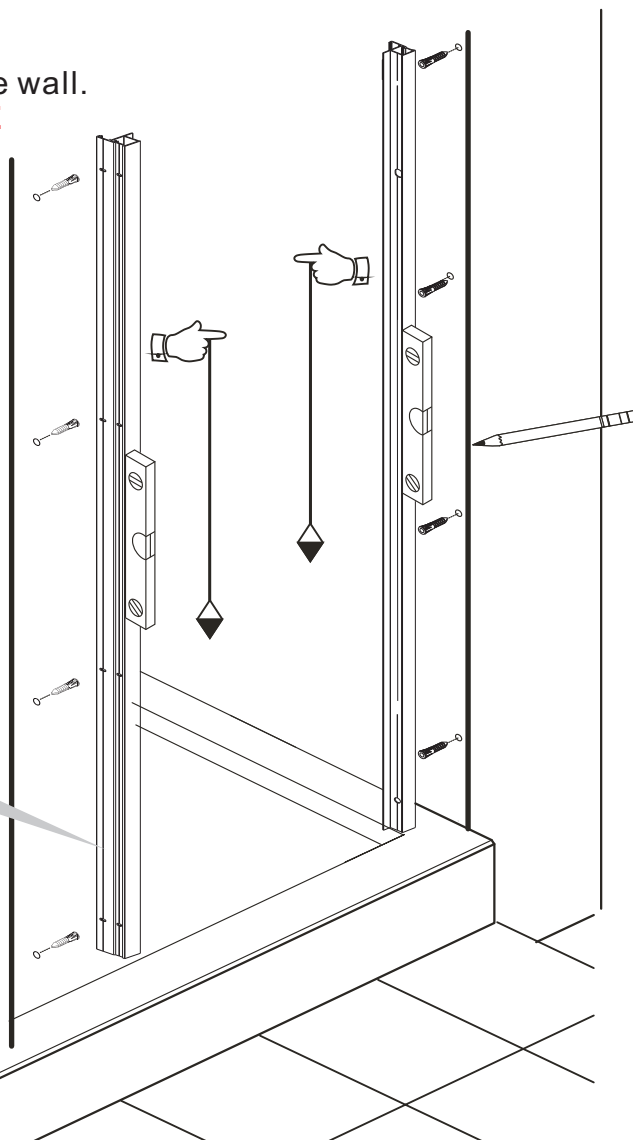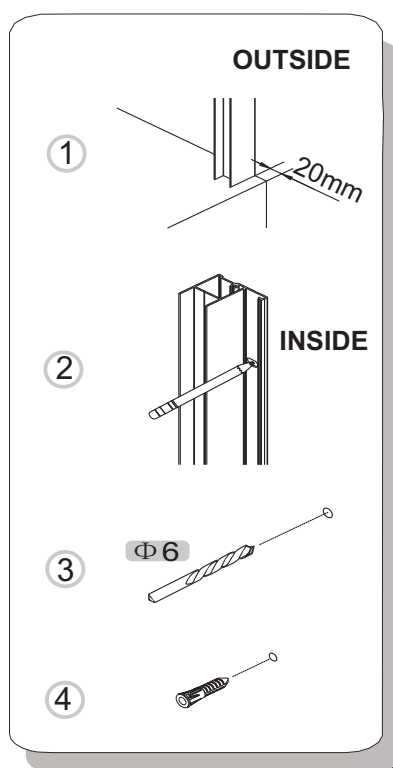

FIXING WALL PROFILES TO WALL

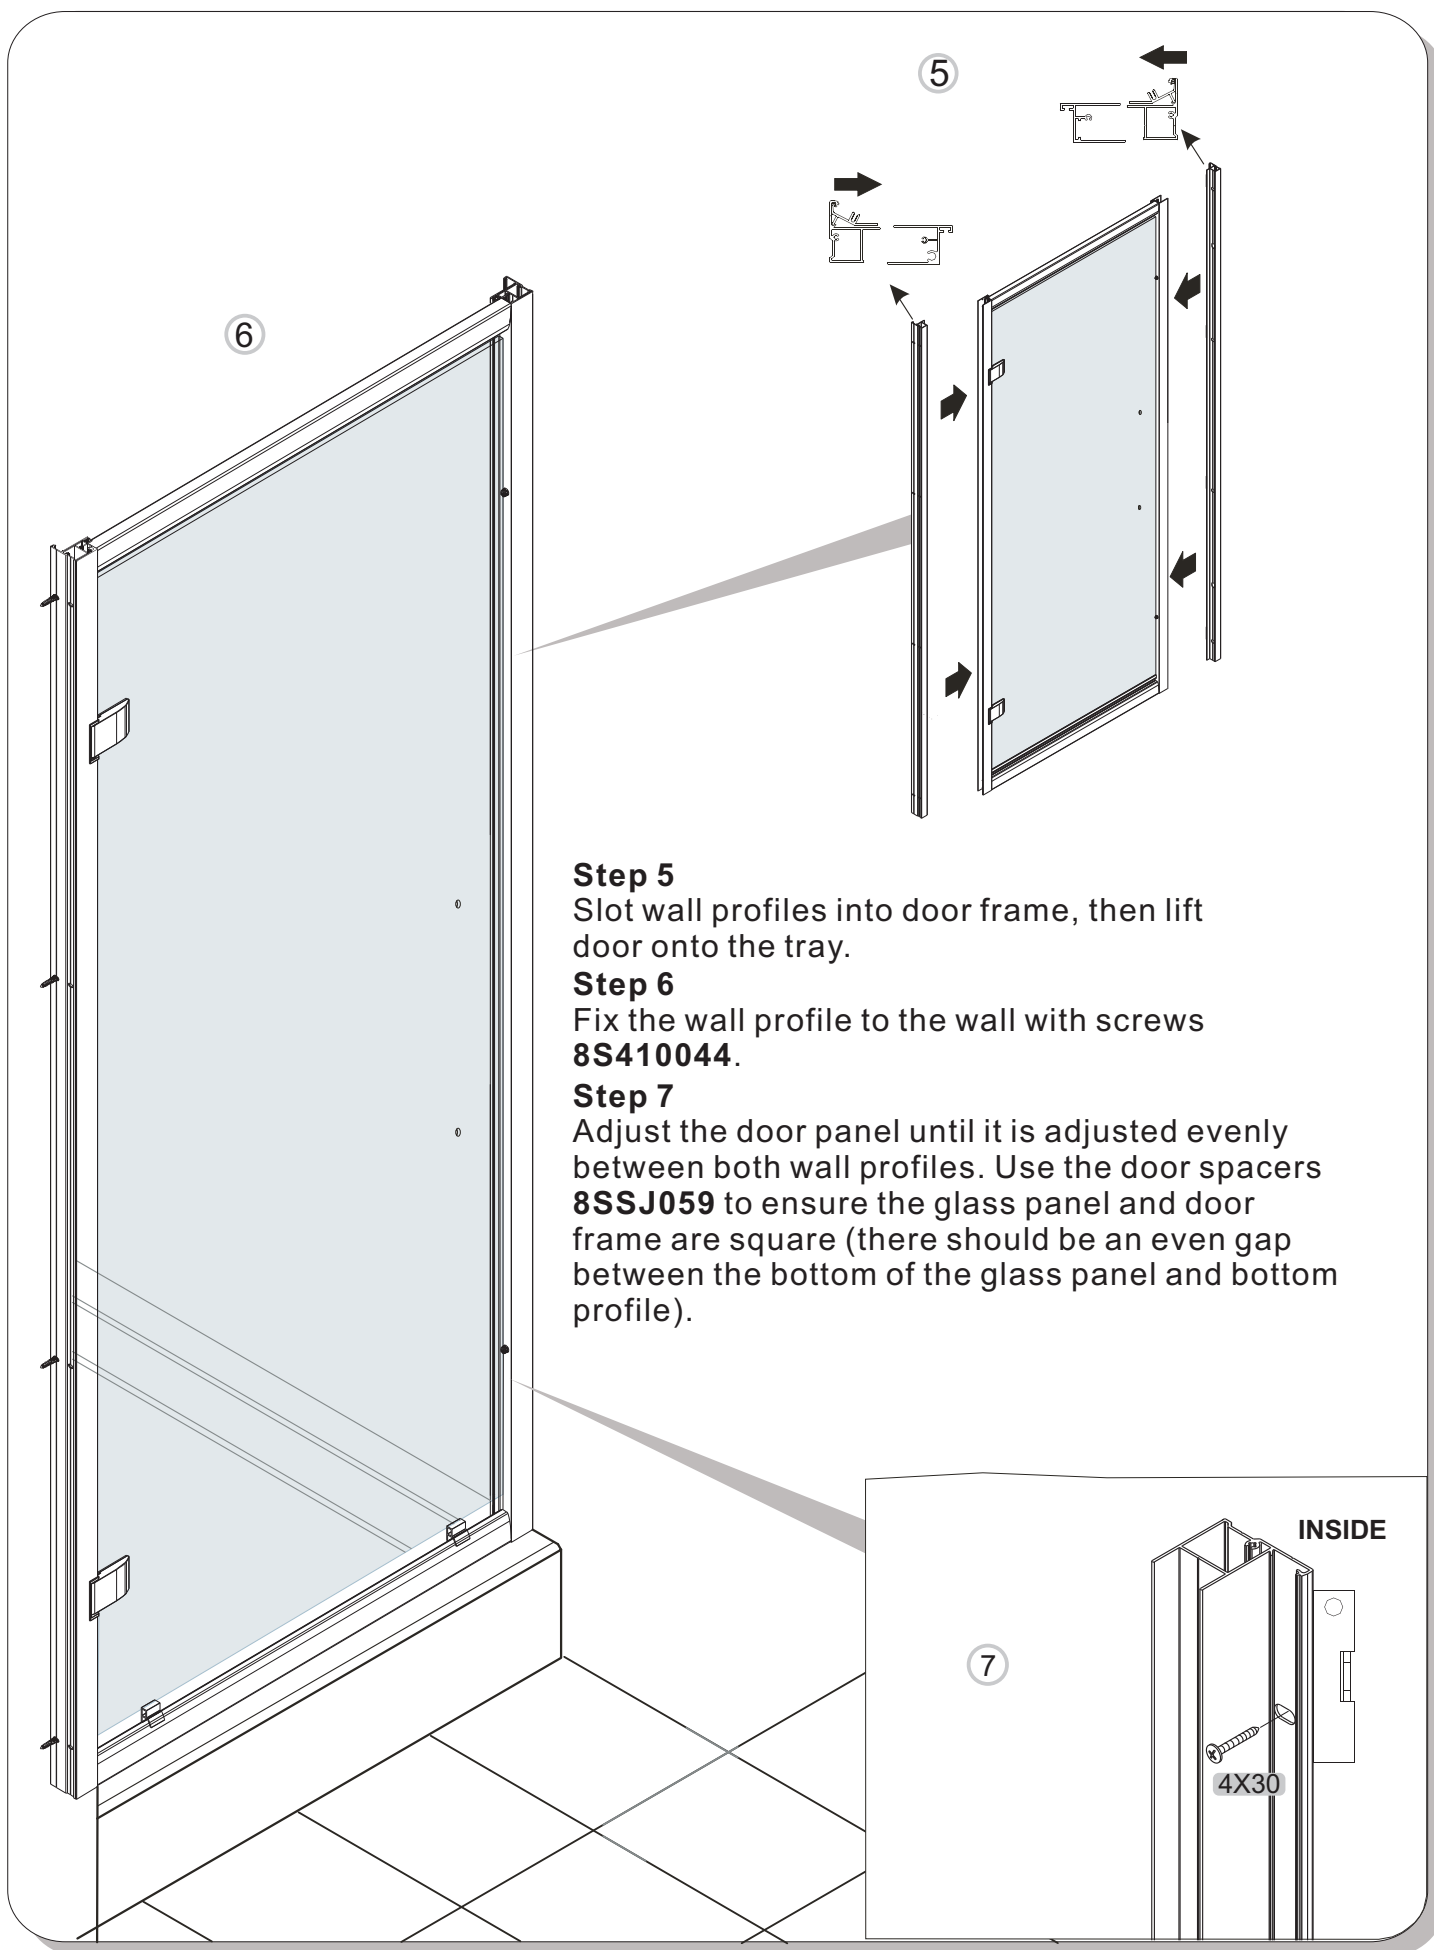

Step 5

Slot wall profiles into door frame, then lift door onto the tray.

Step 6

Fix the wall profile to the wall with screws **8S410044**.

Step 7




Adjust the door panel until it is adjusted evenly between both wall profiles. Use the door spacers **8SSJ059** to ensure the glass panel and door frame are square (there should be an even gap between the bottom of the glass panel and bottom profile).

INSIDE

7

4X30

FIXING FRAME TO WALL PROFILES

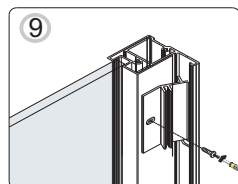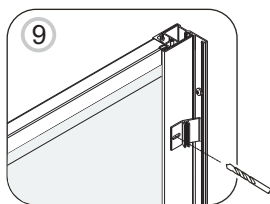
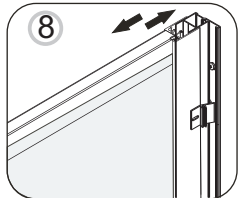


Step 8

Drill 5 equally spaced holes with 3mm drill bit **8S1301152** through the nylon clip **8SSJ037**, wall profile and frame.




Step 9

Fix the frame with screws **8S410047**. The door spacers can now be removed.

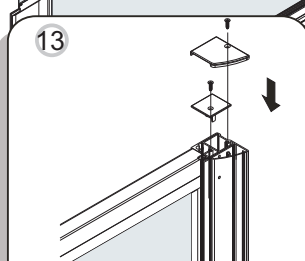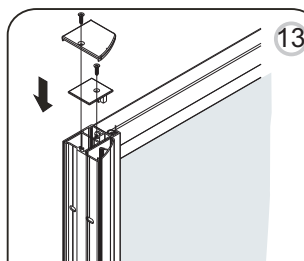

Step 13

Fix the upright cover caps **8SSJ035L/R** and wall profile cover caps **8SSJ036L/R** with screws **8S410045**.

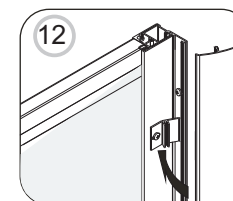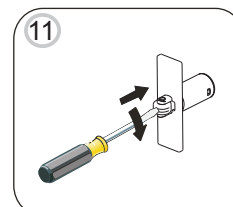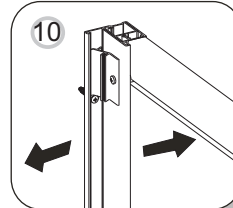

Step 10

The door panel when closing should meet the top and bottom ball catches at the same time. If not, loosen the screw fixing the wall profile to the wall and adjust the top or bottom of each wall profile in or out until the door closes evenly. Tighten the wall fixing screw.

Step 11

The ball catch can be adjusted in and out to ensure the door panel closes smoothly. Do not adjust out the ball catch too much.

Step 12

Attach the wall profile trim strip **8SAL0002**.






FITTING COVER CAPS AND HANDLE, SEALING

Step 14

Assemble handle onto moving panel **A**. Insert the brass screws **8SCU0563B** through the glass from the inside and screw into the outer handle **8SCU0561** (without grub screws). **Do not over tighten**. Ensure all washers are present on both sides of the glass. Then attach the inside handle **8SCU0562B** (with grub screws facing down) onto the brass screw. Tighten grub screws to fix the handle with the hex key **8S1300511**.

Step 15

Put a continuous line of silicone in the bottom of the chrome deflector strip **B**. Ensure the deflector is to the inside. Slot up fully onto the bottom of the glass panel and ensure it is even on both ends. **TIP:** Use a strip of tape on each end to hold the seal onto the glass panel. The tape can be removed after 24 hours.

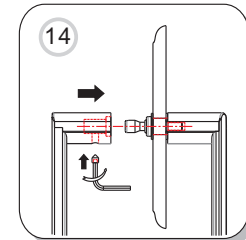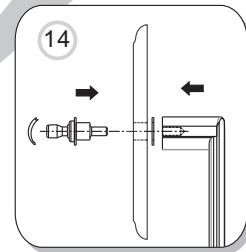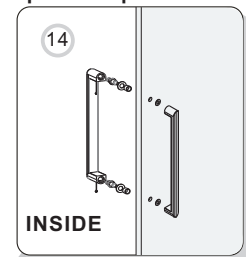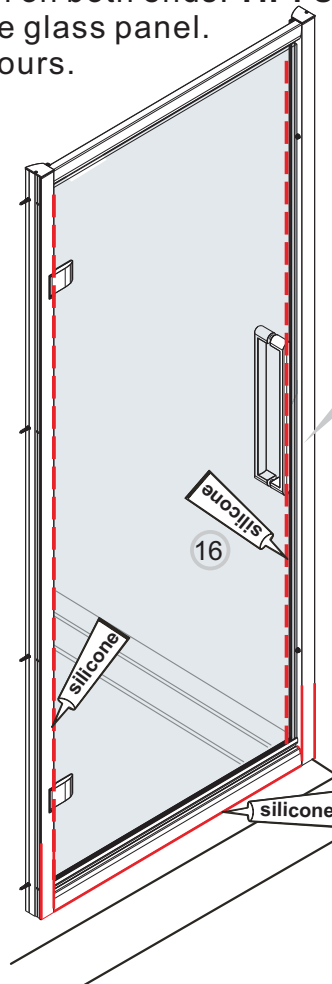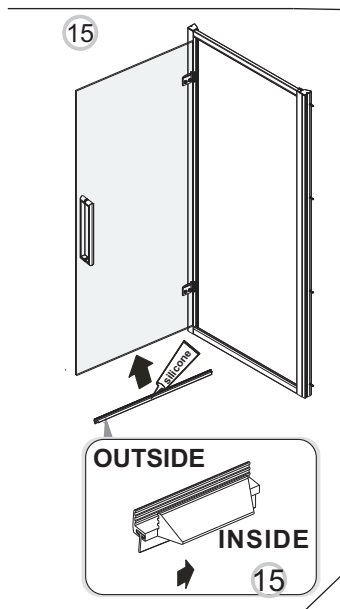

Step 16

Use a quality silicone sealant to seal the finished door.

Sealing Inside

Seal top to bottom on the **INSIDE** between the wall profile and the wall.

Note: Do not apply sealant on inside on tray.

Sealing Outside

Seal only along bottom rail on the **OUTSIDE** between profile and the tray and approx 50mm up between the wall profile and the wall.

Seal also where bottom profile and upright profile join and also where wall profiles and frame profile overlap 50mm up.



24 HRS
DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING

SERIES 8 HINGE DOOR

WE ARE SURE YOU WILL BE PLEASED WITH YOUR NEW MERLYN SHOWER DOOR.

Where a shower door has been installed contrary to these instructions, Merlyn cannot accept responsibility for any loss or damage, however caused, and any on-site service may incur a charge.

www.merlynbathrooms.com

FAILURE TO FOLLOW THE INSTRUCTIONS CORRECTLY MAY INVALIDATE YOUR GUARANTEE

Trouble Shooting Guide

Hinge Door



- ① Do the finished measurements on the tray comply with the adjustments listed in the product specifications book?
- ② Is the tray level and secured? (See page 3)
- ③ Are the wall profiles stepped in the recommended 20mm? (See step 1)
- ④ Are the wall profiles plumb, checked with a plumbing line/spirit level? (See step 1)
- ⑤ Is any part of the enclosure overhanging the outer edge of the shower tray? (See step 1)
- ⑥ Is the door closing evenly on the ball catches? (See step 11)
- ⑦ Is the bottom deflector strip seal at the bottom of the door intact? (See step 15)
- ⑧ Is the unit correctly sealed with silicone? (See step 16)
- ⑨ Check to ensure the door frame is 100% square.