
## 1 DOOR QUADRANT

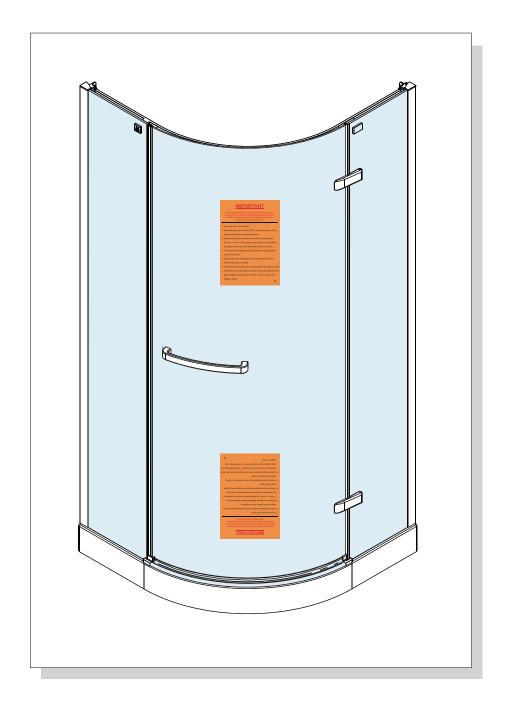

## **INSTALLATION GUIDE**

#### IMPORTANT:


# Please read the complete instructions before commencing fitting.

Make sure the tray is 100% level in all directions. Do Not attempt to install the product unless you can tick all 4 boxes satisfactorily.


•	Check that you have the tools required	
•	Check the installation site is compatible with	
	the sizes of door supplied	
•	Check all the enclosure components are present	
	Check the installation kit is complete	


The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING. DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION.

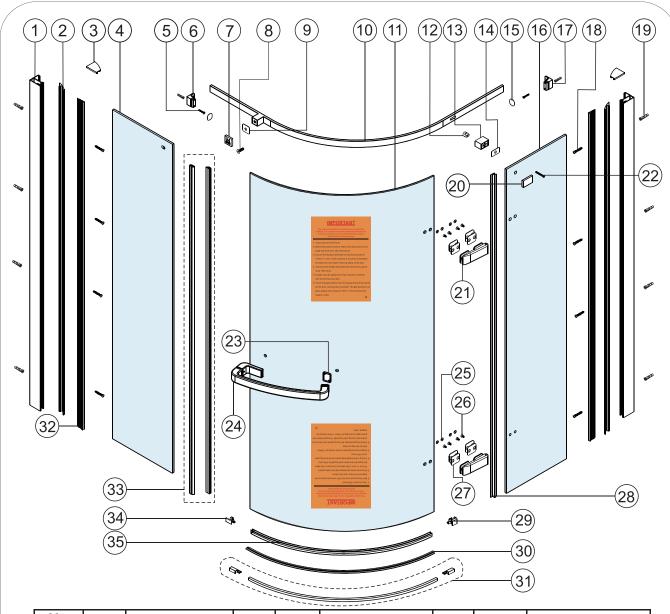

No.	Qty	Part No.	No.	Qty	Part No.	No.	Qty	Part No.
1	2	A06S0058	15)	2	A06S0032	29	1	A06S0038
2	2	A01S0115	16	1	D	30	1	A06S0043
3	2	A06S0060	17	1	A06S0031	31)	1	A06S0069
4	1	Α	18)	8	A06S0049	32	2	A01S0154
5	2	A06S0048	19	10	8SSJ066	33	1	A06S0044N
6	1	A06S0030	20	1	A06S0082	34)	1	A06S0037
7	1	A06S0081	21)	2	A06S0010	35	1	A06S0003
8	1	A06S0021	22	1	A06S0028			
9	1	A06S0020	23	1	A06S0016			
10	1	В	24)	1	A06S0015			
11)	1	С	25)	8	A06S0012			
12	1	A06S0023	26)	8	A06S0013			
13)	1	A06S0024	27)	8	A06S0011			
14)	1	A06S0025	28)	1	A06S0041N			





A06S0060 L/R



 $\times 1$ 

A06S0030



A06S0031 A06S0032  $\times 2$ 








A06S0039  $\times 3$ 



A06S0062 A06S0063  $\times$ 2

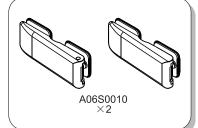



 $\times 1$ 


A06S0081



A06S0021




A06S0020



A06S0037 L/R  $\times 1$ 




A06S0038 L\R  $\times 1$ 



A06S0066 L/R ×2





A06S0023

A06S0024



A06S0025



A06S0082

