

NSBS1 & NSBSR1 - INSTALLATION GUIDE

PLEASE CHECK CAREFULLY PACKING LIST TO ENSURE THAT ALL PARTS ARE INCLUDED.

STRAIGHT GLASS SCREEN PANEL ASSEMBLY	x1
STRAIGHT RETURN GLASS PANEL	x1
ADJUSTABLE WALL CHANNEL	x1
MAGNETIC SEAL	x1
90° TOP BAR CONNECTOR (520 x 19 x 0.7)	x1
BOTTOM WATER SEAL (180mm)	x1
NSBSR1 ONLY - STAINLESS STEEL STRAIGHT RAIL	x1

WALL PLUGS	x4
4mm x 30mm SCREWS	x4
4mm x 10mm SCREWS	x3
SCREW COLLAR	x3
SCREW COVER CAP	x3
HINGES	x2

Fig.1

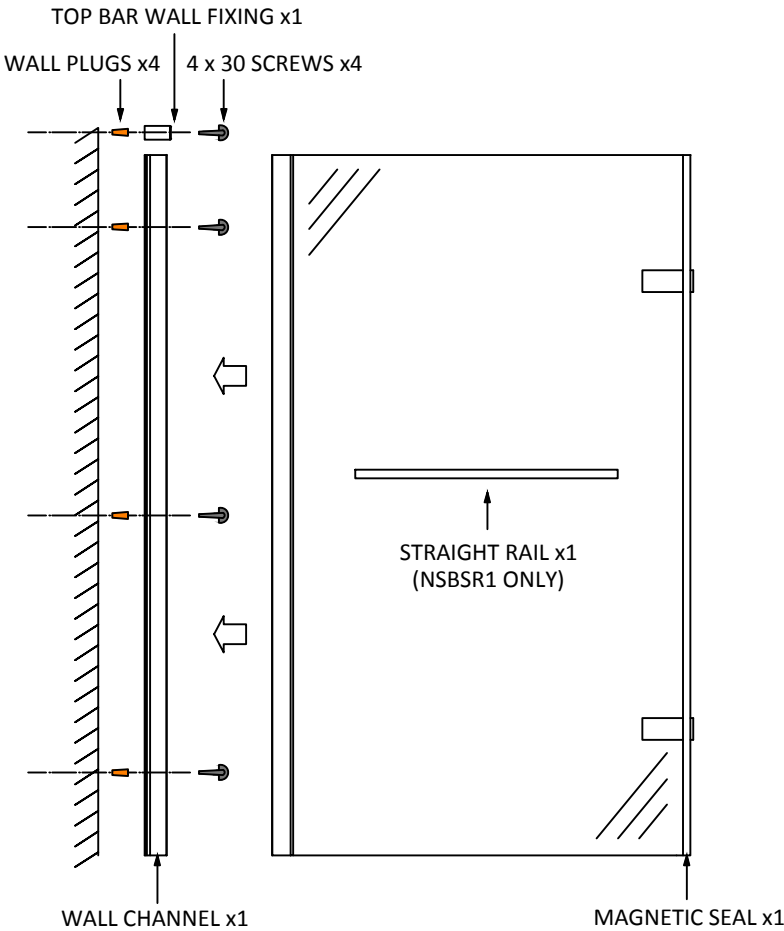


Fig.2


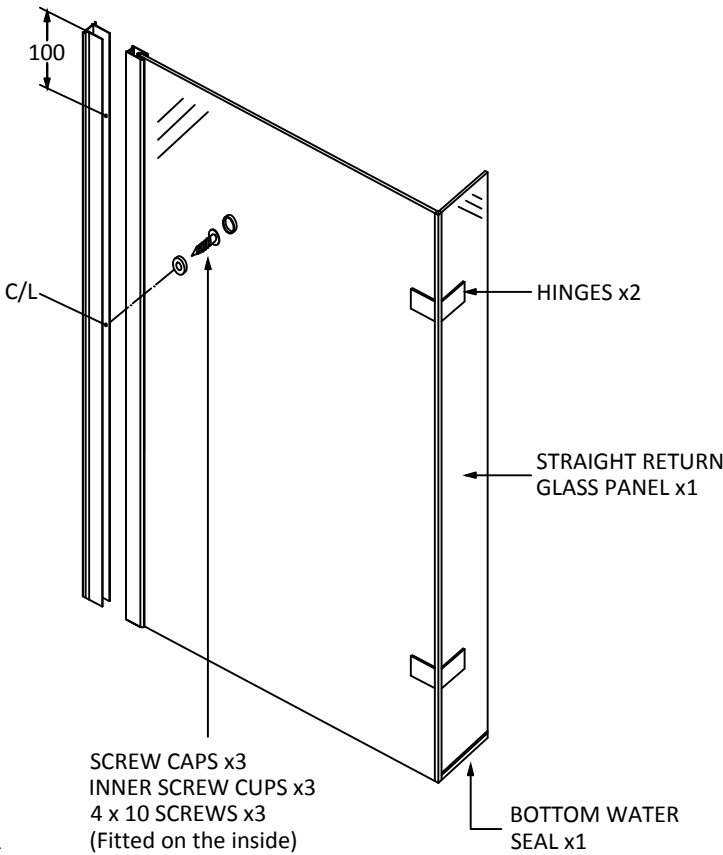


Fig.3

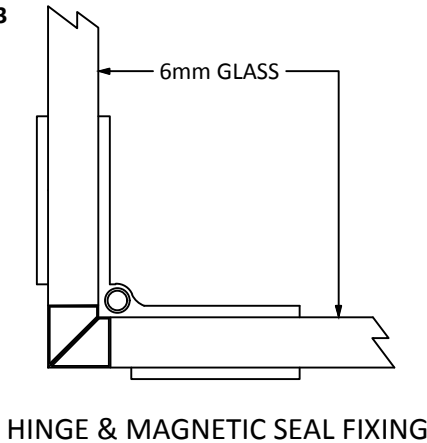

NSBS1 & NSBSR1 Square Shower Bath Screen (Hinged)

Fitting Instruction

Installation Steps:

1. Insert the large screen side pillar into the aluminium wall channel.
2. When the bath screen has been aligned, mark the position of the wall channel on the wall. Remove the screen, re-align the wall channel and mark the wall channel screw hole positions on the wall.
3. Using a 4mm masonry drill bit, drill 3 x 35mm deep holes in the marked screw positions on the wall.
4. Insert the 3 x wall plugs into the holes and using a rubber hammer knock them in until they fit flush with the wall.
5. Attach the adjustable wall channel using 3 - 4mm x 30mm screws.
6. Insert the side pillar into the wall channel.
7. Adjust the position of the bath screen assembly until it is level (parallel) with the bath.
8. From inside of the bath screen assembly, make a mark on the wall channel approx' 100mm from the top (see fig.2)

Note: The wall channel design, allows for the shower screens to be adjusted so that they can be used on wall surfaces that are not vertical. When marking the hole positions, please check to ensure that the hole drilled will go through both the wall channel and side pillar.

9. Using a 3.2mm diameter HS Twist drill bit, drill one hole through the upper marked hole position. The hole must be drilled through the wall channel & side pillar until it reaches the centre (DO NOT DRILL THROUGH BOTH SIDES)
10. Secure the upper section of the wall channel to side pillar by using 1 x inner screw support cup and 1 -4mm x 10mm screw (DO NOT OVER TIGHTEN)
11. Ensuring that the bath screen is still aligned as required, mark the position of the lower bath screen support screw position approx' 100mm from the bottom of the wall channel.
12. Repeat the fixing method for wall channel and side pillar in the central fixing point.
13. Locate the screw caps x 3 onto the inner screw support cups.
14. Find the right position for the Top Bar wall fixing and drill into the wall as in Step 12. Fix the Top Bar wall fixing with the screw & plug provided.
15. Fit the hinges to the large glass screen with the Allen key supplied. Ensure that the fixing bolts are facing inwards. **DO NOT OVER TIGHTEN**
16. Attach the small glass screen to the hinges.
17. Close the return glass panel against the large bath screen to fit the vertical magnetic water seal. Fit the seal onto the large and small screen edge ensuring that the magnets meet when fully opened. Trim off any excess.
18. Fit the bottom water seal to the underside of the small screen and trim off the excess.
19. Silicone the bottom of the bath screen on the outside at the point where it meets the bath.

With Rail ONLY - Assemble and fix through the holes in the Bath Screen.