



6MM FRAMELESS HINGE 1 DOOR QUAD

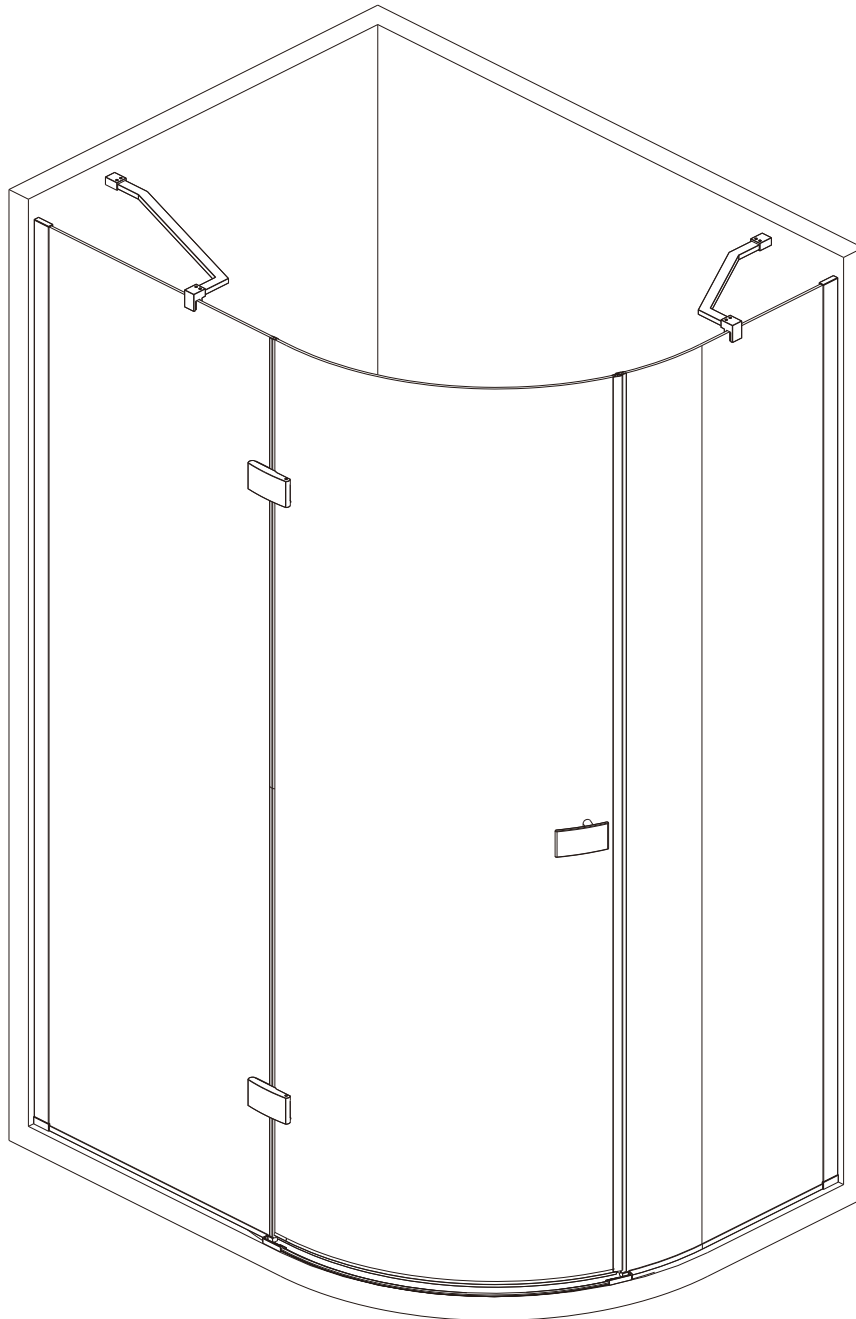


ASSEMBLY INSTRUCTIONS - DRAWING

NB: ALL MEASUREMENTS + COMPONENT SIZES QUOTED ARE IN MM.




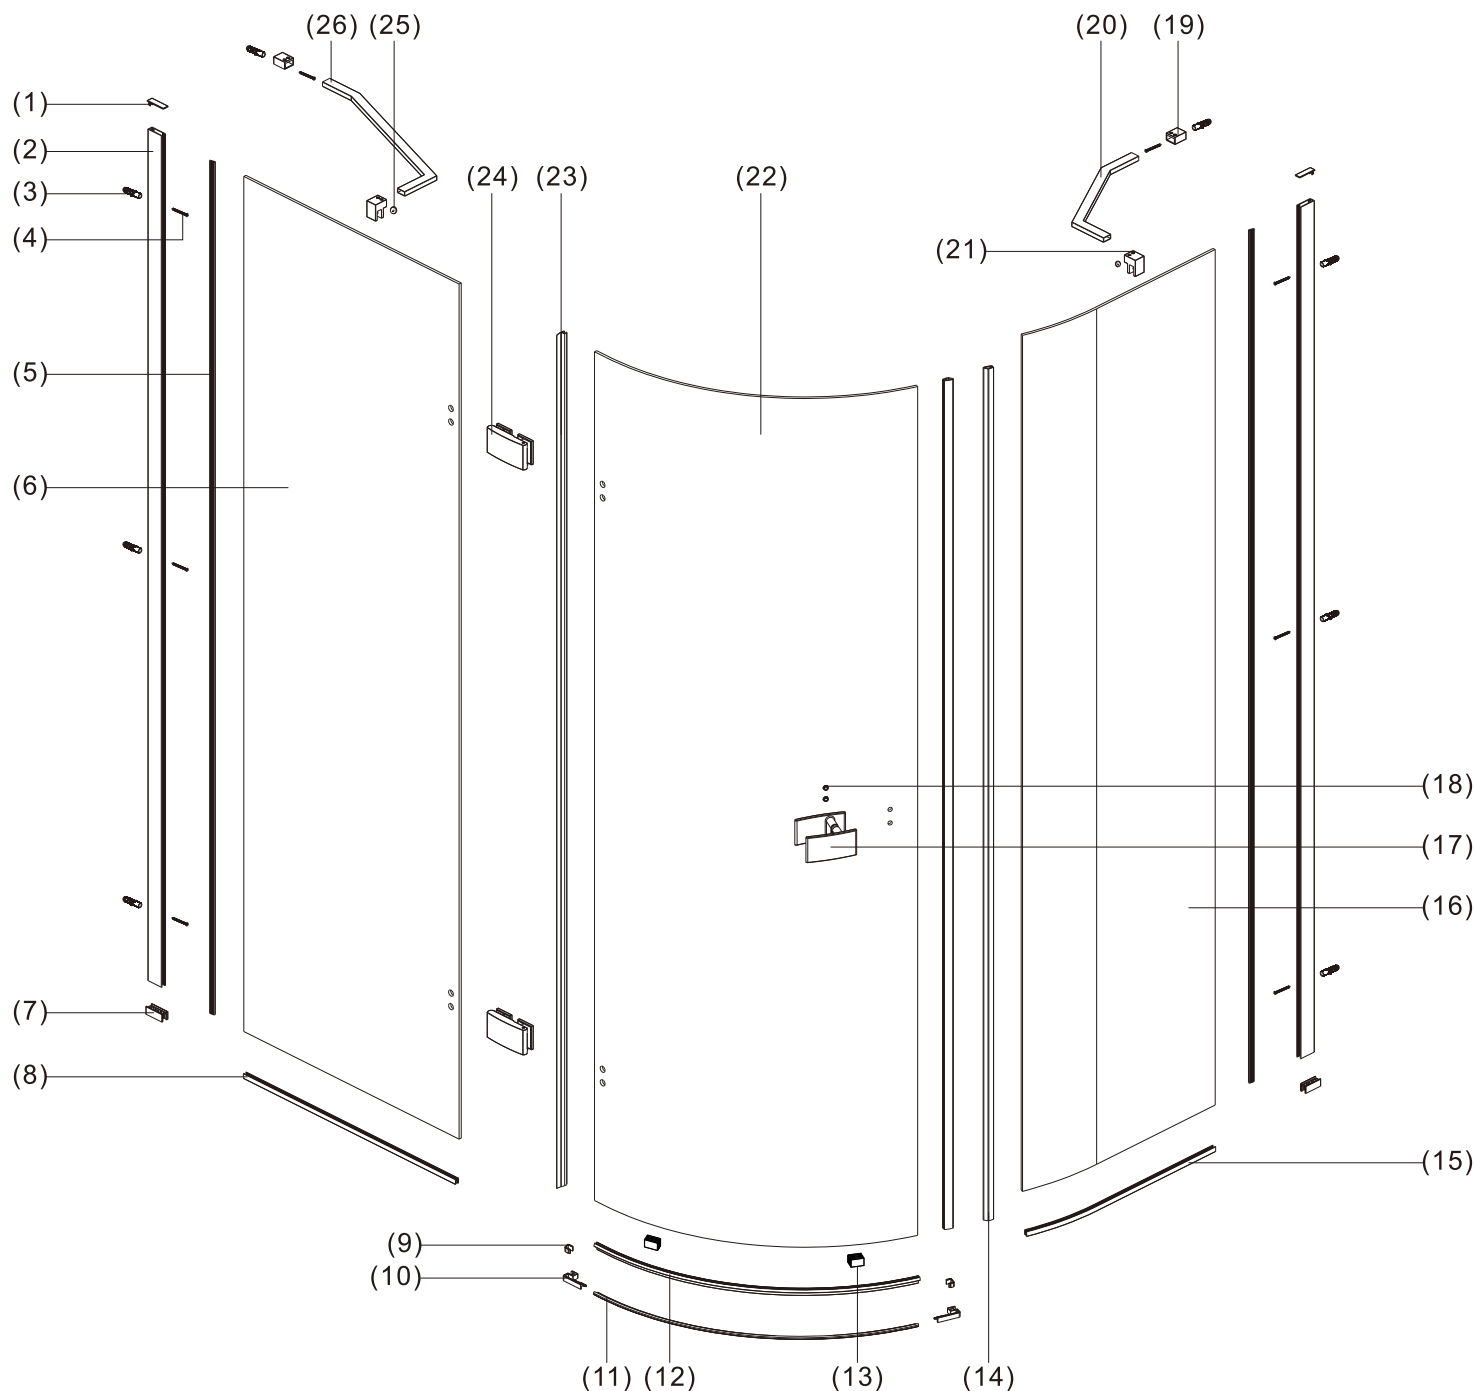


Parts List				Parts List			
1	N011156	Wall Profile Cover Caps	2	14	CT0046-6H-GT	Magnet Seals	2
2	LCT161	Wall Profiles	2	15	LCL048	Bottom Drip Strip B	1
3	N01135	Wall Plugs	8	16	B	Fixed Panel B	1
4	M20430	Screws ST4x30	8	17	M00075	Handle	1
5	JT0228-3.0T	Wedge Gasket Seals	2	18	N01521	Handle Cover Caps	2
6	A	Fixed Panel A	1	19	M05102	Wall Brackets	2
7	N011157 / N011158	Bases Of Wall Profile L&R	2	20	M03180	Support Bar A	1
8	LCL048	Bottom Drip Strip A	1	21	M05542	Glass Clamps	2
9	N01464	Glass Clip	2	22	C	Moving Panel	1
10	N01465/N01466	Bottom Strip Caps L&R	2	23	JT0164-6-15GT	Seal For Moving Panel	1
11	LR12345	Runa Rail	1	24	M02043	Hinges (Include Screw Caps)	2
12	JT0163-6-10/9GTS-R	Bottom Seal	1	25	N01046	Glass Clamp Cover Caps	2
13	N01882	Support Blocks	2	26	M03182	Support Bar B	1

FIXING KIT COMPONENTS


x8  N01135	x8  M20430	x2  N01882	x2  N01464	x2  N011156	x2  N011157 / N011158		
x2  M05102	x1  M03180	x1  M03182	x2  M05542	x2  N01046	x1  M00075	x2  N01521	x2  M02043
x2  N01465 / N01466		x1  F04009					

TOOLS REQUIRED


DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Flat-head Screwdriver	
Pencil		Cross head Screwdriver	 PZ1
Ø6mm,Ø3mm Drill bit		Mallet	
Ø2,Ø2.5,Ø3,Ø4 Allen Key		Silicone Sealant	
Spanner			

STEP 1 DRAWING TO SHOW CORRECT SHOWER TRAY INSTALLATION

YES ✓



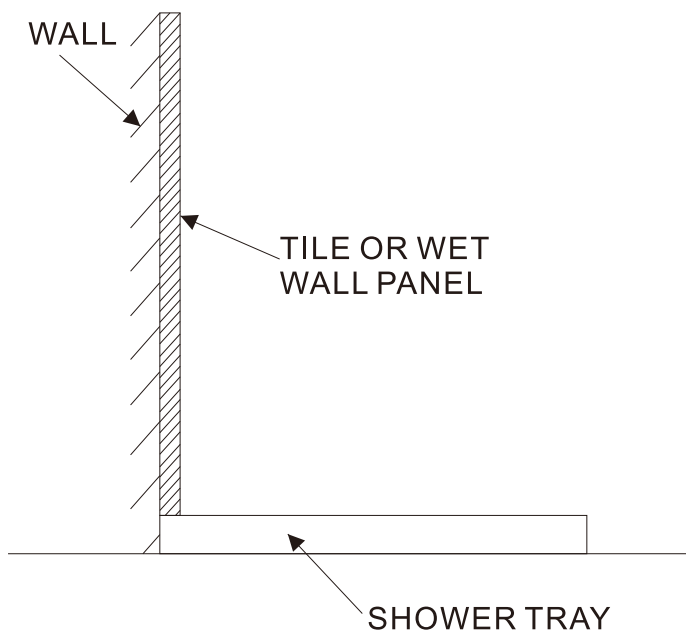


NO ✗

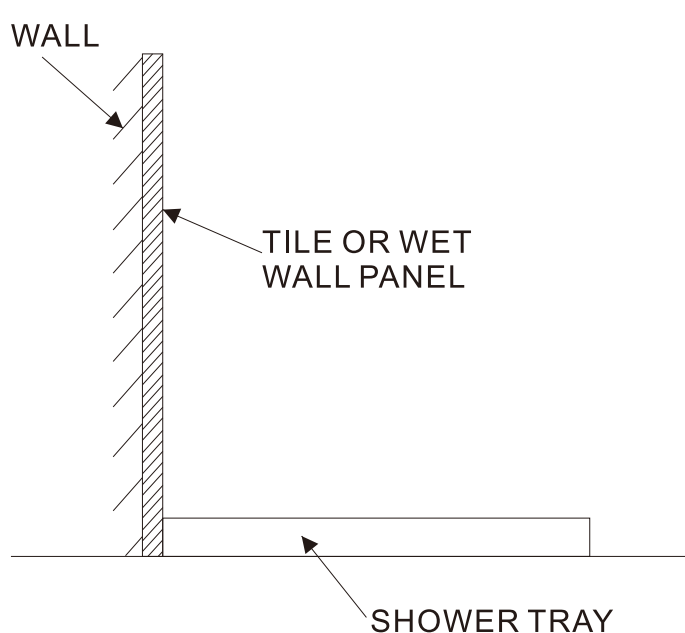







STEP 2 TRAY TO BE LEVEL

MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING THIS SHOWER PANEL / DOOR, AND THAT SILICONE IS APPLIED ON ALL SIDES WHERE THE TRAY MEETS THE TILES / WET WALL PANELS.


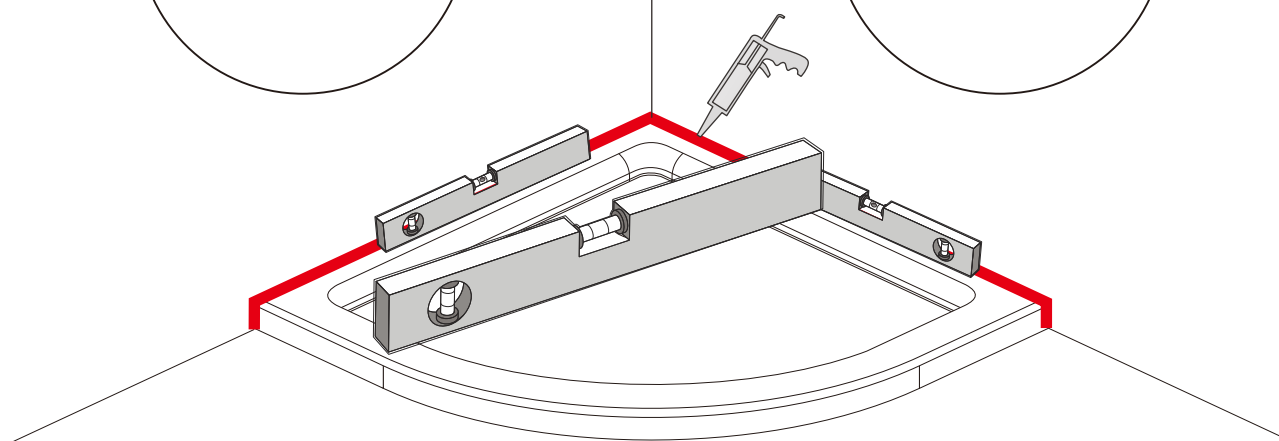
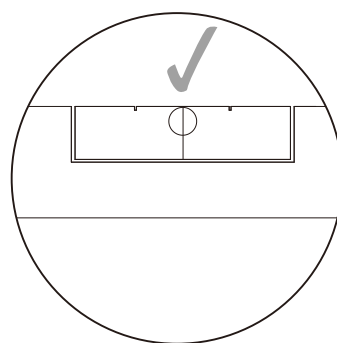
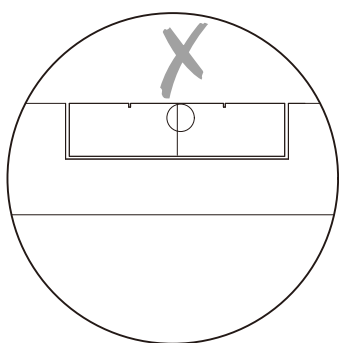


ASSEMBLY QUADRANTS HINGE DOOR PLEASE FOLLOW BELOW STEPS



STEP 3 FITTING WALL PROFILES TO THE WALL

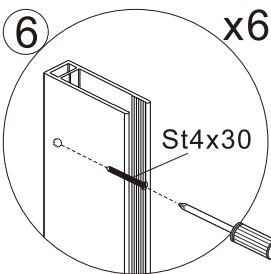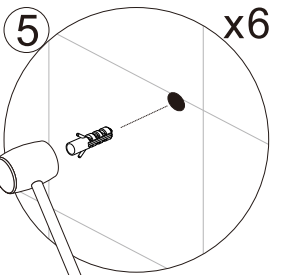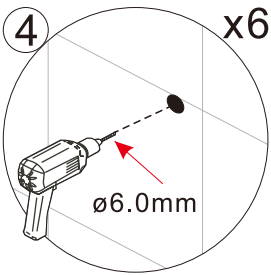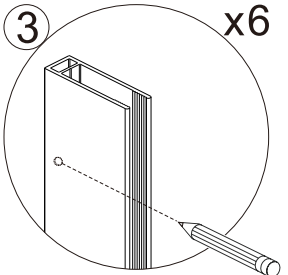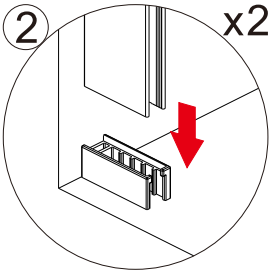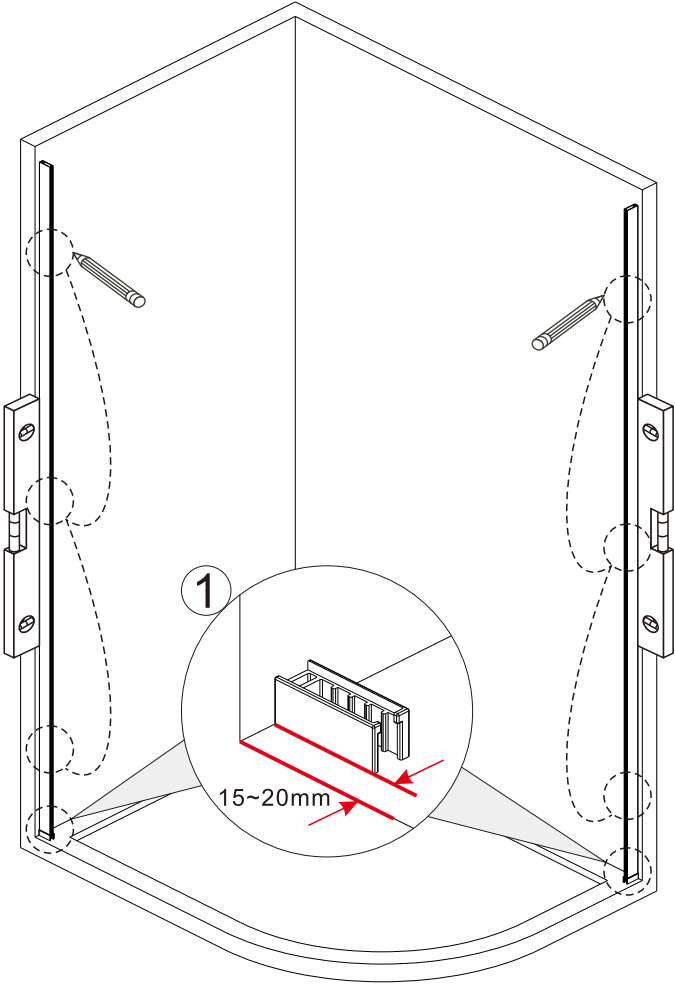



STEP 4 FITTING THE FIXED PANEL A & B

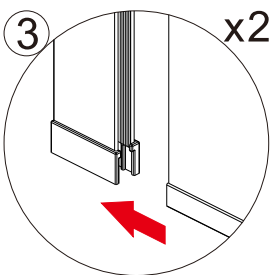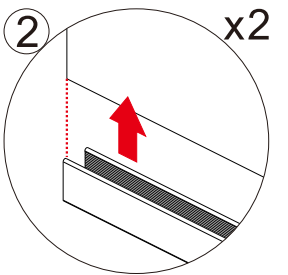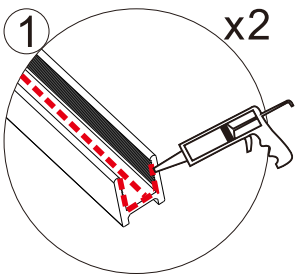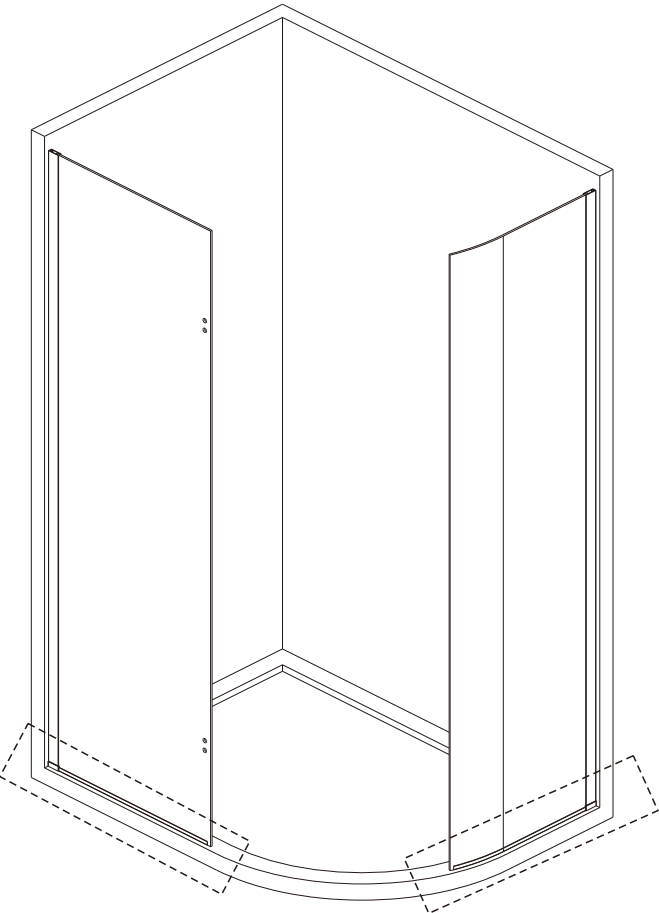






STEP 5 FITTING THE HINGES

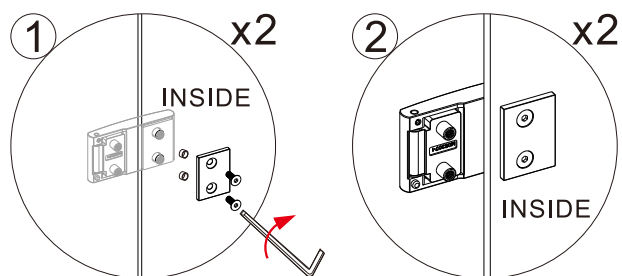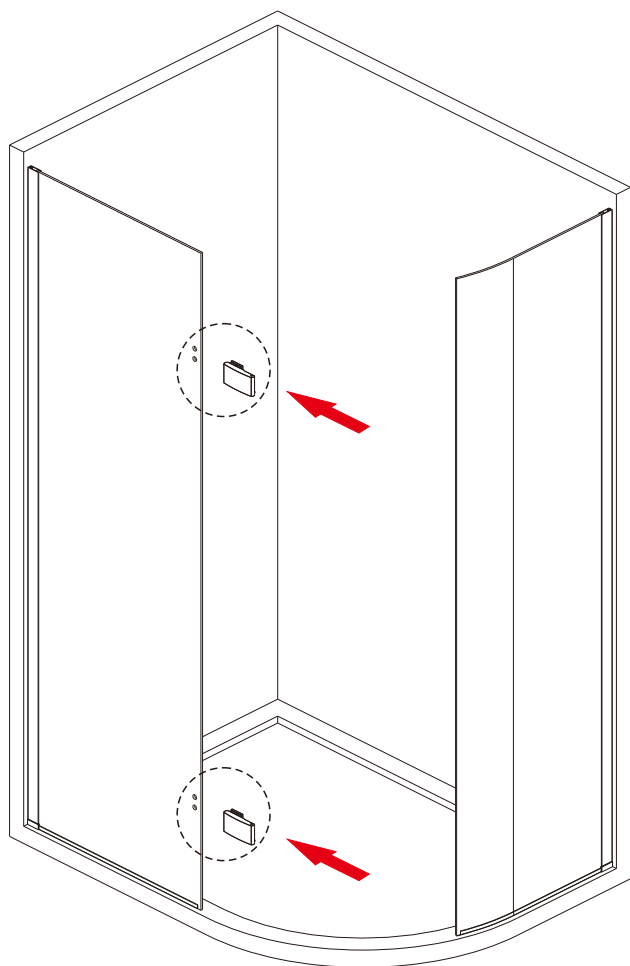






STEP 6 FITTING THE HINGES TO MOVING PANEL

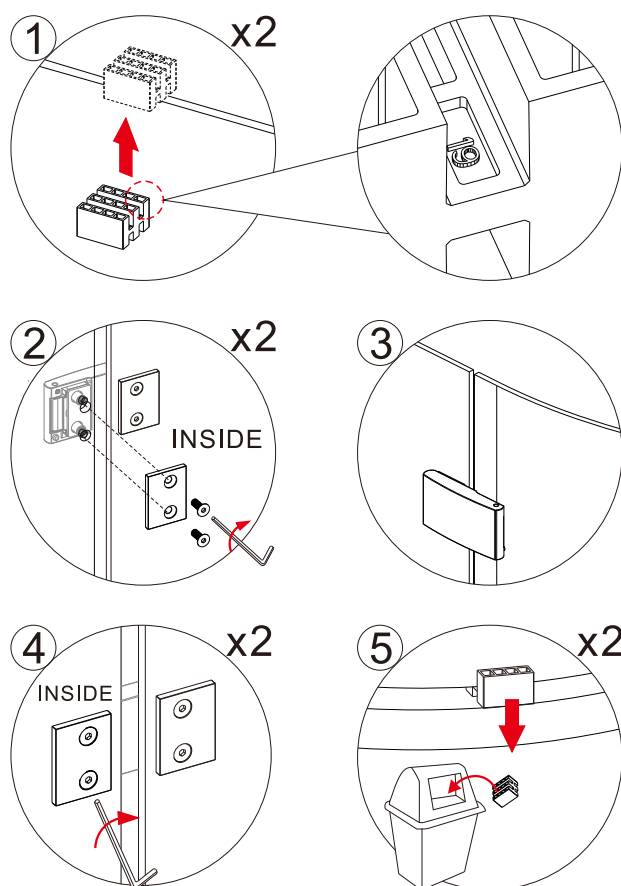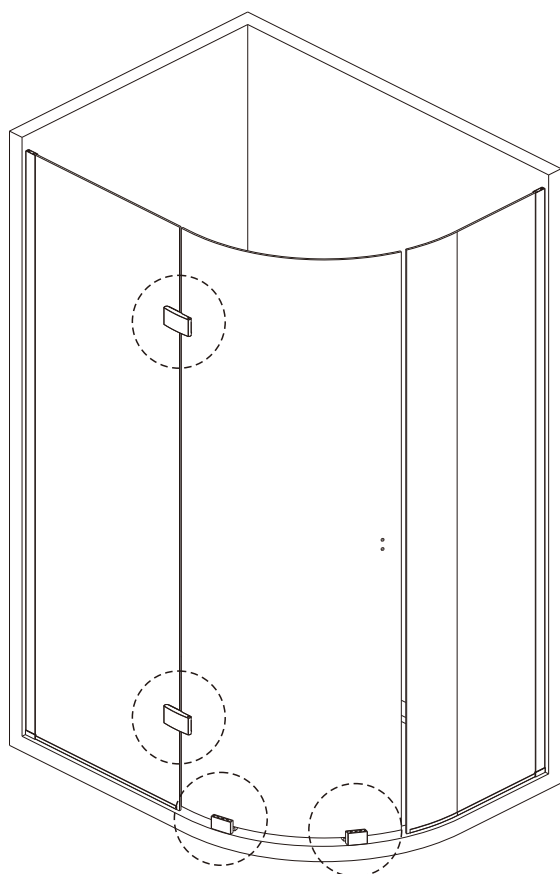



STEP 7 FITTING THE BOTTOM RUNA RAIL

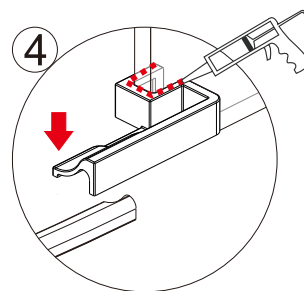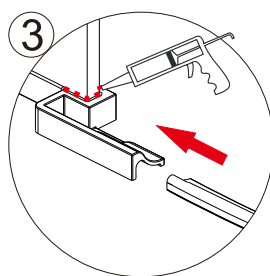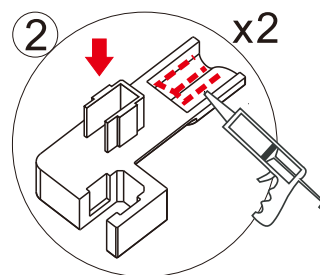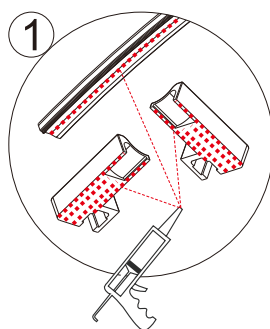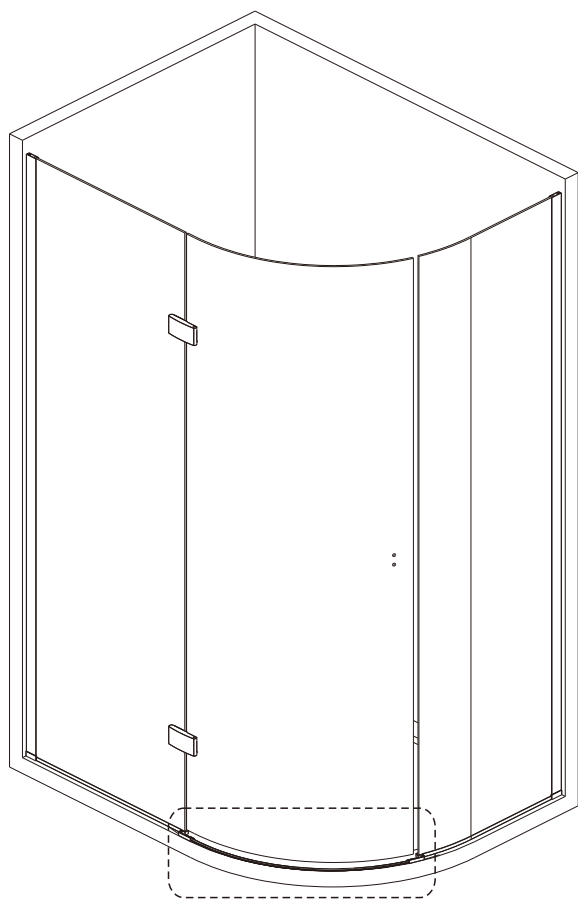


STEP 8 FITTING THE SEALS

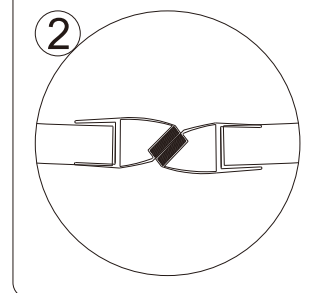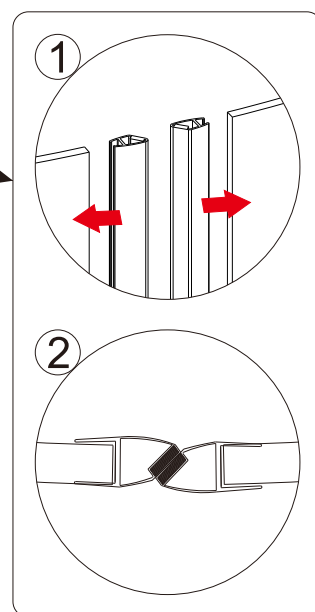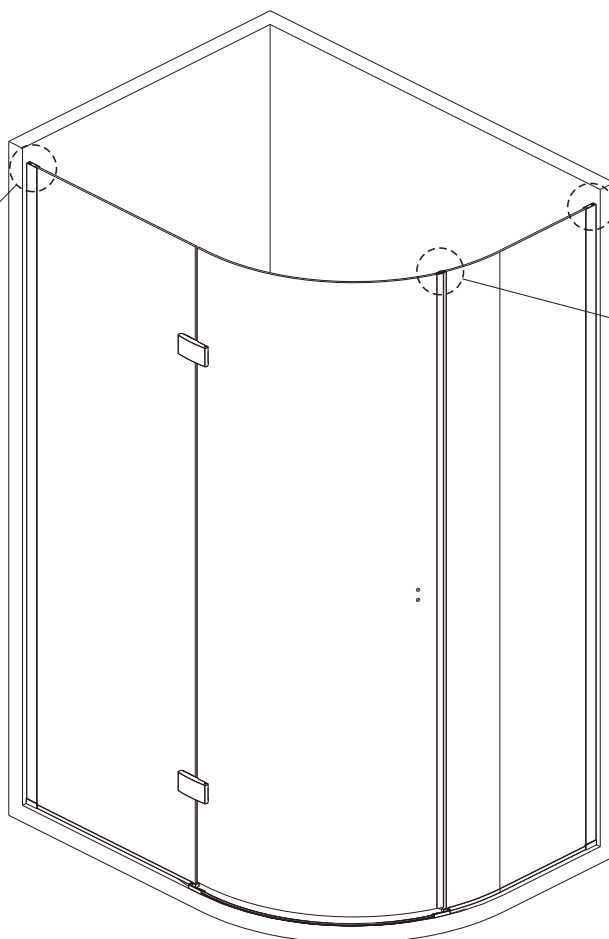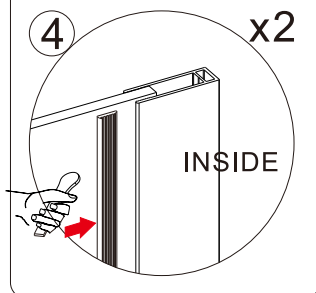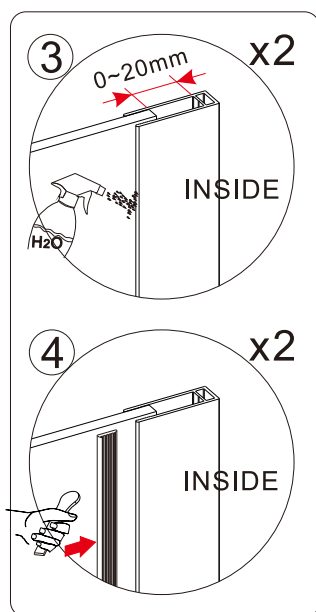

STEP 9 FITTING THE SUPPORT BAR

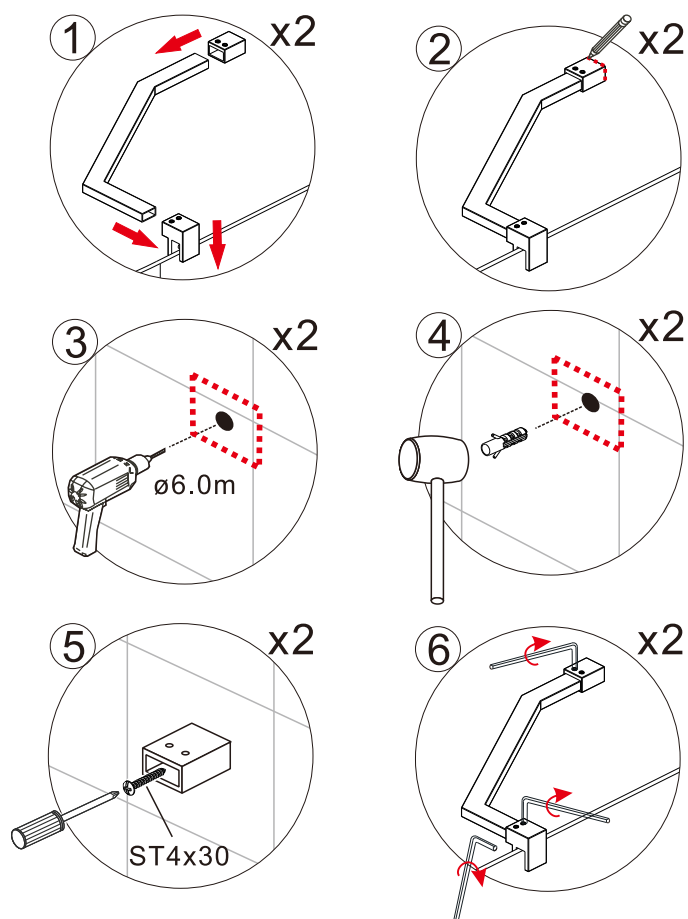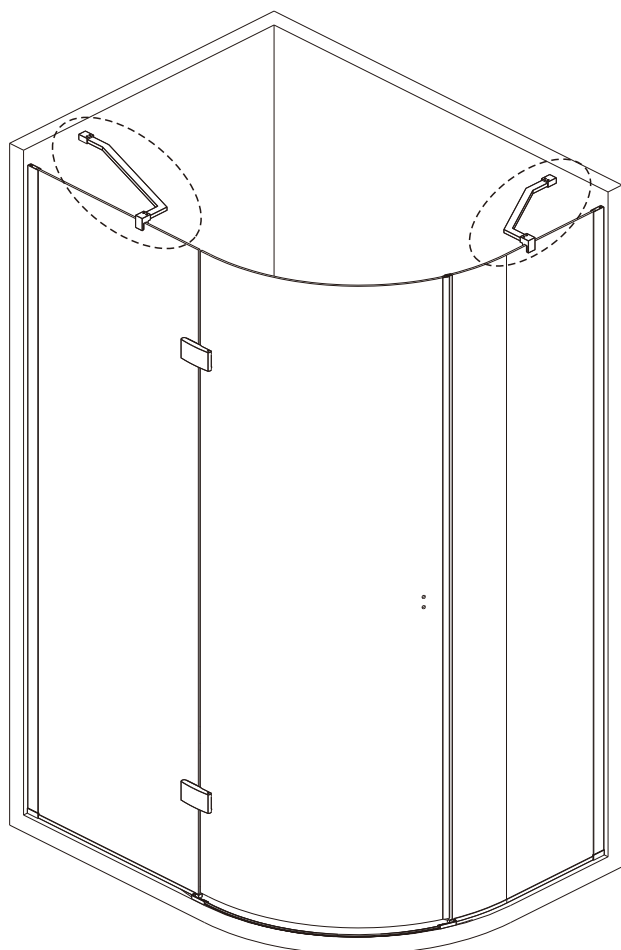

STEP 10 FITTING THE CAPS AND HANDLE

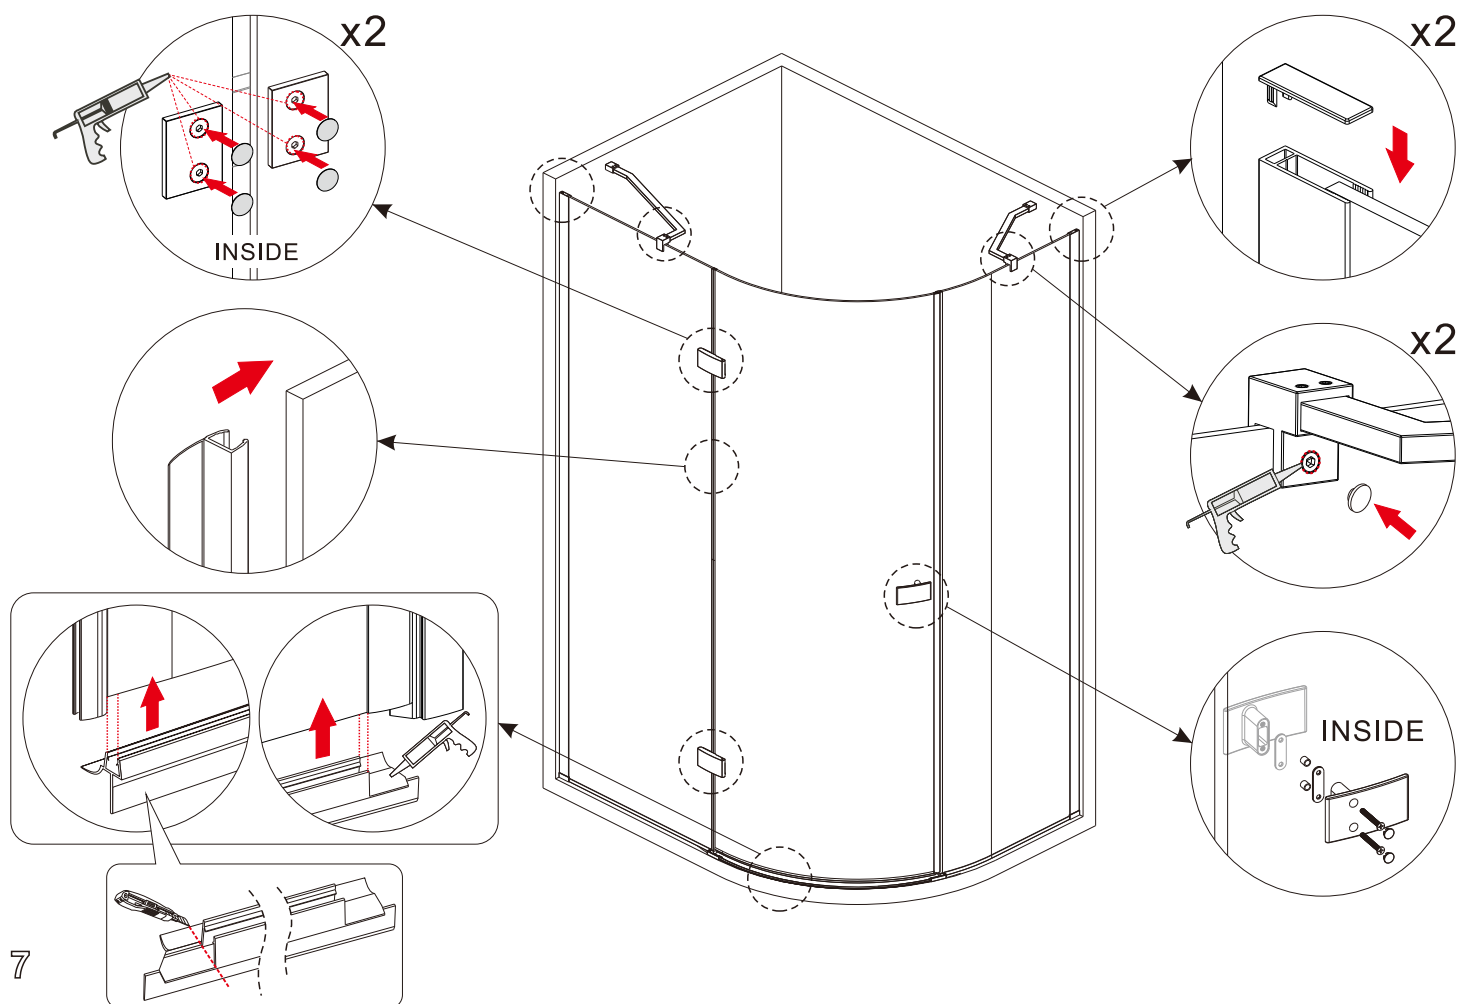

STEP 11 SILICONE TO THE EDGE

