

AQW - 1400 WALK-IN SHOWER ENCLOSURE FITTING INSTRUCTION

1. Fit the shower tray ensuring it is level across all areas (Fig 1).
Apply silicone sealant to the edges of the tray before and after tiling.
Connect any external fitting at this point.
2. Take the wall posts and set 10mm to 15mm, depending on the tile depth, in from the edge of the tray. Using a spirit level ensure that the wall posts are vertical and plumb (Fig 2/3). Mark the hole positions (Fig 4), remove and drill for wall plugs, then fit the plugs.
3. Re-position the posts and secure using the 30mm screws, ensuring that the screw collars are in place and that the angled wall post is against the side wall for the curved panel. Set at the correct angle to follow the profile of the tray.
4. Insert the flat panel into the wall post and the curved panel into the angled post (Fig 5/6). Ensure that the chrome plastic foot is located in the counter sunk area of the tray and fixed to the bottom of the curved panel when installing (Fig 7).
5. Taking care not to scratch the unit, mark and drill two 3.2mm holes 150mm from the top & bottom on the inside of the enclosure through the wall posts and frame (Fig 8). Secure with the 10mm screws, again ensuring that the collars are in place.
6. Depending which hand the enclosure has been installed, fit the adjustable end stop bracket onto the end of the stabilising bar (Fig 9).
Slide the adjustable centre bracket onto the bar and loosely fit the wall bracket on either end of the bar (Fig 10).
7. Place the slotted section of the end stop bracket over the flat glass panel (Fig 11). Slide the centre bracket over the curved panel and place in position.
When everything is plumb and level (Fig 12) mark the position of the wall bracket and secure into position using the screw provided. Replace the complete stabilising bar assembly and secure by tightening the grub screw in the bracket.
12. Finish by fitting the decorative caps supplied and apply silicone down the vertical edges of the wall channel, and the bottom edge between the glass panels and tray.

DO NOT SEAL THE ENCLOSURE ON THE INSIDE OF THE ENCLOSURE!

Figure 1



Figure 2



Figure 3



Figure 4

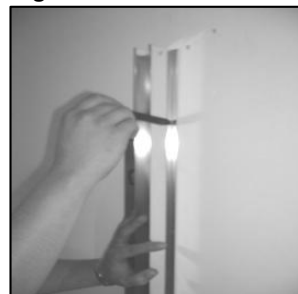


Figure 5

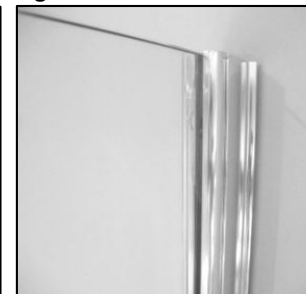


Figure 6

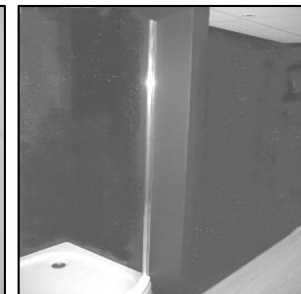


Figure 7



Figure 8



Figure 9



Figure 10




Figure 11



Figure 12



AQW - 1400 WALK-IN SHOWER ENCLOSURE FITTING INSTRUCTION

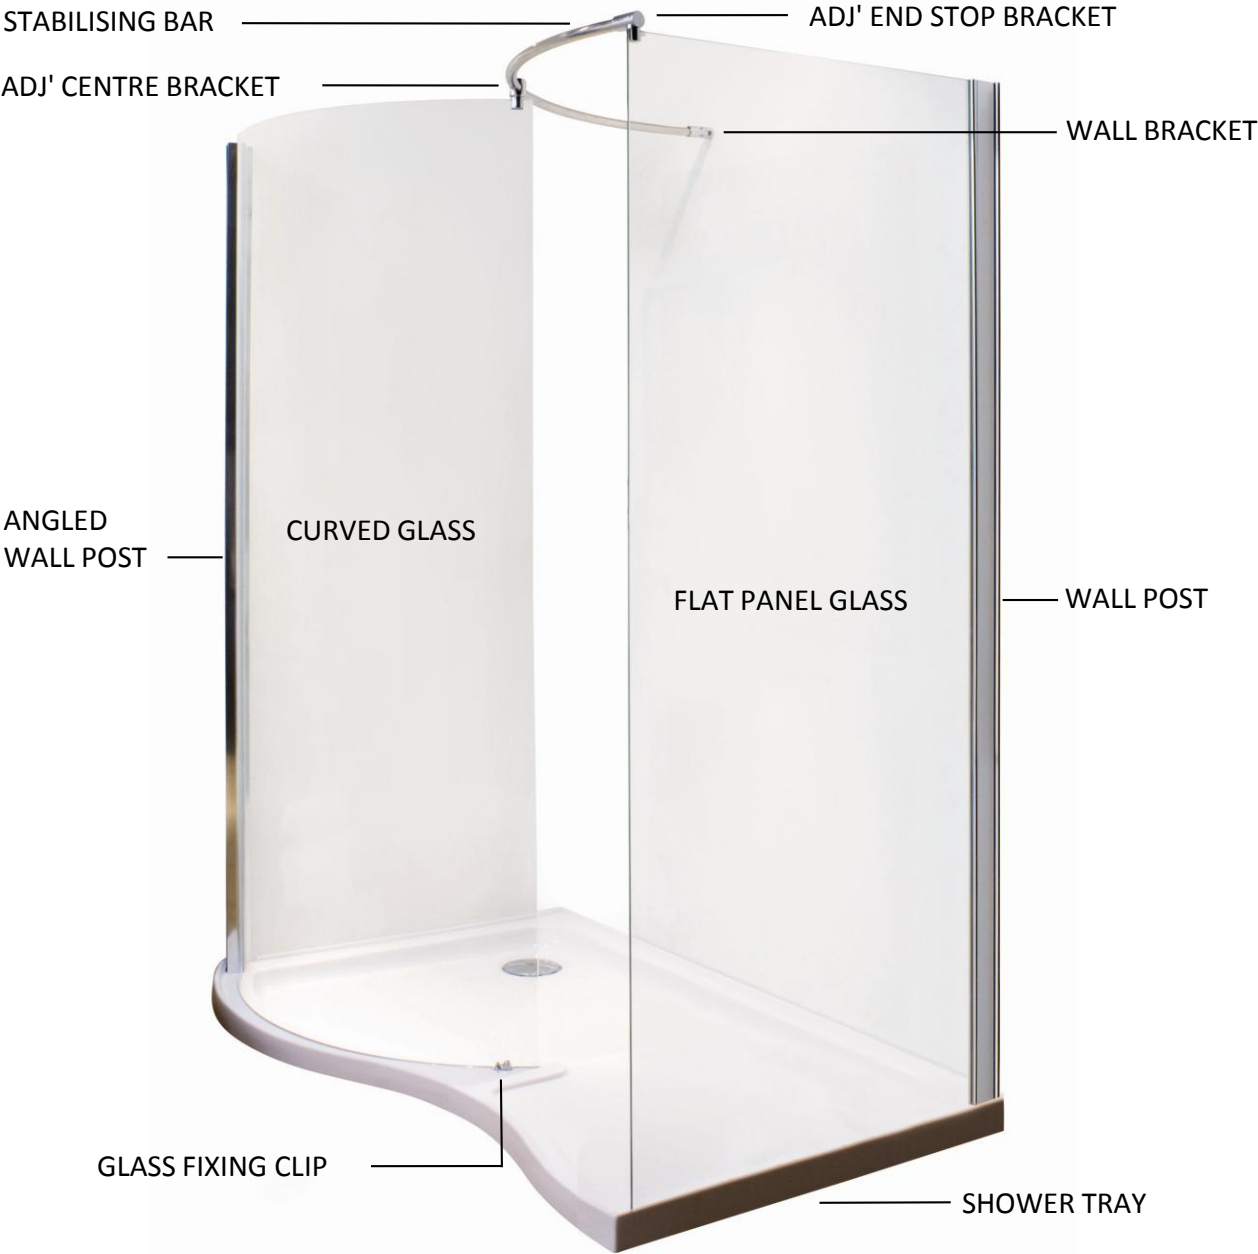

AQW - PARTS LIST		
	6	30mm SCREWS
	6	WALL PLUGS
	10	SCREW COLLAR
	10	SCREW COVER CAP
	4	10mm SCREWS
	1	STABALISING BAR
	1	ALLEN KEY
	1	ADJUSTABLE CENTRE BRACKET
	1	ADJUSTABLE END STOP BRACKET
	1	WALL BRACKET
	1	GLASS FIXING CLIP (CHROME)