


ASSEMBLY INSTRUCTIONS

STRAIGHT SCREEN WITH PANEL

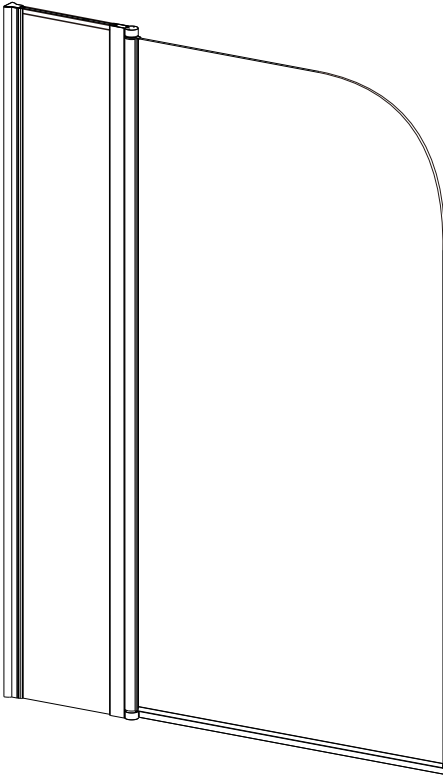








General Information

Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. **TAKE CARE WHEN HANDLING GLASS PARTS - AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE.** Glass breakage claims will not be accepted after the product has been unpacked.

Aftercare instructions

Regularly clean your shower product with warm soapy water to prevent lime scale build up. **DO NOT** use abrasive cleaning fluids or materials, or strong chemical cleaners as this will damage the product surface.


Tools Required

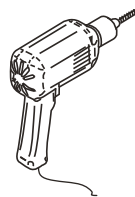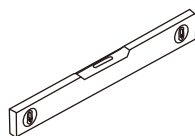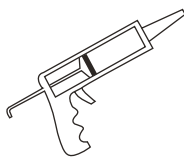

This product is heavy and may require two people to install.





Assembly Drawing

- (1) 1xCover Cap
- (2) 3xWall Plugs
- (3) 3xScrews M4X30
- (4) 1xWall Posts
- (5) 1xFixed glass Panel
- (6) 3xCover Caps
- (7) 3xScrew Clip
- (8) 3xScrews M4X12
- (9) 1x Bottom Seal
- (10) 1xPivoting glass panel
- (11) 1xSupport bar with 2x M4x30

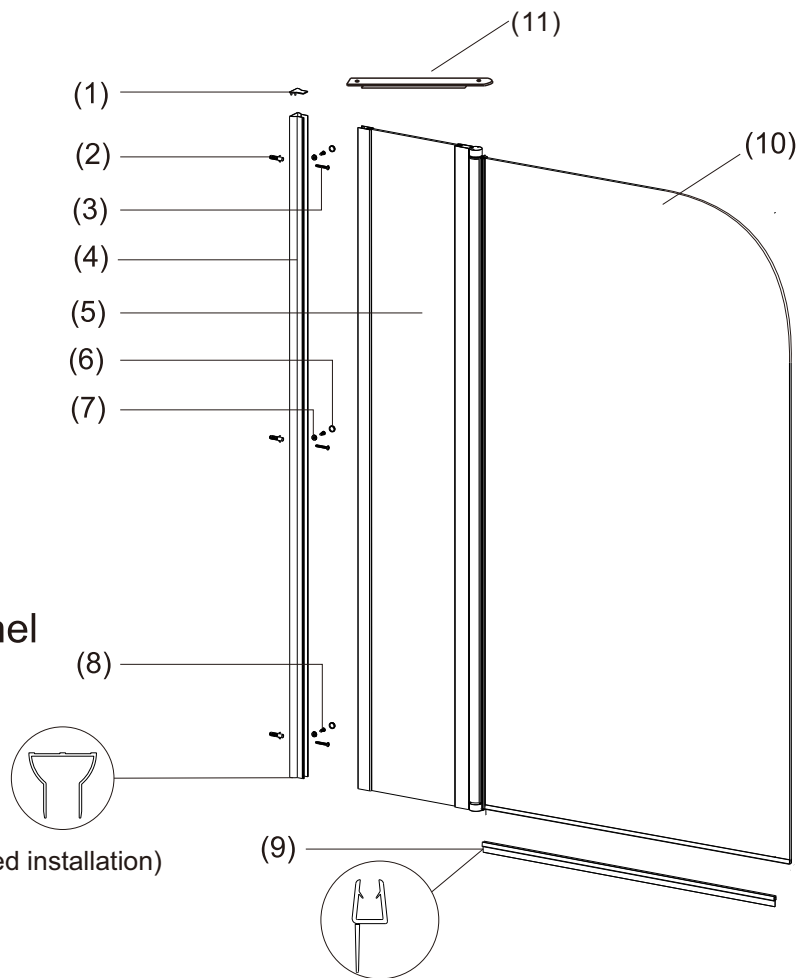

Installation Steps (left-handed installation)

Step 1

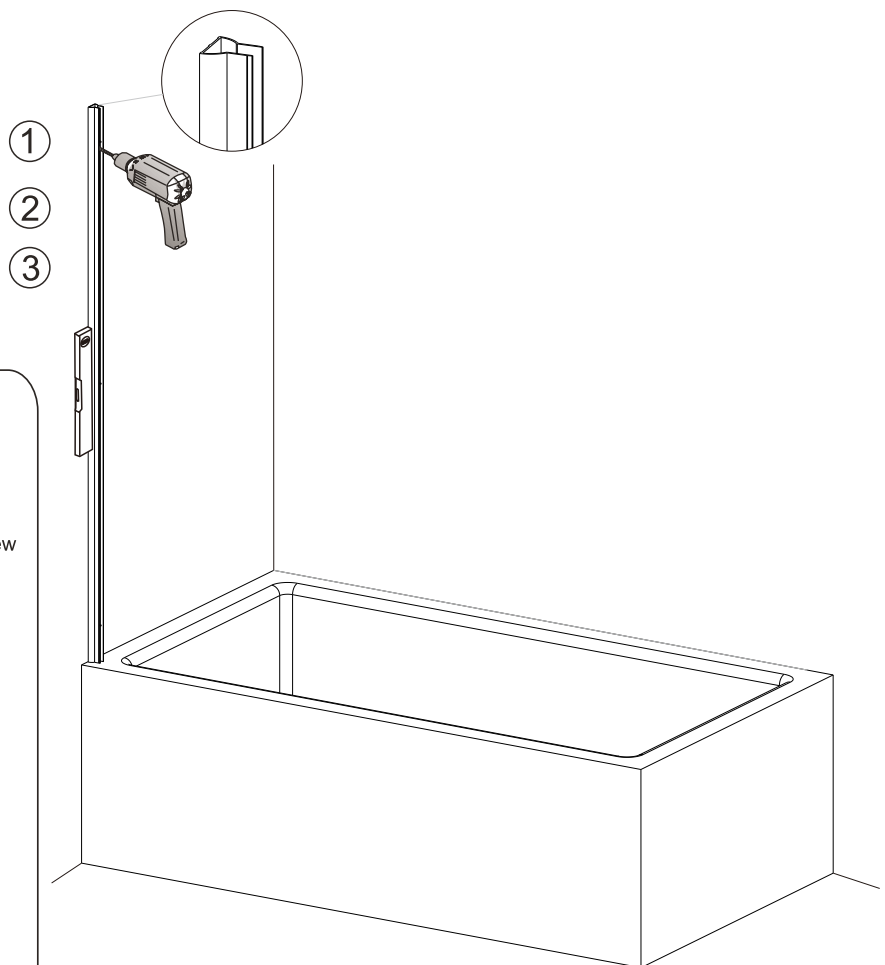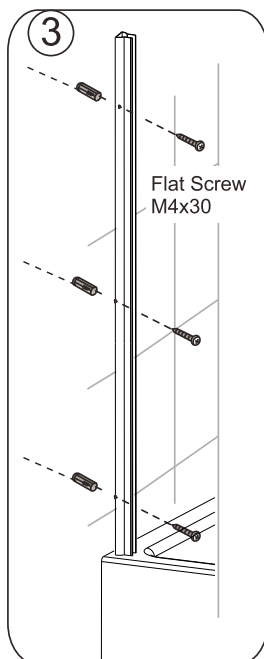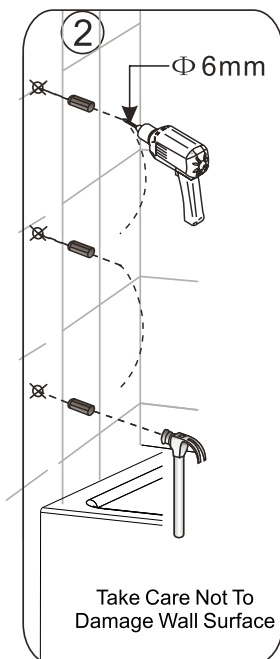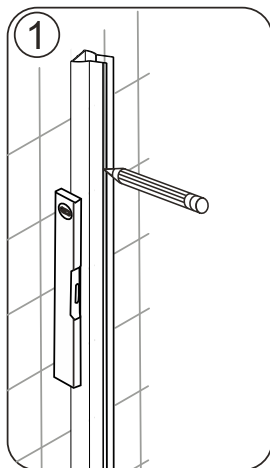


Step 2 Connecting two panels


1. Loose the hinge screw firstly

2. Join two panels


3. Put support bar on the glass and hinge, using new M4x30 screw tight screw all

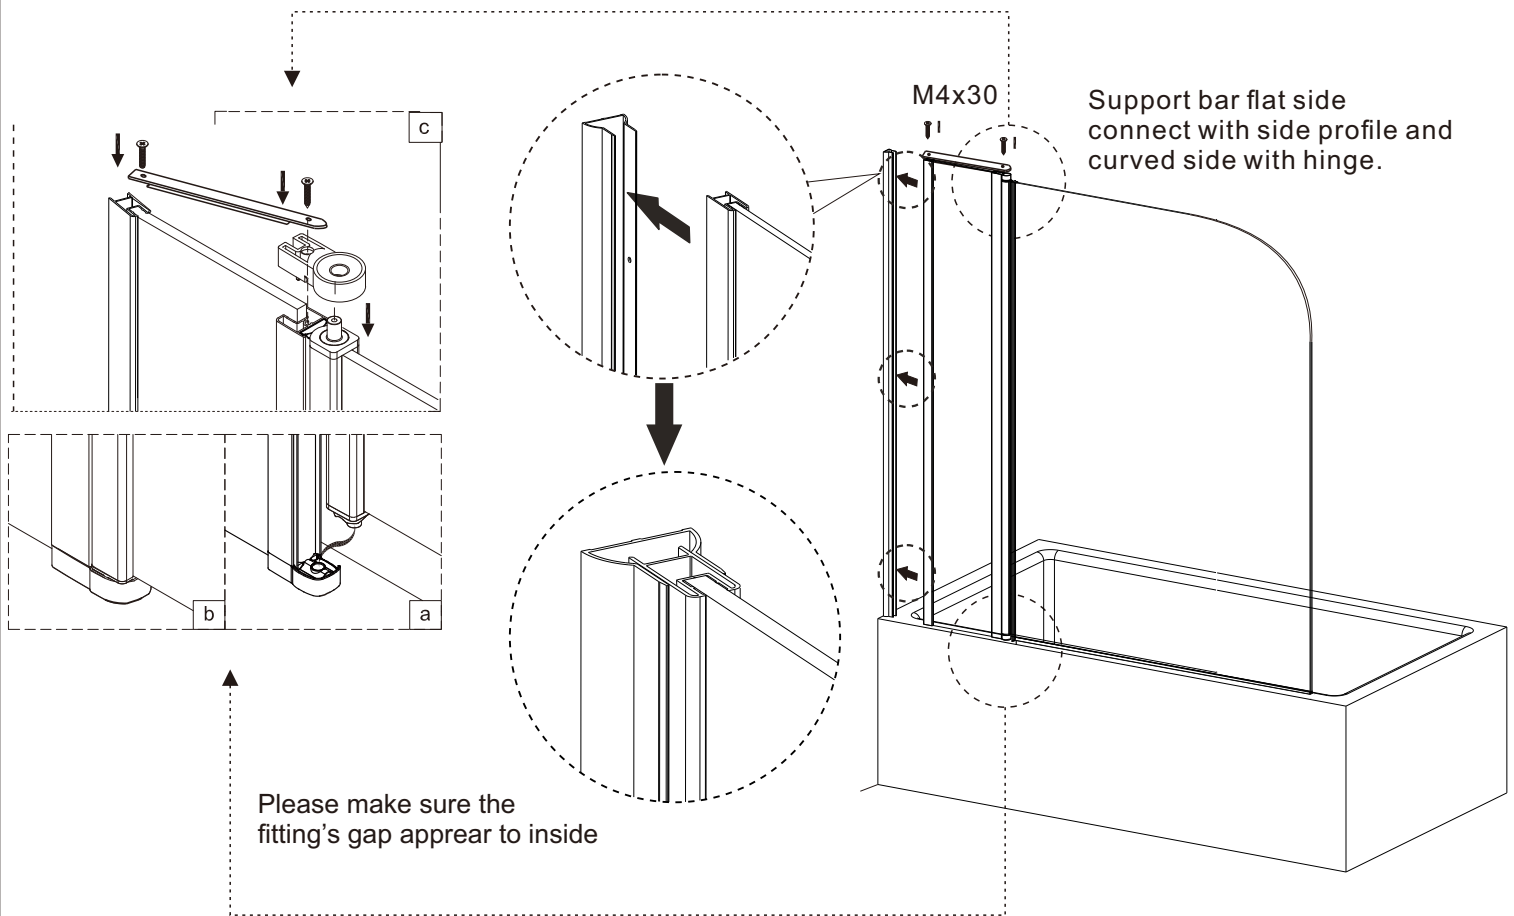


Step 3

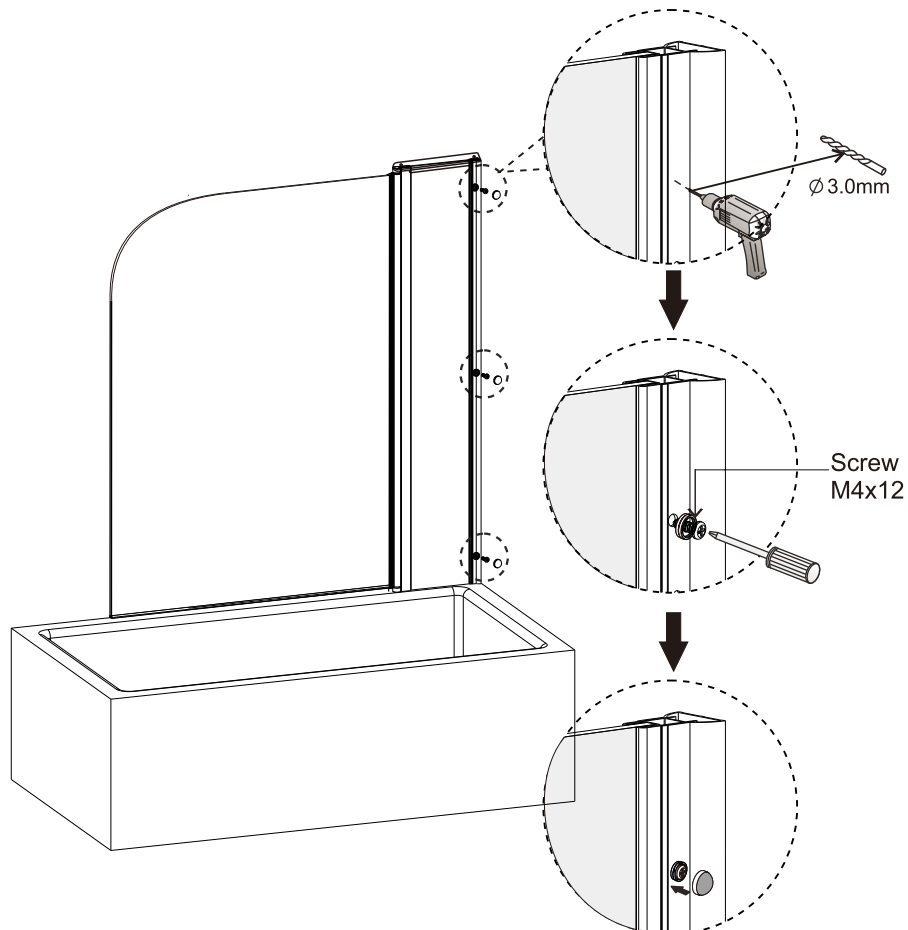

Step 4

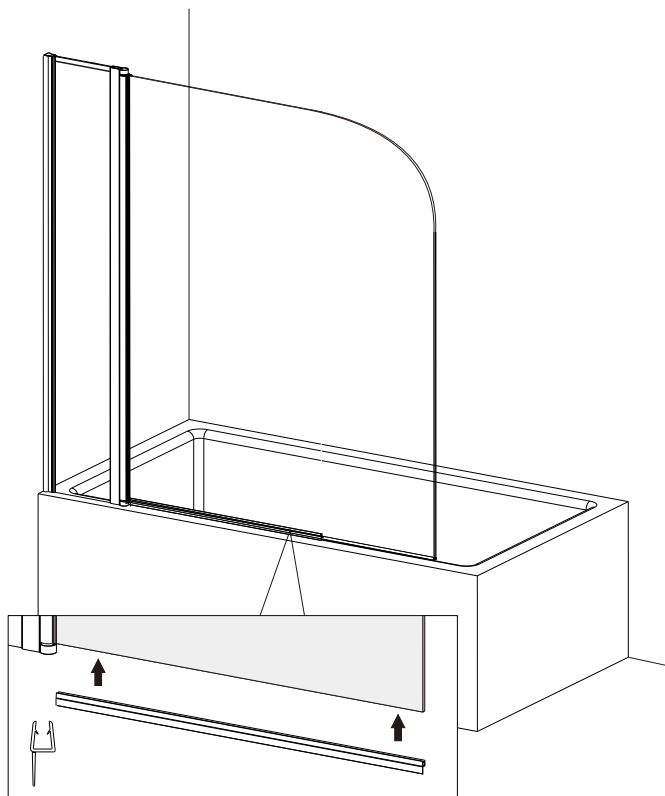


Step 5

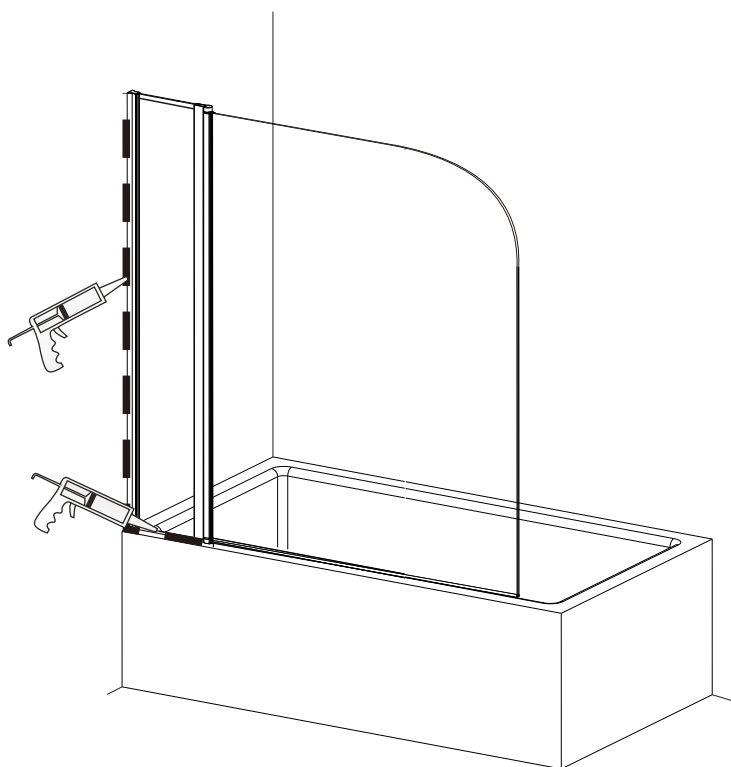

**Silicone where the vertical profile meet the wall
and the glass panels where they sit on the bath.**


Installation Steps (right-handed installation)

Step 1

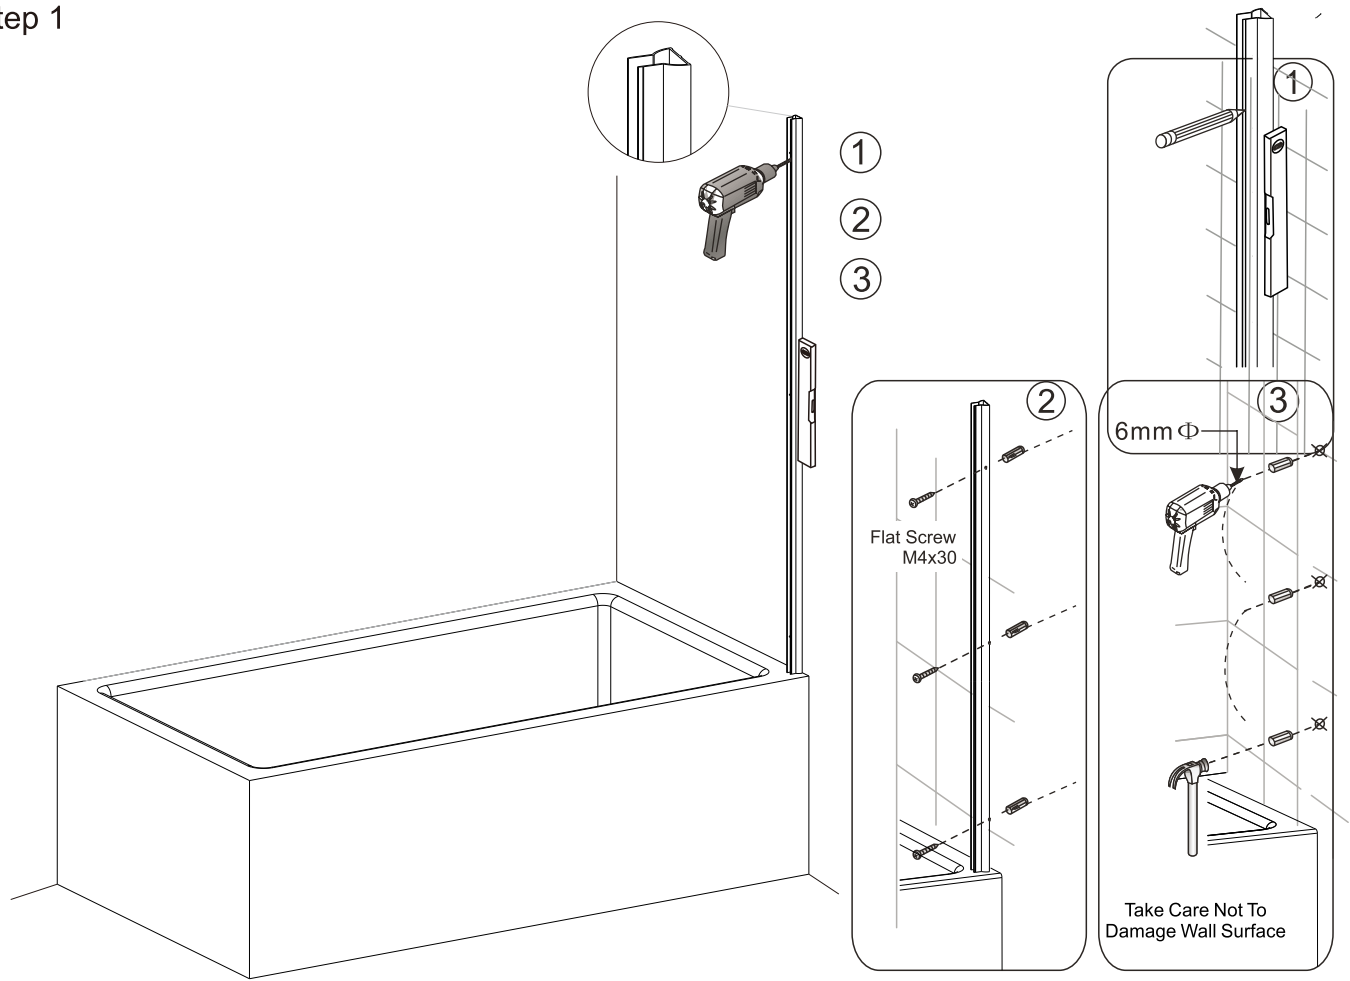


Step 2 Connect two panels


1. Loosen the hinges on small fixed panel and then swap top hinge as bottom hinge
2. Join two panels
3. Put support bar on the glass and hinge, using new M4x30 screw tight screw all

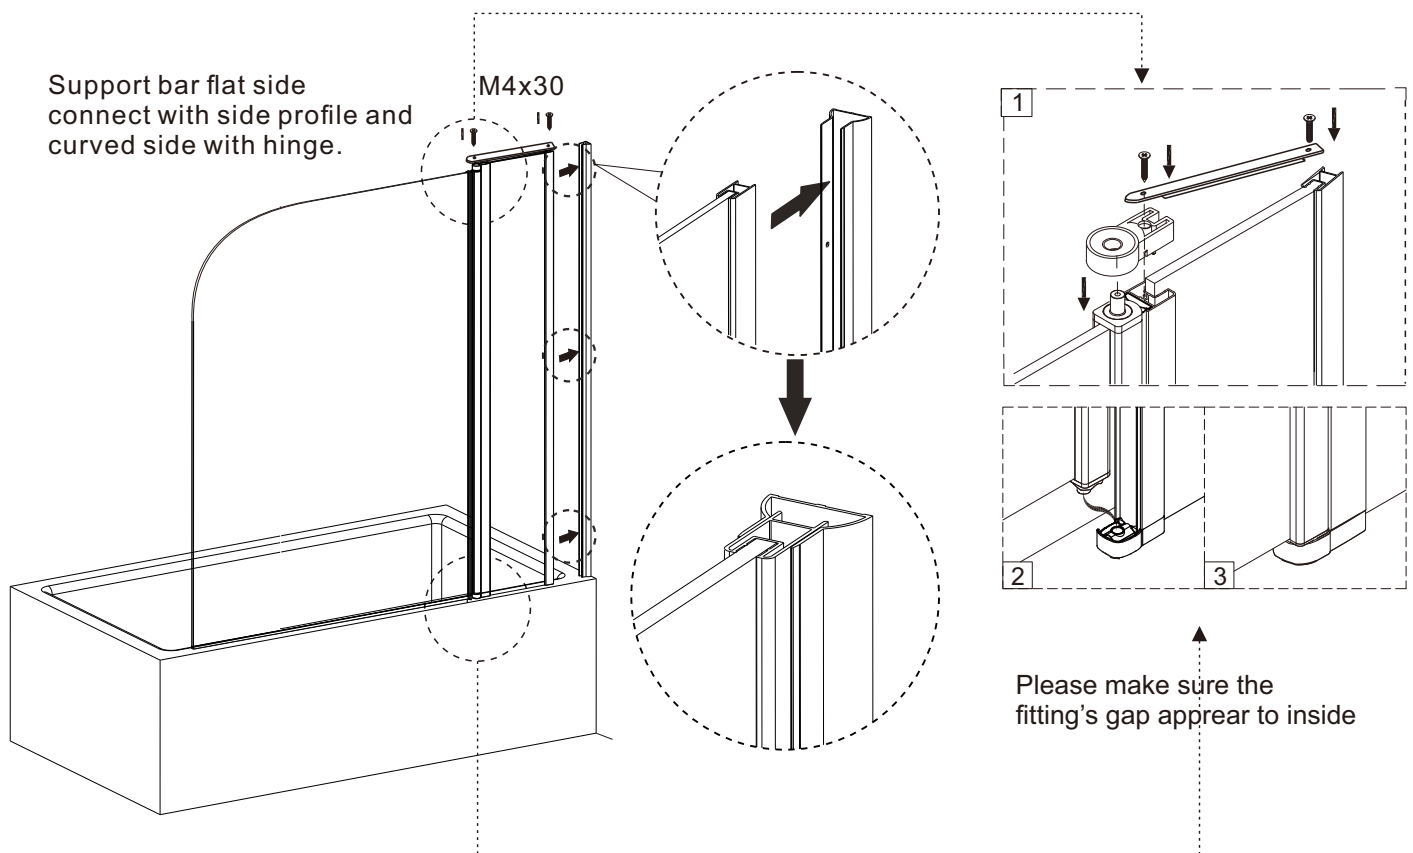


Step 3

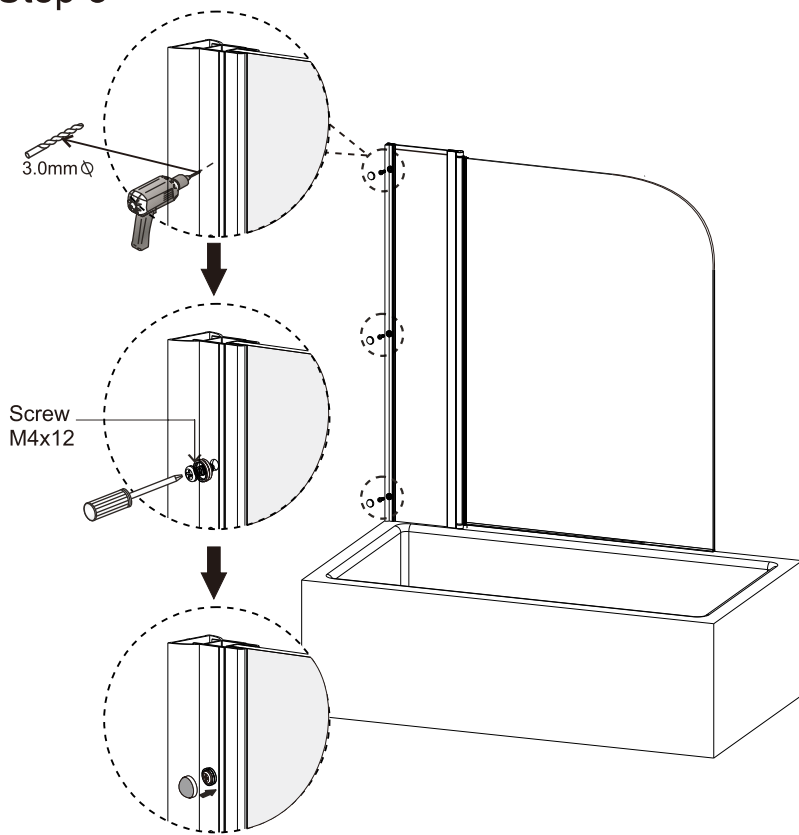

Step 4

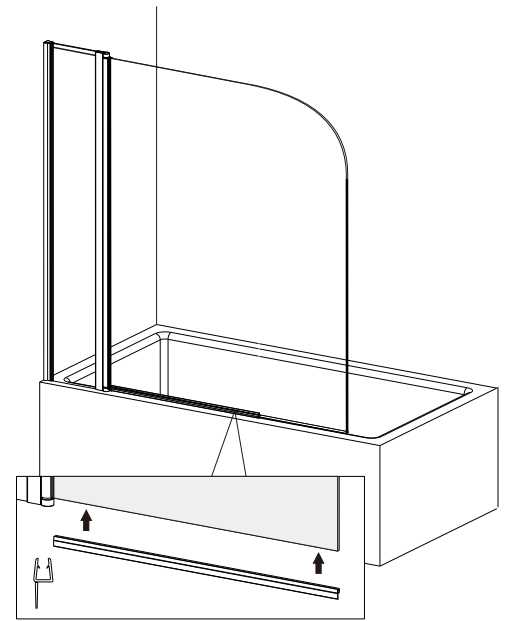

Step 5

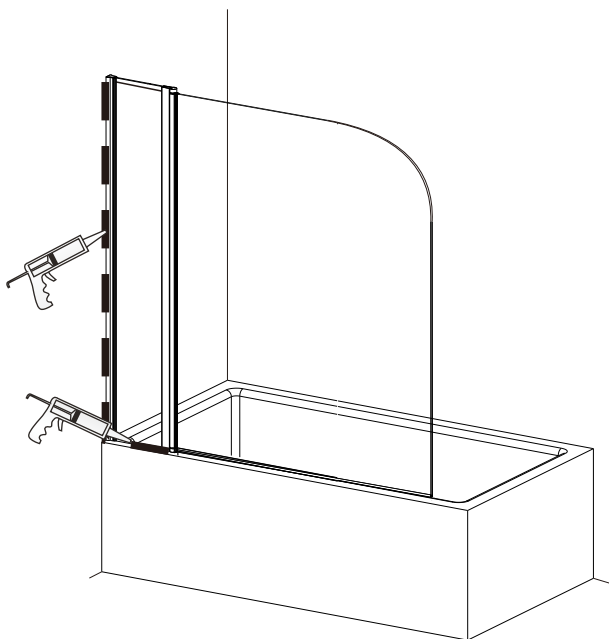

Silicone where the vertical profile meet the wall and the glass panels where they sit on the bath.