


Shower Rail with Intergrated Wall Elbow Instruction

WARNING! Check for hidden cables or pipes before drilling holes for wall plugs. Use great care when using power tools near water. The use of a residual current device (RCD) is recommended

Drill holes in the wall

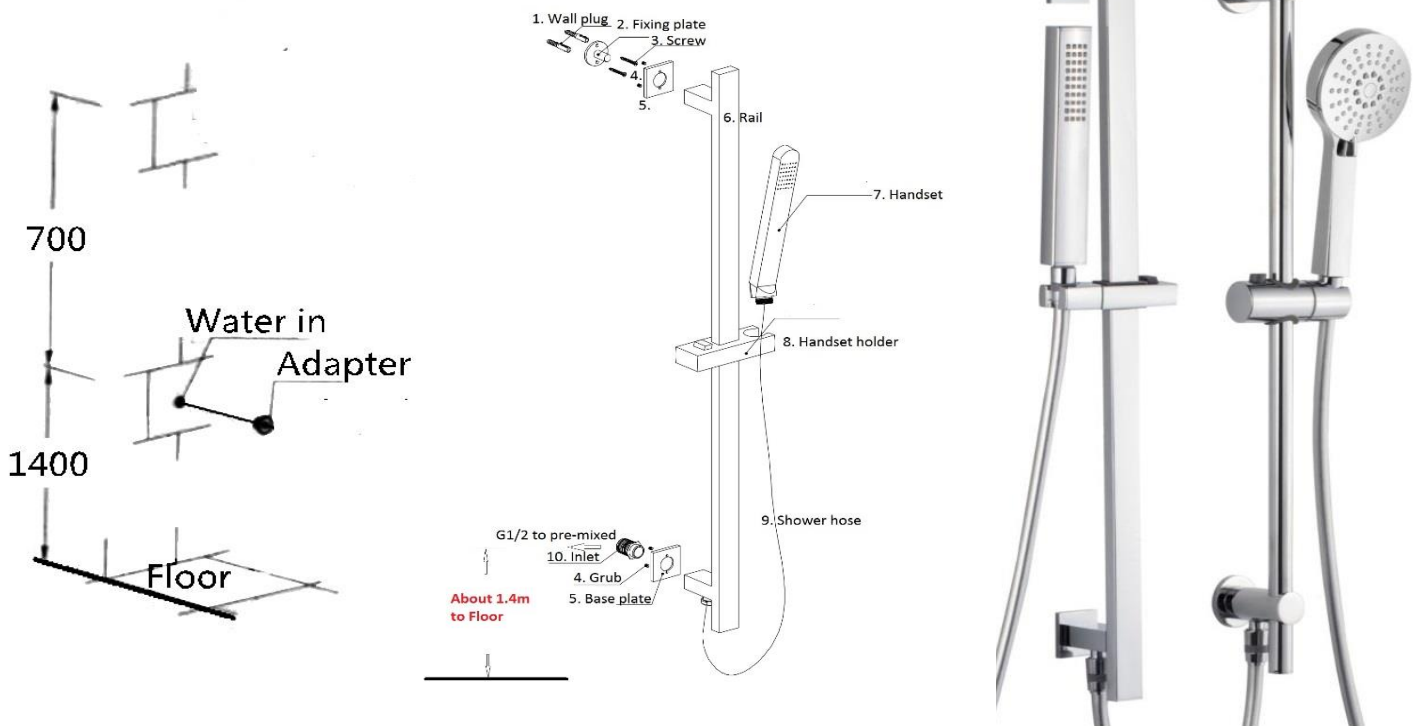

Installation:

- 1. Before installation:** Install water supply lines in accordance with this manual. Clean the pipes to get rid of mud, sand or other debris. Flush the pipes before connecting the Rail to the water-inlet.
- 2. Install the Water pipe of G1/2 screw inside the wall at about 1.4 meters height off the floor** Mark a line 700mm above the water inlet (center to center), then drill two holes for the wall-plug(mark the hole position with the wall-bracket plate). Insert the wall-plugs in, then fix the wall-bracket plate on the wall with the screw provided.
- 3. Connect the G1/2 tail to the water supply(if need, use an adaptor for the connection).** Turn on the water supply and test for any leaking! If no leaking, then
- 4. Put the Rail in position and secure it with the Grubs provided.**
- 5. Connect the hose the both the Handset and the Rail as shown as above picture, make sure the O-rings in position. Then turn on the water for final check of the leaking.**
- 6. Final check all screws are properly tightened, and all connections for leaking.**
- 7. Installation completed.**