


Installation Instructions

One-Part Bath Screen
With & Without Towel Bar


Installation Instructions

Positioning


Distance A = Wall to inside edge of bath.

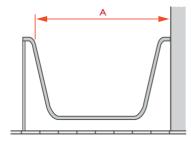

NB Screen must be set 10mm in from the bath edge in order for rubber seal to be water tight.




Distance B (screen profile) = Distance A + 10mm




Fixing Rail


2.1 Place fixing rail against wall in correct position and mark drill points, then remove and drill holes for 8mm wall plugs.


Note: Please ensure the rail is plumb







2.3 Fix the fixing rail to the wall with the screws provided.

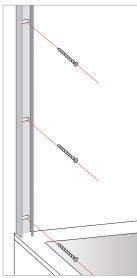


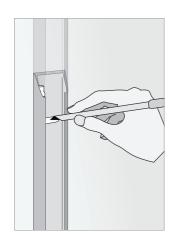

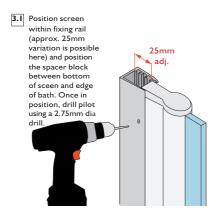


3.2 Next, fit the screen to the fixing rail using the self-tapping screws and covers .

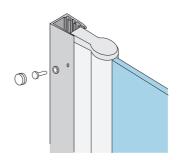

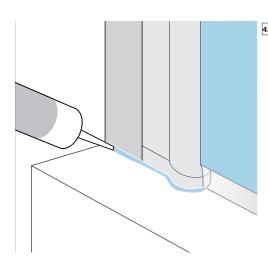

[4.1] Using a silicone based sealer (always check product instructions to check if suitable), seal along the outside edge of the vertical fixing rail and the wall, as well as between the outside bottom of the screen frame and the bath.



5.1 If your screen comes with the optional towel bar then simply assemble the components as illustrated here and secure with allen key provided.

