


---

1. Place the bath as in Figure 2. Mount rails (2) to the bath bottom using wood screws (3) Then screw down legs (4). The rails spacing should ensure stability of the installed bath.

---

Figure 1

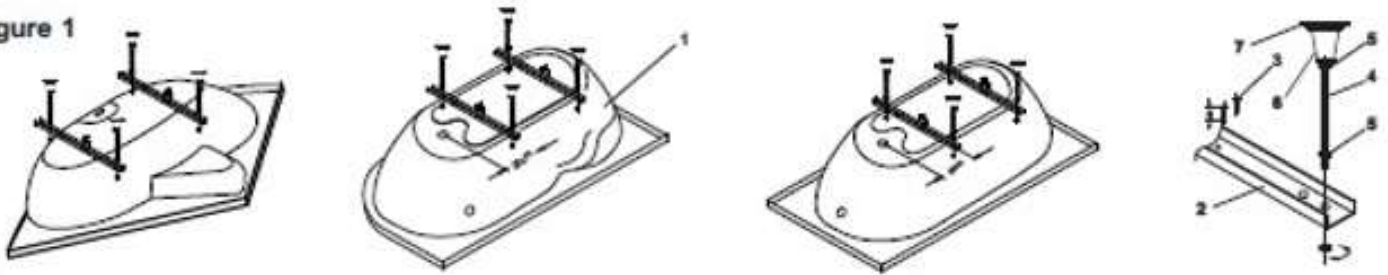

---

2. Put the bath in the selected place in the bathroom. Then level the bath legs (4). Mark the outline on both walls. Mark the places for brackets (9) (see Figure 3) and move the bath aside.

---

Figure 2



---

3. Mount the brackets (9) to the walls and move the bath on its place.

---

Figure 3

