
AQUAGLASS SPHERE Slider Installation Instructions

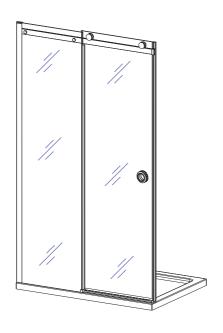



- ☐ 1200 x2000MM
- □ 1400 x2000MM
- □ 1600 x2000MM
- □ 1700 x2000MM

• Please read these instructions in full before installing

IMPORTANT

- Check that the tray has been installed to the manufacturer's instructions.
 Please note All product is supplied without a tray.
- Opening wall adjustments

```
1200mm Slider - adjustment = (1170-1200) x 2000mm
```

1400mm Slider - adjustment = (1370-1400) x 2000mm


1600mm Slider - adjustment = (1570-1600) x 2000mm

1700mm Slider - adjustment = (1670-1700) x 2000mm

GENERAL SAFETY INSTRUCTIONS

- Do not fix the wall profile to newly plastered, painted or papered walls as chemical reaction may cause discolouration to the surface finish.
- •Important: The wall plugs included in this pack are for solid walls only. If the product is to be mounted on a partition or stud wall, specialised fixings should be purchased separately.
- Fixing tips; A piece of insulating tape or a couple of layers of masking tape applied to the wall before marking out the fixing holes will help stop the drill from wandering, particularly on tiled surfaces.
- When working near a basin or bath insert the plug into the waste, this will help you avoid losing small parts. Also take care not to drop accessories or tools onto the bath or basin, use a towel or bathmat to protect delicate surfaces.
- CAUTION!
 - Before drilling into any walls check that there are no hidden cables or pipes. Exercise great care when using power tools near water. The use of a residual current device (RCD) or cordless drill is recommended. Always double check the positioning and measurements before drilling holes.
- ●This product is heavy and requires two people during lifting and operations.
- Glass is delicate, support on cardboard to minimise risk of damage.

IDENTIFICATION OF PARTS

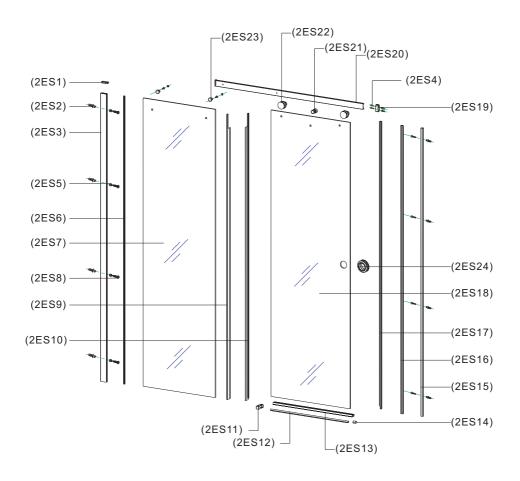


Fixings & fittings supplied

Item No.:	Part	Quantity	Item No.:	Part	Quantity
2ES01	S	X 1	2ES15		X 1
2ES02		X 10	2ES16		X 1
2ES03		X 1	2ES17		X 1
2ES04	ST4X30	X 2	2ES18		X 1
2ES05	0	X 8	2ES19		X 1
2ES06		X 1	2ES20		X 1
2ES07	[X 1	2ES21		X 1
2ES08	3 ST4X40	X 8	2ES22		X 2
2ES09		X 1	2ES23	9 ~ ©	X 2
2ES10		X 1	2ES24		X 1
2ES11		X 1	2ES25		X 1
2ES12		X 1	2ES26	505	X 1
2ES13		X 1	2ES27	2.5mm	X 1
2ES14		X 1	2ES28	4mm	X 1

Tools required (not supplied)


Electric drill	-00	tape measure	
drill(Ø3.2mm)		rubber hammer	
drill(Ø6mm)	47777	knife	
cross tip screw driver		pencil	<
spirit level		silicone sealant	

Product Direction

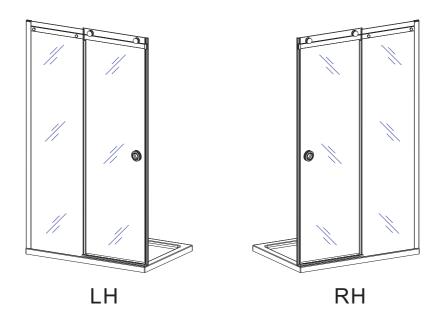


The Slider is ok to be installed in left hand and right hand. The following step is based on left hand. For Right hand, please follow the step in mirror direction.



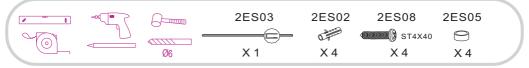


- Put the wall profile(2ES03) against the wall and ensure it is vertical using a spirit level.
- Mark the holes on the wall.
- -Drill the holes accordingly.
- -Insert wall plug 2ES02 into the holes.
- -Fasten the wall profile on the wall with screw 2ES08.

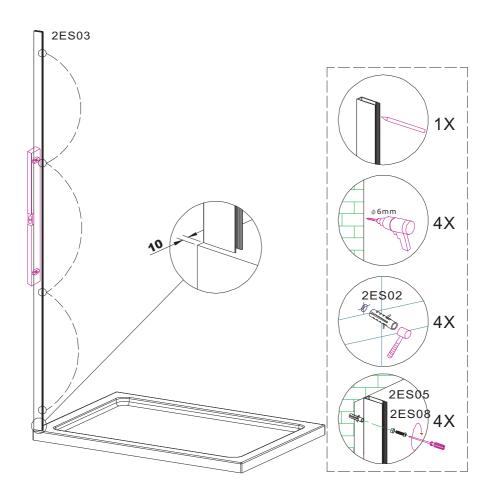







- Insert fix panel 2ES07 in to the channel of wall profile.

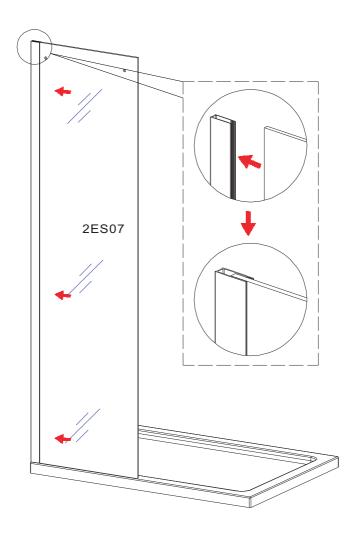




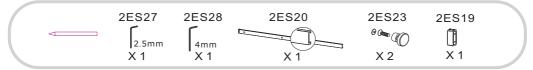

- Mount wall bracket 2ES19 on the end of rail profile 2ES20. Fasten the screw by 2.5mm hex key 2ES27.
- -Mount rail profile 2ES20 on fix panel 2ES07 by fixing part 2ES23 and 4mm hex key 2ES28. Cover the screw on the back.
- -Mark the position of wall bracket on the wall.

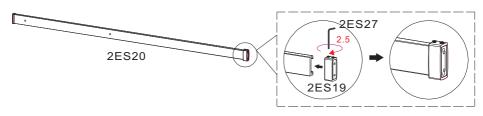


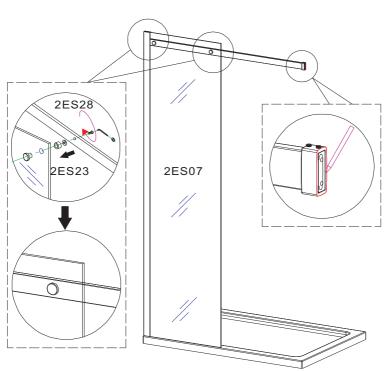



2ES27	2ES28	2ES20	2ES23	2ES19	
2.5mm X 1	4mm X 1	X 1	X 2	X 1	


- -Disassemble the rail profile 2ES20 from fix panel 2ES07 by loose fixing part 2ES23.
- -Disassemble the wall bracket 2ES19 from rail profile 2ES20 by loose screw.

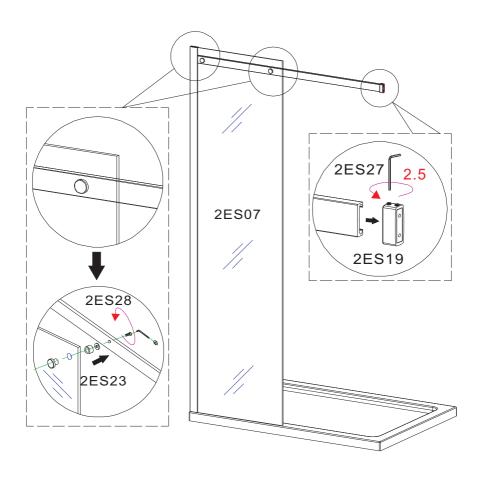






- Take the wall seat from the wall bracket.
- -Drill the holes accordingly.
- -Insert wall plug 2ES02 into the holes.
- -Fix the wall seat on the wall with screw 2ES04.

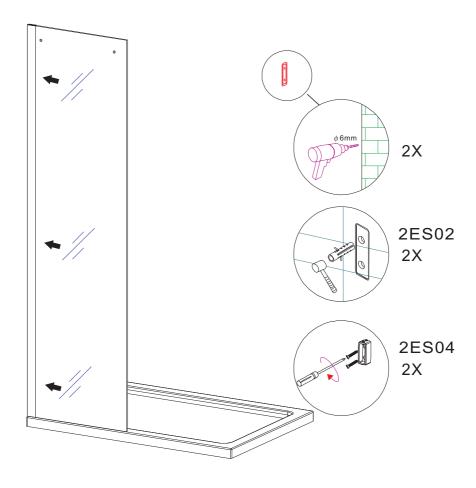




2ES27	2ES28	2ES20 X 1	2ES23 ⁶ (C) X 2	2ES19 (1) X 1	
7()	Λ 1	Α 1	7, 2	,,,,	


- Insert rail profile 2ES20 into the wall profile 2ES19 and fasten them together with screw. -Assemble fixing part 2ES23 on the rail profile through fixing panel to fix glass panel and rail profile together.

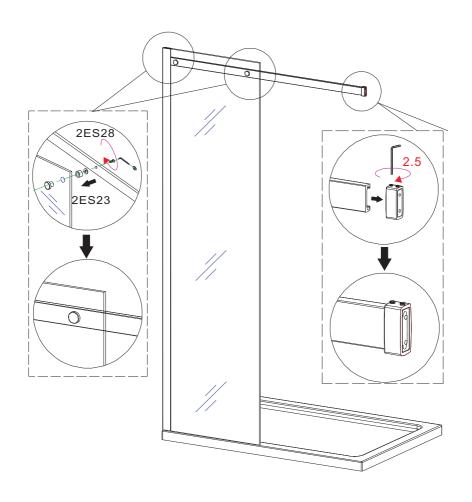




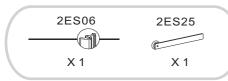


- Adjust the position of fix panel to meet with opening requirement. Please make sure the same opening both on top and bottom.
-Insert sealer 2ES06 between glass panel and wall profile from outside of cabin.

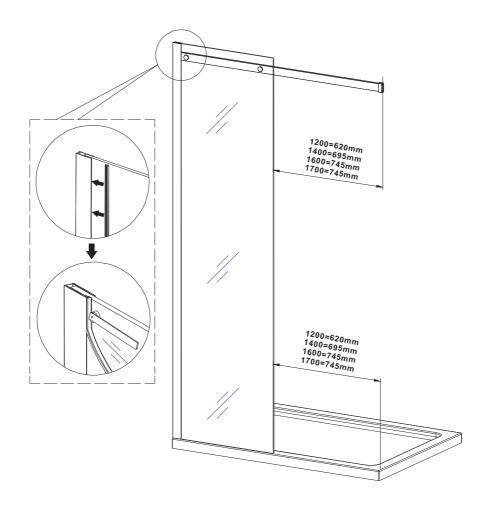




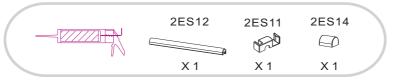


- Apply silicone glue on the back of the bottom anti-water profile 2ES12, sliding guide 2ES11 and end cover 2ES14.
- -Put sliding guide 2ES11 next to the fix panel. Insert bottom profile 2ES12 into the guide. Put cover 2ES14 on the other end of 2ES12.

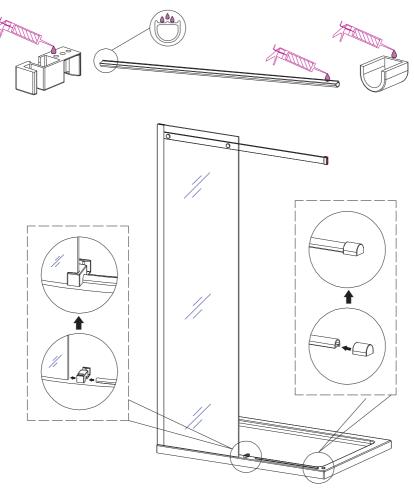



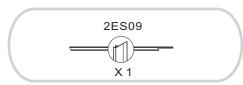


- Apply vertical profile 2ES09 on the edge of fix panel.

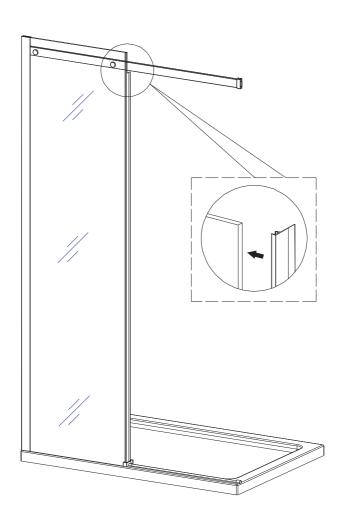







- Mount roller 2ES22 on sliding panel 2ES18.
- Mount anti-jump part 2ES21 on the sliding panel 2ES18.
- Mount handle 2ES24 on the sliding panel. Please make sure the washers on 2 sides of glass panel before fasten the handle part
- Apply bottom sealer 2ES13 on the bottom of sliding panel..

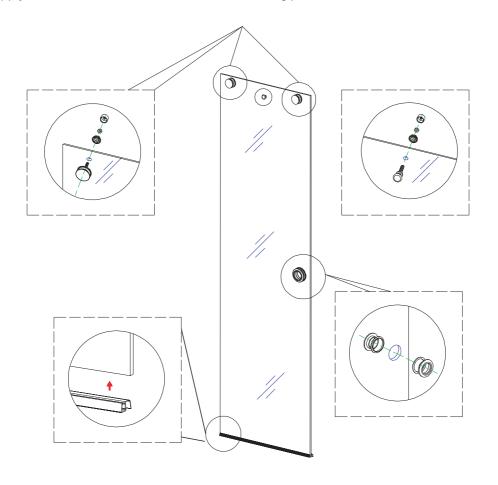

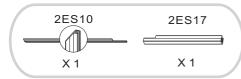


- Apply magnetic strip 2ES17 on the sliding panel edge next to the handle.
- -Apply vertical sealer 2ES10 on the other edge of sliding panel.

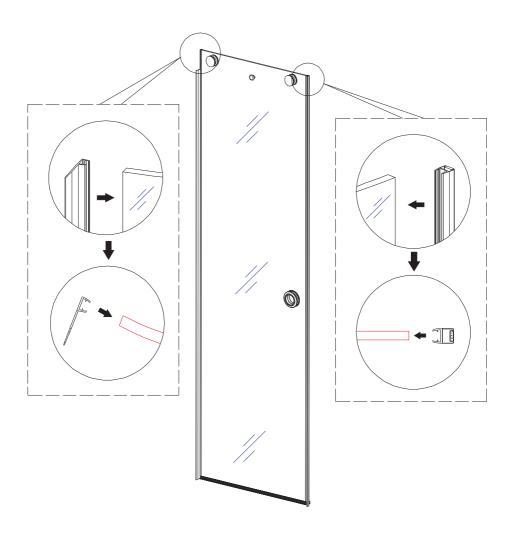





- Mount sliding panel on the rail profile. Put the top roller on the top of rail profile and anti-jump part into the channel of rail profile. Make sure the bottom sealer of sliding panel into the channel of bottom sliding bracket.

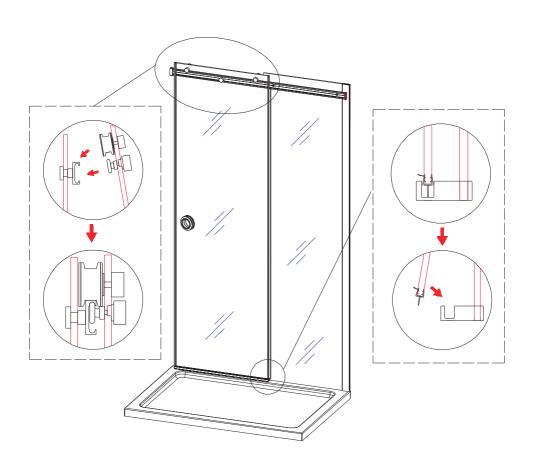



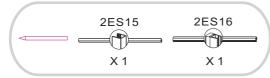


- Insert magnetic stip 2ES16 into the small wall profile 2ES15.
- -Put 2 magnetic strip closed on the sliding panel.
- -Close the door to mark the position of small wall profile.

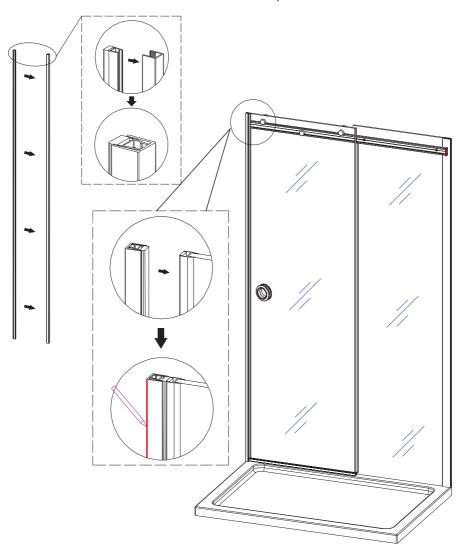






- Take off the magnetic strip out off small wall profile.
- Put the small wall profile on the wall according to the mark.
- Mark the hole position.
- Drill the holes accordingly.
- Insert wall plug 2ES02 into the holes.
- Fix small wall profile on the wall with screw 2FS08 and washer 2FS05.

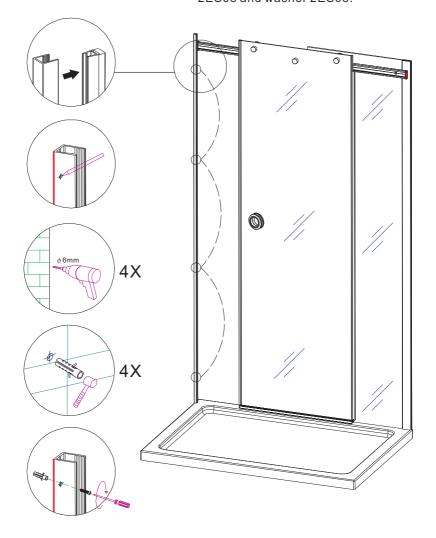



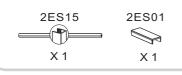


- Insert magnetic strip 2ES15 into the channel of small wall profile.
- Put top cover 2ES01 on the big wall profile.







- The top roller is adjustable to make door vertical. -Take off the back cover off. Turn the nut on the back with tool 2ES26.
- Turn the nut until the door is vertical with magnetic strip closing well.
- -Put the back cover on the roller.

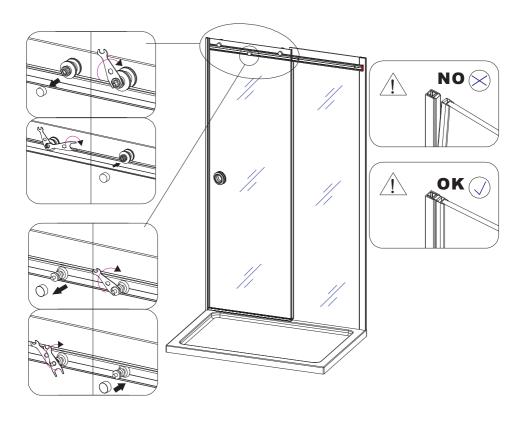






Apply silicone sealant to the outside of the enclosure.

Please note: Do not apply silicone sealant to the inside of the enclosure.

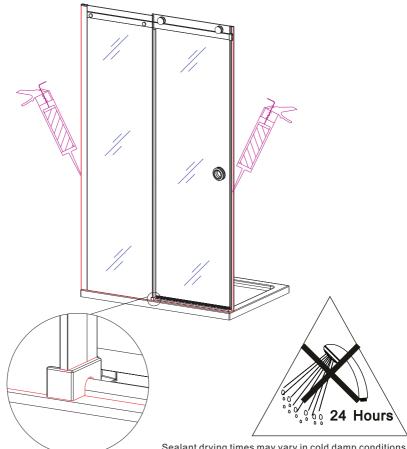

Cleaning and Maintenance:

Please do not use abrasive or strong cleaning solutions on the shower enclosure, such as alcohol, petroleum liquids or any other chemical cleaner.

Should there be any dirty stains on the shower enclosure, please clean it with a soft lint free cloth and warm soapy water. Please rinse it with clean water afterwards.

Sealant drying times may vary in cold damp conditions and will be extended where thicker beads of sealant are applied. Allow sealant to dry completely before exposing to water.

We have taken great care to ensure that this product reaches you in perfect condition. However should any parts be damaged or missing please contact your point of purchase. This does not affect your statutory rights. In addition if you require replacement parts your point of purchase will be happy to assist.

For information and support phone: 0845 47024 27

21 V15K16