


# 6mm 2 Panel Bath Screen

First panel fixed, second panel movable  
Installation Instructions

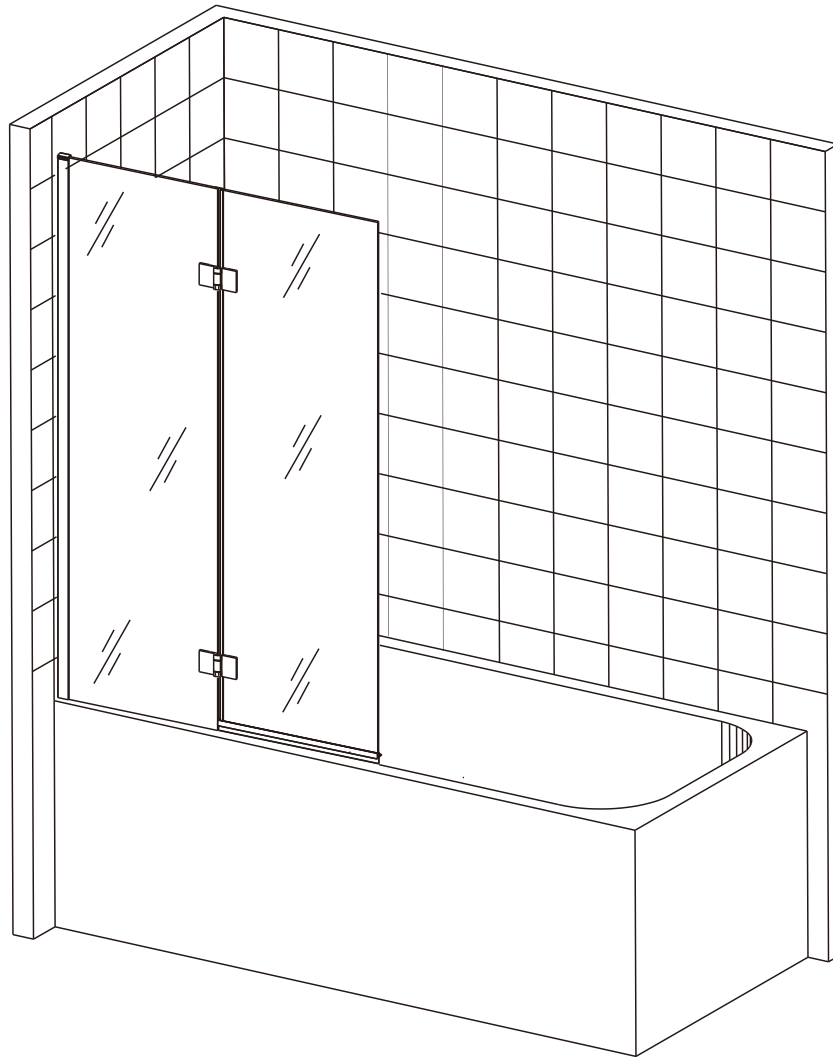

**FRONTLINE<sup>®</sup>**  
the complete bathroom

1400 x 800MM

- Please read these instructions in full before installing











## IMPORTANT

- Check that the bathtub has been installed to the manufacturer's instructions.  
Please note - All product is supplied without a bathtub.
- Opening wall adjustments  
Bath Screen - adjustment : 0 ~ +15mm


## GENERAL SAFETY INSTRUCTIONS

- Do not fix the wall profile to newly plastered, painted or papered walls as chemical reaction may cause discolouration to the surface finish.
- Important: The wall plugs included in this pack are for solid walls only. If the product is to be mounted on a partition or stud wall, specialised fixings should be purchased separately.
- Fixing tips; A piece of insulating tape or a couple of layers of masking tape applied to the wall before marking out the fixing holes will help stop the drill from wandering, particularly on tiled surfaces.
- When working near a basin or bath insert the plug into the waste, this will help you avoid losing small parts. Also take care not to drop accessories or tools onto the bath or basin, use a towel or bathmat to protect delicate surfaces.
- CAUTION!  
Before drilling into any walls check that there are no hidden cables or pipes. Exercise great care when using power tools near water. The use of a residual current device (RCD) or cordless drill is recommended. Always double check the positioning and measurements before drilling holes.
- This product is heavy and requires two people during lifting and operations.
- Glass is delicate, support on cardboard to minimise risk of damage.








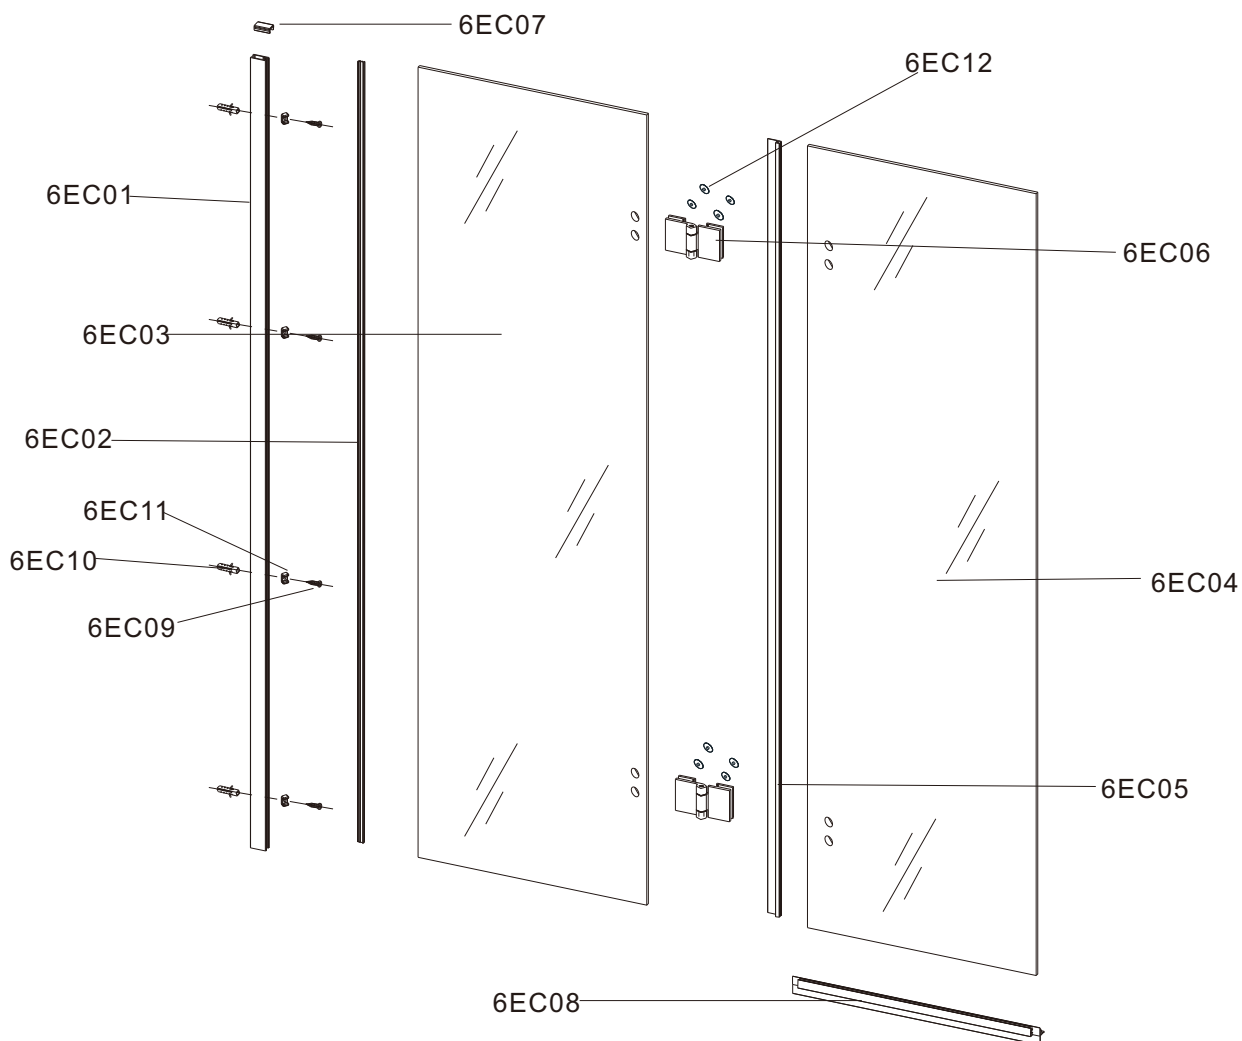






## Tools required (not supplied)


Electric drill		tape measure	
drill(Ø3.2mm)		rubber hammer	
drill(Ø6mm)		knife	
cross tip screw driver		pencil	
spirit level		silicone sealant	

## IDENTIFICATION OF PARTS




## Fixings & fittings supplied

Item No.:	Part	Quantity	Item No.:	Part	Quantity
6EC01		X 1	6EC08		X 1
6EC02		X 1	6EC09	 ST4X35	X 4
6EC03		X 1	6EC10		X 4
6EC04		X 1	6EC11		X 4
6EC05		X 1	6EC12		X 8
6EC06		X 2	6EC13		X 1
6EC07		X 1	6EC14	 4	X 1

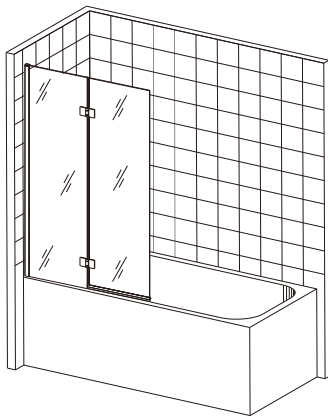


**LH**

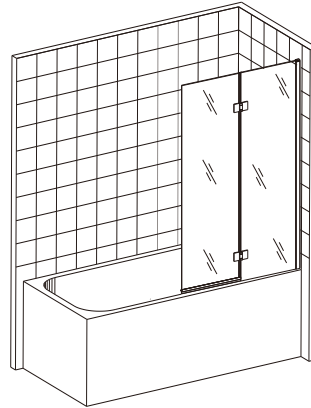






**RH**

Bath screen is ok to be installed in left and right hand. Below steps are based on left hand. For right hand, please follow below steps in mirror direction.


**1.**

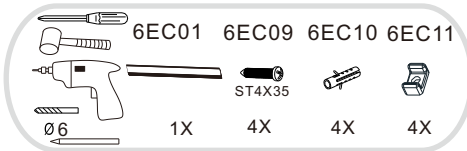



- Ensure the bath is level and sealed correctly before installation.
- Put the wall profile 6EC01 against the wall, ensuring the distance between the profile and the bathtub edge is correct. Adjust the profile to make sure it is vertical by using a spirit level.
- Mark the holes on the wall.
- Drill the holes (  $\varnothing$  6mm) according to the marks.
- Insert wall plug 6EC10(4X) into the holes.
- Fix wall profile 6EC01 on the wall with screw 6EC09(4X) and screw washer 6EC11(4X).

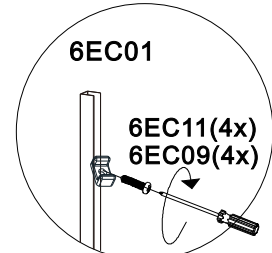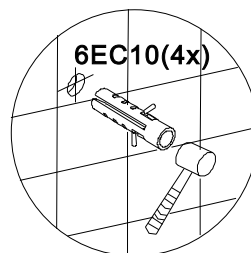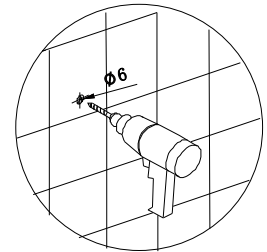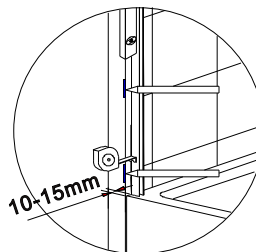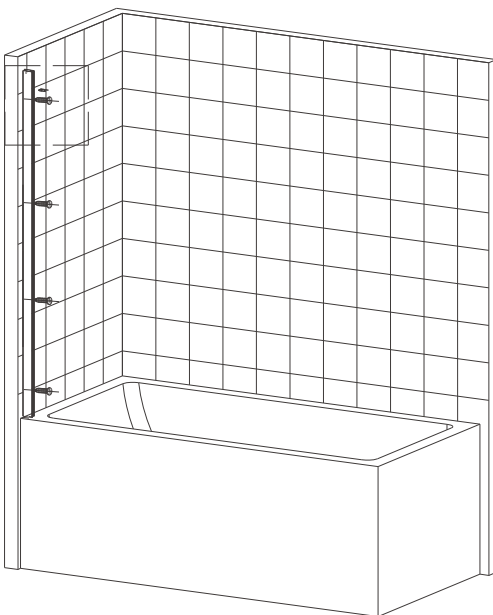


# 2.

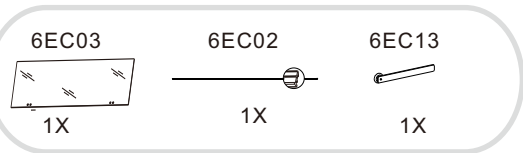



- Insert fixed panel 6EC03(1X) into the wall profile 6EC01(1X).
- Insert single blade sealer 6EC02 (1X) from inside between the profile and fixed panel with insertion tool 6EC13(1X).

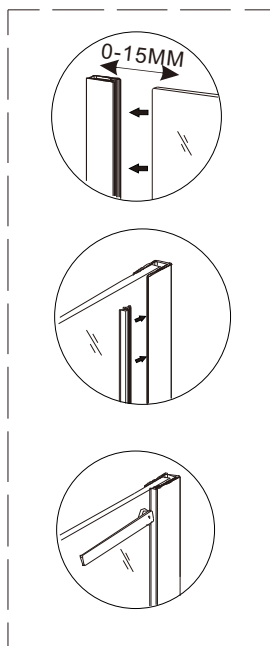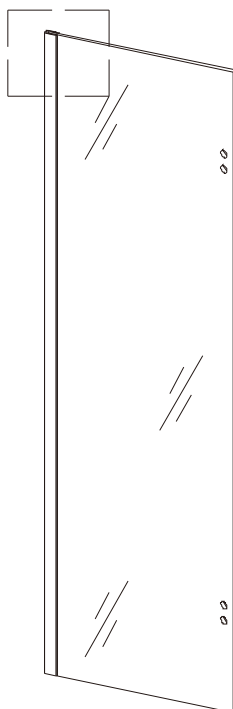

# 3.

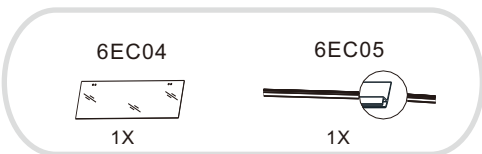

- Mount the sealer 6EC05(1X) onto the movable panel 6EC04(1X)

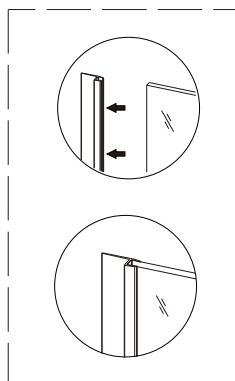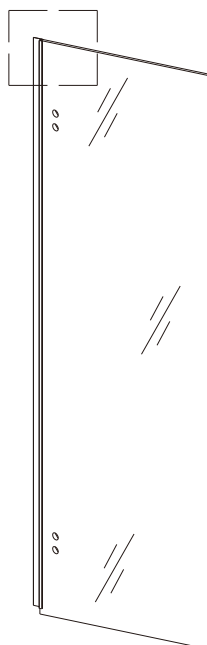

# 4.

6EC06



2X

6EC12





8X

6EC14



4

- Connect the fixed panel 6EC03 and movable panel 6EC04 with hinges 6EC06(2X) .Fasten inner screws with hex key 6EC14.
- Cover the screws with cap 6EC12(8X)from inside.

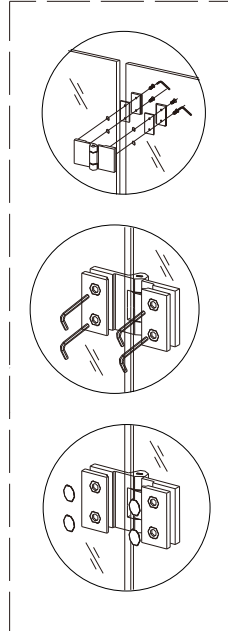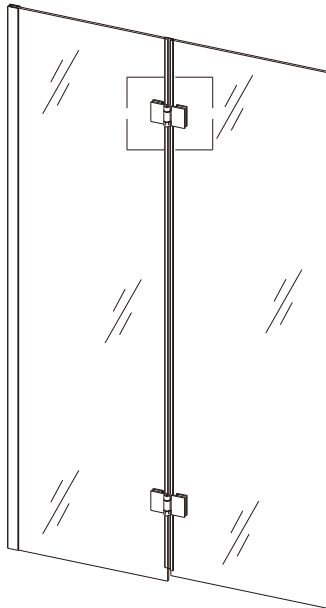

# 5.

6EC07





1X

6EC08



1X


- Attach the bottom sealer 6EC08 on the bottom of movable panel. Cut the extra part of seal.
- Cover the top cover 6EC07 on the top of the wall profile.

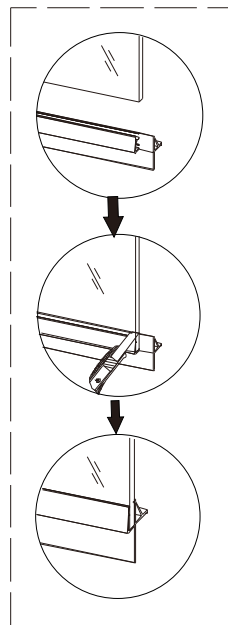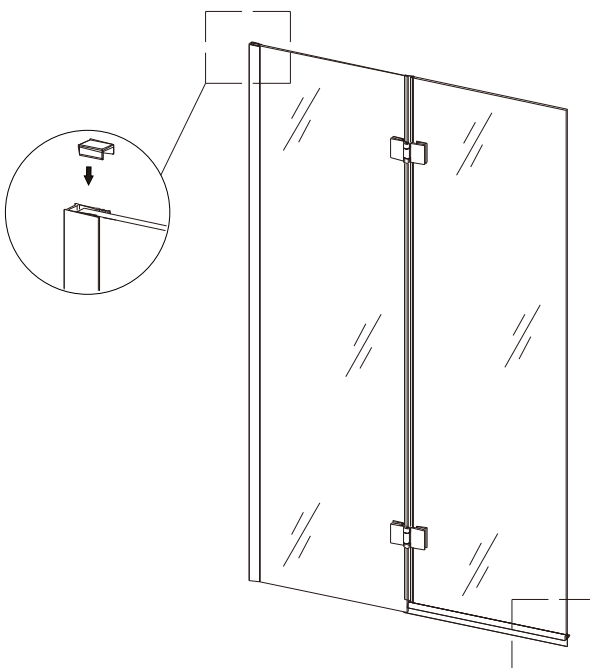


**Caution:**

The triangle bubble should be mounted towards the inside of the bathtub.

# 6



- Apply silicone sealant to the outside of the enclosure.  
Please note: Do not apply silicone sealant to the inside of the enclosure.

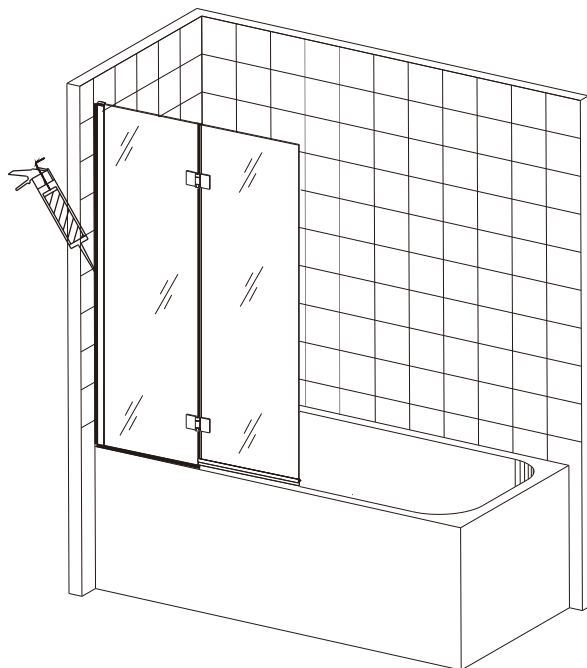

## CLEANING-general

Use only warm soapy water and damp cloth/sponge on a regular basis. Do not use abrasive scouring powders, chemicals or aerosol cleaners-these may result in damage to the surfaces, in particular, the plated component parts.

Sealant drying times may vary in cold damp conditions and will be extended where thicker beads of sealant are applied. Allow sealant to dry completely before exposing to water.

We have taken great care to ensure that this product reaches you in perfect condition. However should any parts be damaged or missing please contact your point of purchase. This does not affect your statutory rights. In addition if you require replacement parts your point of purchase will be happy to assist.