



DOUBLE FOLDING HINGE BATH SCREEN 1500X1200

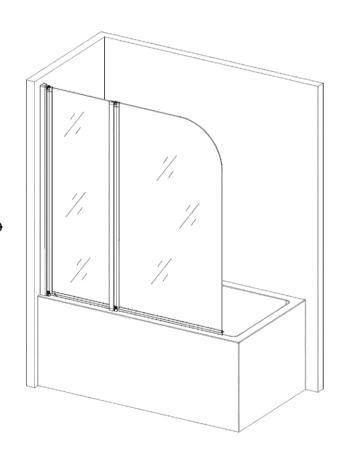

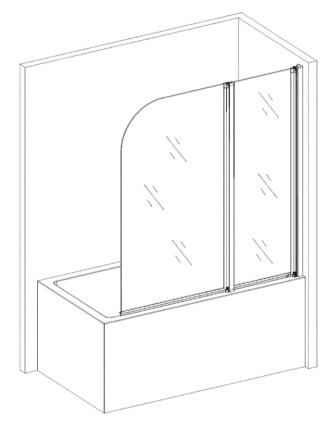

OBBSDBHIN



Aqua Brands.Green Lane,Green Lane Industrial Park,Featherstone WF7 6TA T:0845 470 2424 F:0845 470 2425 W:www.aquabrands.co.uk

Please read these instructions in full before installing

IMPORTANT

- Check that the bath has been installed to the manufacturer's instructions. Please note - All product is supplied without a bath.
- Opening wall adjustments1200x1500mm 2-fold screen adjustment = 1180-1200mm


GENERAL SAFETY INSTRUCTIONS

- Do not fix the wall profile to newly plastered, painted or papered walls as chemical reaction may cause discolouration to the surface finish.
- •Important: The wall plugs included in this pack are for solid walls only. If the product is to be mounted on a partition or stud wall, specialised fixings should be purchased separately.
- Fixing tips; A piece of insulating tape or a couple of layers of masking tape applied to the wall before marking out the fixing holes will help stop the drill from wandering, particularly on tiled surfaces.
- When working near a basin or bath insert the plug into the waste, this will help you avoid losing small parts. Also take care not to drop accessories or tools onto the bath or basin, use a towel or bathmat to protect delicate surfaces.
- CAUTION! Before drilling into any walls check that there are no hidden cables or pipes. Exercise great care when using power tools near water. The use of a residual current device (RCD) or cordless drill is recommended. Always double check the positioning and measurements before drilling holes.
- This product is heavy and requires two people during lifting and operations.
- Glass is delicate, support on cardboard to minimise risk of damage.

Tools required (not supplied)


Electric drill		tape measure	
drill(Ø6mm)		rubber hammer	
cross tip screw driver		knife	
spirit level	/	pencil	
		silicone sealant	

IDENTIFICATION OF PARTS

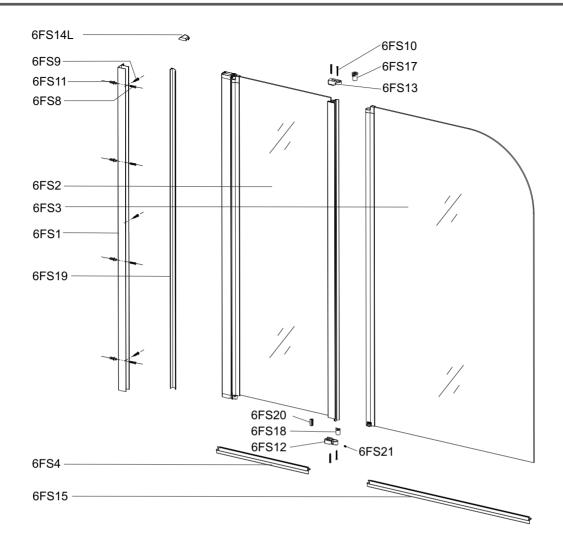

Fixings & fittings supplied

Item No.:	Part	Quantity	Item No.:	Part	Quantity
6FS1		X 1	6FS11	0	X 4
6FS19		X 1	6FS12		X 1
6FS2	× ×	X 1	6FS13		X 1
6FS3	~ ~ ~	X 1	6FS14	L R €	X 1
6FS4		X 1	6FS17		X 1
6FS15		X 1	6FS18		X 1
6FS8	ST4X30	X 4	6FS20		X 1
6FS9	ST4X10	X 3	6FS21	(X 1
6FS10	ST4X30	X 4	6FS22	2.5	X 1
			8FR17	33000	X 2

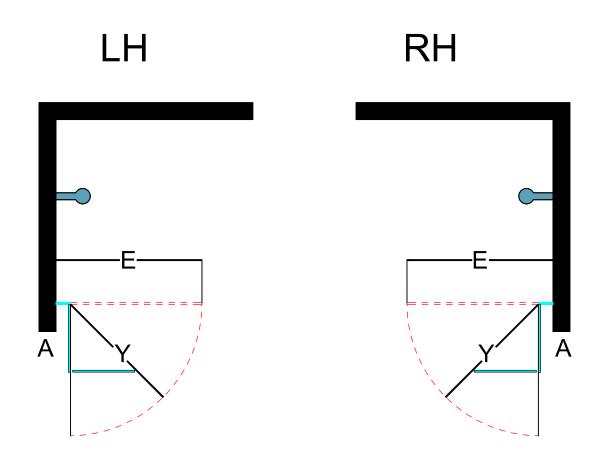

A:Moving Panel


E:Mounting dimension

Y:Radius of swing


Door swings 90° inwards and outwards

Recommended shower head position


Size	Α	Е	Υ
1200	438/625	1180-1200	1126

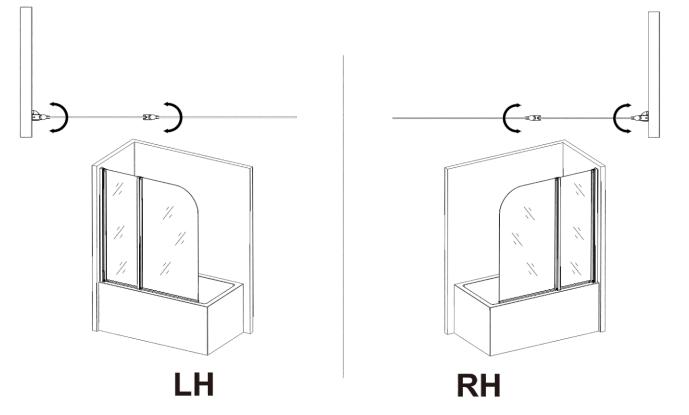

2-fold screen is ok to be installed in left and right hand. Below steps in based on left hand. For right hand, please follow below steps in mirror direction.

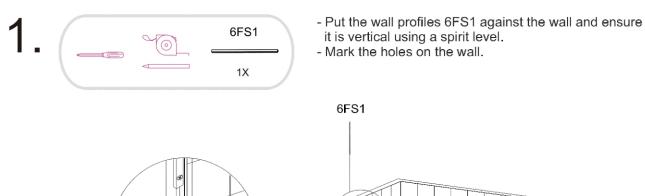


10-15mm

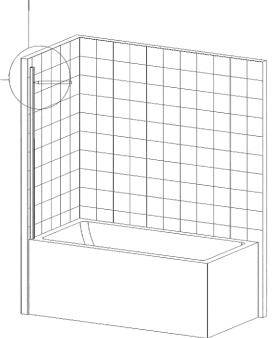

2.




- -Drill the holes(\varnothing 6mm) according to the marks and insert the wall plugs 6FS11 into the holes.
- -Fasten wall profile 6FS1 on the wall with screw 6FS8.

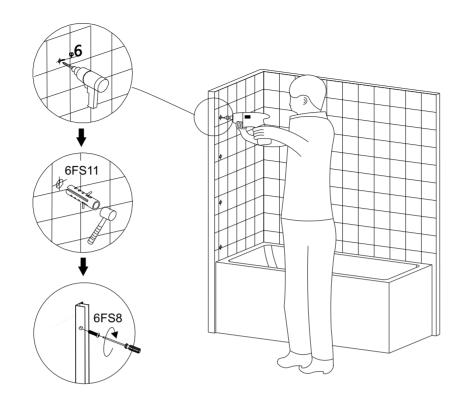

- 6FS2 6FS13 6FS12 6FS10 6FS20 6FS4

 X1 X1 X1 X4 X1 X1
 - 6FS2
- -Take out the small fold screen 6FS2. Fix top bracket 6FS13 on top of the vertical profile with screws 6FS10.
- -Fix bottom bracket 6FS12 as well with screw 6FS10 at bottom.
- -Please cover the small rubber block 6FS20 on the back mouth of the bottom bracket 6FS12, and then attach the bottom anti-water sealer 6FS4 onto the panel 6FS2.

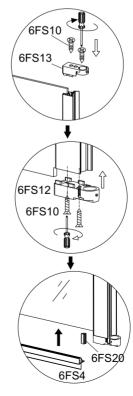


Caution: The triangle bubble should be mounted towards the inside of the bath.

6FS18 6FS21 6FS22 X1 X1 X1

-Insert screen panel 6FS2 into wall profile.

There is 20 adjustment between panel and wall profile. Please adjust the screen panel in correct position and make sure glass panel no sink down on bath edge.

-Put the bottom pivot 6FS18 into the bottom bracket and lock it with inner screw 6FS21 with hex key 6FS22 by side.

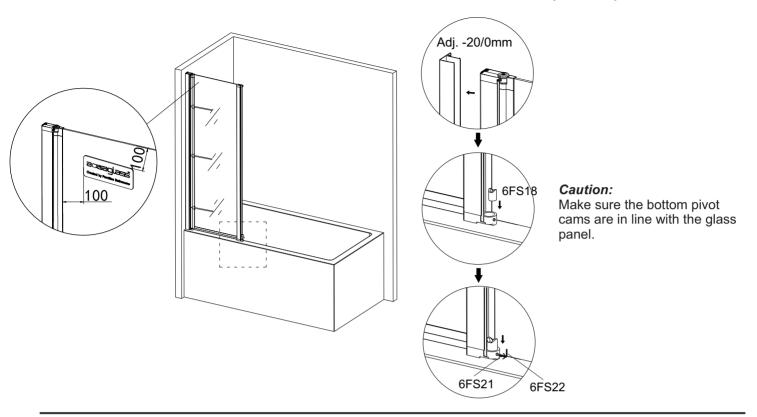


8FR17


acusagasi munimasa


X 2

5.



- -Attach the bottom anti-water sealer 6FS15 onto the panel 6FS3 at bottom of the glass panel.
- -Apply the moving panel 6FS3 onto the panel 6FS2. Make sure the bottom profile sit onto the bottom pivot like below drawing shows.
- -Insert the top pivot 6FS17 into the top bracket.

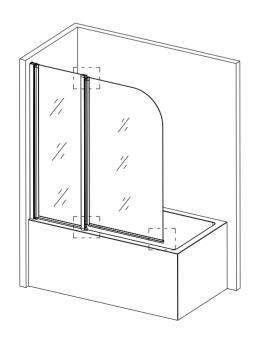


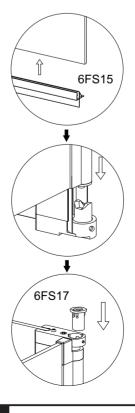


Caution: The triangle bubble should be mounted towards the inside of the bath.




- -Adjust the adjustment between wall profile and vertical profile to
 - the right distance. -From inside of the bathtub, drill holes (
 - the wall profile and vertical profile with screws 6FS9.
 - -Cover the wall profile with conceal profile 6FS19 from inside.
 - -Make sure the conceal profile hook at the cambered side firstly, and hook the inside secondly; then totally cover the conceal profile onto the wall profile.
 - -Cover the top cover 6FS14 onto the top of the wall profile and conceal profile.

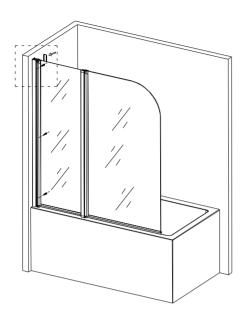

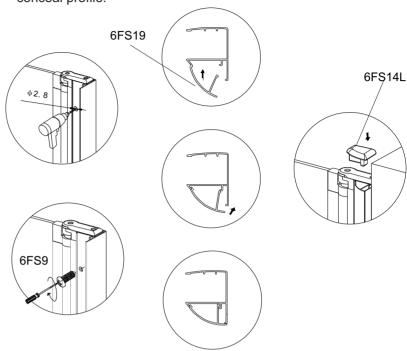



-Apply silicone sealant to the outside of the screen. Please note: Do not apply silicone sealant to the inside of the enclosure.

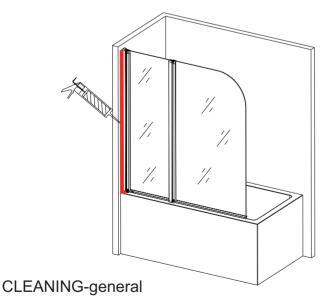

Use only warm soapy water and damp cloth/sponge on a regular basis.

Do not use abrasive scouring powders, chemicals or aerosol cleaners-these may result in damage to the surfaces, in particular, the plated component parts.

For information and support phone: 0845 470 24 27



Sealant drying times may vary in cold damp conditions and will be extended where thicker beads of sealant are applied. Allow sealant to dry completely before exposing to water.

We have taken great care to ensure that this product reaches you in perfect condition. However should any parts be damaged or missing please contact your point of purchase. This does not affect your statutory rights. In addition if you require replacement parts your point of purchase will be happy to assist.

17K17