

## Warranty Information

Proof of purchase will be required.

The guarantee does not cover faults or damage caused by incorrect installation and/or maintenance, ordinary wear and tear, water composition, etc.

\*Please see [www.deva-uk.com](http://www.deva-uk.com) for full terms and conditions of warranty

## Cleaning

Your product has a high-quality finish and should be treated with care to preserve the visible surfaces. Never use abrasives or abrasive cleaning agents to clean this product clean regularly with contamination free warm water and a damp soft cloth. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the product.

We have a policy of continuous improvement and reserve the right to change specifications without notice.

METHVEN UK LIMITED  
METHVEN EXPERIENCE CENTRE  
3/3A STONE CROSS COURT  
YEW TREE WAY  
GOLBORNE  
WARRINGTON  
WA3 3JD  
UNITED KINGDOM

INST-CR24,  
CR24/501  
02/09/2025

TEL: 0800 195 1602  
FAX: 0844 406 8690  
EMAIL: [sales@uk.methven.com](mailto:sales@uk.methven.com)  
[www.deva-uk.com](http://www.deva-uk.com)  
[www.methven.com](http://www.methven.com)

# Coronation Basin Mixer & Press Top Waste

CR24, CR24/501

Chrome, Gold

Installation Guide

---

## Technical Specification

### Working Pressure:

Min: 0.1 Bar

Max: 5.0 Bar

### Operating Temperature:

Hot: 60°C

Cold: 5°C

### Inlet Connections:

½" BSP

### Features:

- Suitable For High & Low Pressure Systems
- Non-Rising Spindle Headworks
- H & C Temperature Indicator
- Single Flow Outlet With Pre-Fitted Flow Straightener
- Fixing Kit(Metal Horseshoe Fixing Plate, Rubber Horseshoe Fixing Washer, Metal Bar and Locking Nut)
- Supplied With 2 X M10-300mm Flexi Tails
- Complete With Press Top Waste
- Gold version has 5yr warranty on outer finish



Congratulations on your purchase of your new Deva by Methven Basin Mixer. Our fitting instructions have been created with you in mind to provide you with all the information you require and, if you need any further help, please don't hesitate to contact our customer care team on 0800 195 1602.

Please keep these instructions for future reference and request of replacement parts

## Contents

|                            |   |
|----------------------------|---|
| General Safety Information | 3 |
| Line Drawing               | 3 |
| Product Breakdown          | 4 |
| Product Breakdown          | 4 |
| Installation Requirements  | 6 |
| Installation               | 6 |
| Troubleshooting            | 7 |
| Warranty Information       | 8 |
| Cleaning                   | 8 |

## Troubleshooting

| Symptom                       | Cause(s)                                                                                                                                    | Resolution                                                                       |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| Mixer not turning on          | Mains water supply turned off                                                                                                               | Turn on the mains water supply                                                   |
|                               | Closed isolation valve                                                                                                                      | Open isolation valve                                                             |
| No hot water                  | Cold override                                                                                                                               | Check if the pressure is balanced. Fit pressure equalising valve.                |
| Low flow rate/no flow         | Water supply failure                                                                                                                        | Investigate water supply, check plumbing and heating system for any faults       |
|                               | Partially closed isolation valve                                                                                                            | Open isolation valve                                                             |
|                               | Air lock or partial blockage in the supply pipework or hoses                                                                                | Flush through pipework to ensure removal of debris and any airlocks              |
|                               | Water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes. Ensure minimum pressure is being met. | Try not to use other water outlets when using the mixer                          |
| Water dripping from the mixer | This is normal for a short time after using the mixer                                                                                       | This is due to residual water tension, the build up of water in the mixer spout. |
|                               | If water continues to drip, possible issue with the flow control cartridge.                                                                 | Please contact our customer care team                                            |
| Movement of fitted mixer      | Fixing kit loose                                                                                                                            | Ensure fixing kit nut is sufficiently tightened                                  |

## Installation Requirements


Before commencing installation of the new product, ensure that the system has been flushed to remove any debris, which could cause damage to the valves and invalidate the warranty.

### Basin Mixer Installation

1. Insert the fixing kit threaded bar into the bottom of the tap, with the slot facing out and using a flat bladed screw-driver tighten this up.
3. Screw the flexi tails into the bottom of the tap, by hand, until tight. Do not use PTFE tape, or similar, on the threads.
4. Feed the flexi tails and threaded bar into the hole in the basin, ensuring that the mixer body is seated correctly and fully covering the hole
5. From the underside of the basin feed the rubber horseshoe washer over the threaded bar followed by the metal horseshoe washer. Place the fixing nut over the threaded bar and tighten until the tap is fixed on the basin. Do not overtighten.
6. Connect the hot and cold feeds to the water supply.
7. Reinststate the water supply and test for leaks.

### Waste Installation

1. Remove the backnut, white plastic washer and smaller of the two rubber washers. Push the larger of the rubber washers up to the waste flange and insert into the hole for the waste in the basin. Please note sealant can be used in addition to, or instead of, the washers depending on the requirements of the installation or preferences of the installer.
2. On the underside of the basin, feed the smaller rubber washer and white plastic washer back onto the bottom of the waste tail and using the backnut, tighten until the waste is secure. As above sealant can also be used.
3. Attach the trap/waste pipework to the bottom of the waste body and test for leaks.

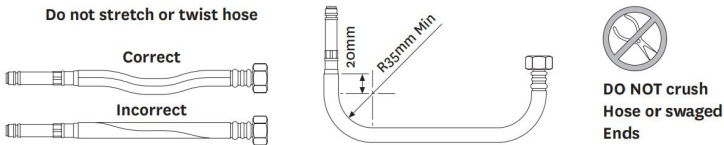

## General Safety Information

Please read all of the instructions before installation.

Methven recommends this product is installed by a competent person in compliance with all relevant regional regulations.


Remove all packaging and check the components for damage before starting installation.

This product **must** not be modified in any way as this will invalidate the guarantee.

It is the responsibility of the installer to ensure a waterproof seal is achieved, after installation all connections must be checked for leaks.


All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.

### Line Drawing

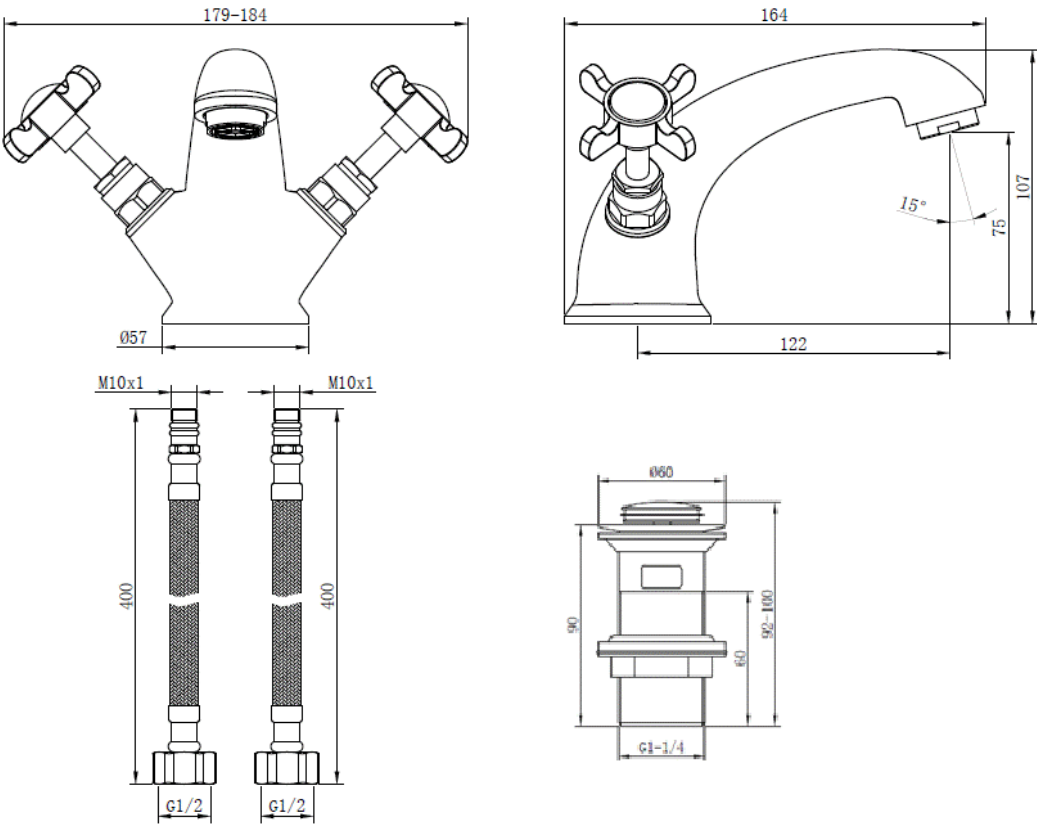

Product Breakdown

Check All components are present prior to starting installation.

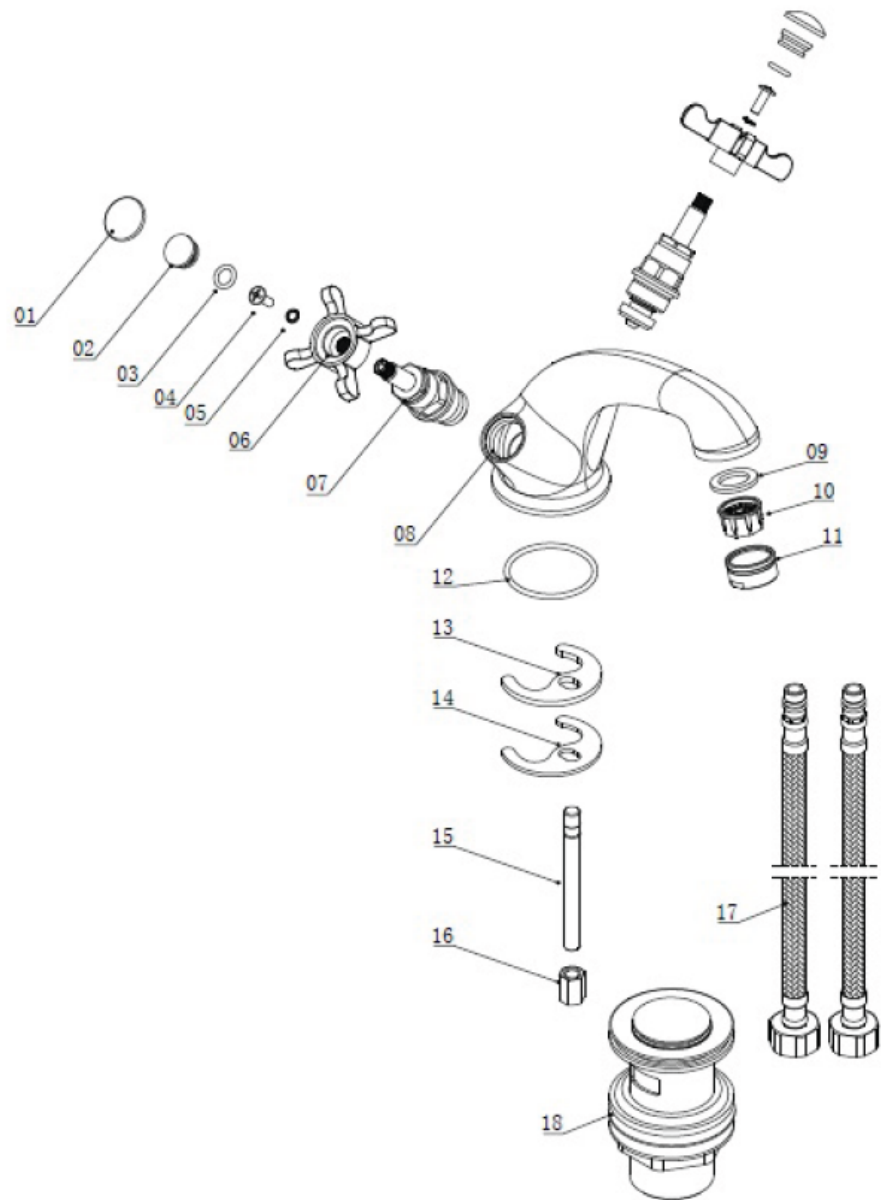

- 1 Hot & Cold Indicators
- 2 Cover
- 3 O-Ring
- 4 Screw
- 5 Spring
- 6 Handle
- 7 Non-rising Spindle Headworks
- 8 Basin Mixer Body
- 9 Washer
- 10 Aerator
- 11 Aerator Housing
- 12 Washer
- 13 Rubber Gasket
- 14 Metal Horseshoe Washer
- 15 Fixing Kit Threaded Bar
- 16 Fixing Kit Nut
- 17 Flexi Tail
- 18 Press Top Basin Waste