




Shower Riser Rail Kit Installation & User Care Instructions

READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION AND LEAVE WITH THE END USER FOR FUTURE REFERENCE)

Important notes

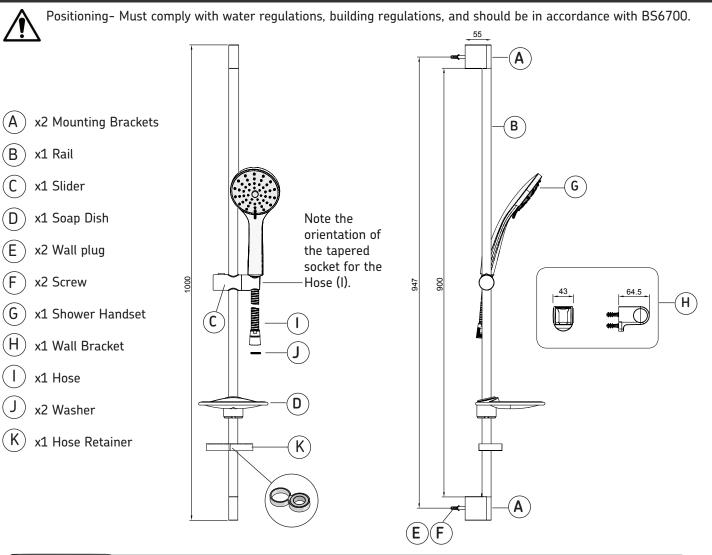


Step 1

Ensure that the Mounting Brackets (A) are attached to the Rail (B). Note that only one bracket has a key which locks into the slot in the Rail (B) to stop the rail turning (see Step 2).


Remove the chrome covers from both of the Mounting Brackets (A) by sliding them off horizontally. Attach the Slider (C) and the Soap Dish (D) to the Rail (B) by removing one of the Mounting Brackets (A) and sliding them on to the Rail (B). Ensure that the tapered socket on the Slider (C) for the Hose (I) is orientated correctly. Re-attach the Mounting Brackets (A) and then, holding the assembly against the wall, establish the position for the riser rail, making allowance for the heights of all persons likely to use the shower regularly. Mark the position of the Mounting Brackets (A).

Website www.akw-ltd.co.uk Orderline +44 (0)1905 823 298 Technical Enquiries 01905 560219 technicalenquiries@akw-ltd.co.uk.



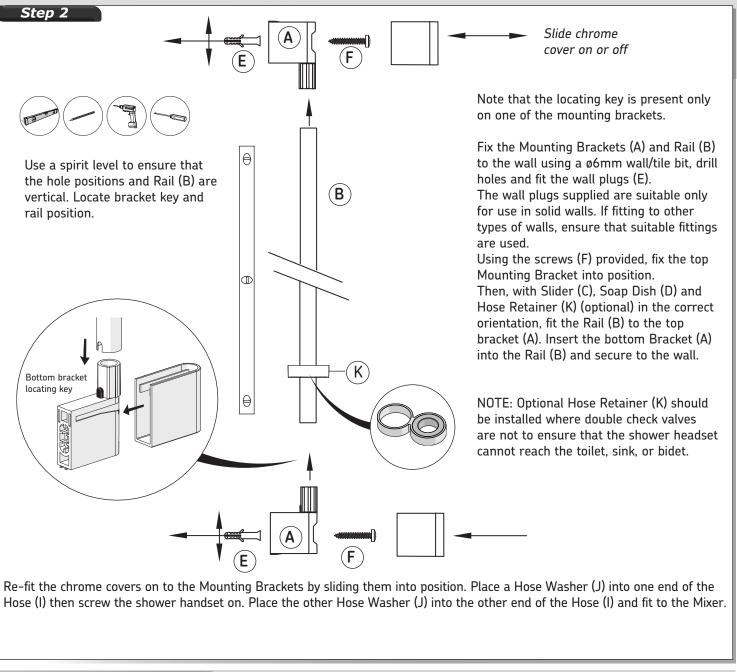

(Optional) Wall Bracket (H)

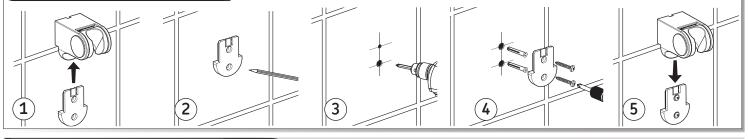

Keeping your shower rail clean

This product should be cleaned periodically using normal domestic bathroom cleaning materials.

Do not use strong or concentrated acidic or alkaline cleaning materials as these may discolour or otherwise damage the product. After cleaning, always rinse with water then wipe thoroughly with a damp cloth to remove any cleaning material residues before drying off. It is important to clean areas such as seals and keep moving parts clear from build up of grime and water deposits to maintain good working order. Dry with a towel to prevent new water spots from forming. When possible, rinse the shower rail after use to remove soap and other deposits.

AKW Medi-Care Limited, Liberty House, Pointon Way, Hampton Lovett, Droitwich Spa, WR9 OLR

Website www.akw-ltd.co.uk

Orderline +44 (0)1905 823 298 Technical Enquiries 01905 560219 technicalenquiries@akw-ltd.co.uk.



08-013-018-01 Draft01