

BRISTAN

Installation Instructions & User Guide

Please leave these instructions
with the end user

Specifications

Dynamic Water Pressure


Min: 0.5 bar

Max: 5.0 bar




Maximum Static Pressure: 10.0 bar

Inlet Water Temperature

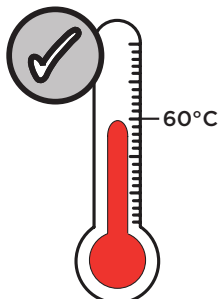


Maximum Hot 60°C

Inlet Connections

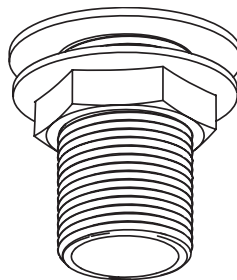


3/4" BSP

Outlet

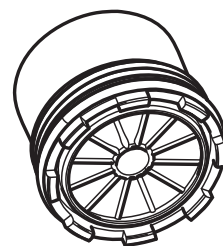


M16 Recessed
Flow Straightener

Pack Contents

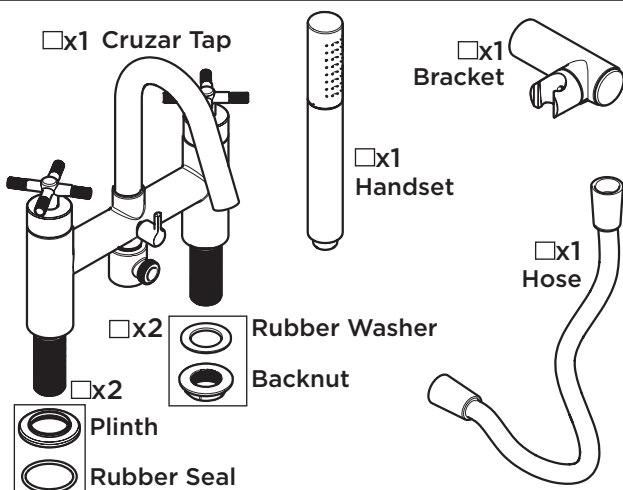

Operation

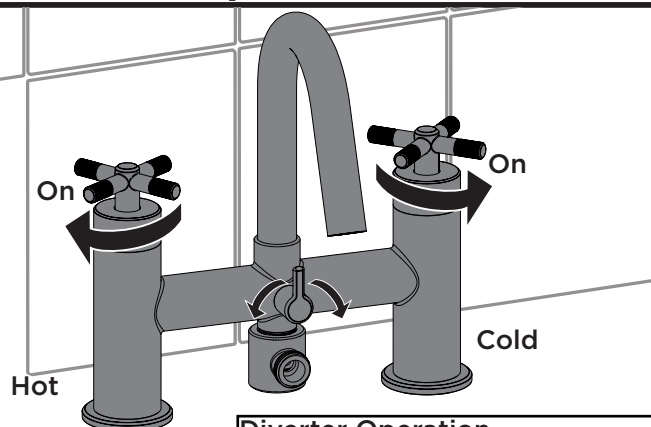

Diverter Operation

- Turn handle left for hand-set
- Turn handle right for bath-fill


Tools Required for Installation/ Maintenance



Drill




Safety Glasses




Pencil




Adjustable
Spanner



Hexagonal Key
(Grub Screws)




Hexagonal Key
(Diverter Peg)



Hexagonal Key
(Spout)



Socket Spanner



Box Spanner
(Inlets)



Phillips Head
Screwdriver

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014. For full Installation Requirements & Notes (IRN) please visit www.wrasapprovals.co.uk/approvals-directory

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance. Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

If power tools are used do not forget to: - Wear eye protection - Unplug equipment after use


This product must not be modified in any way as this will invalidate the guarantee.




Spare Parts









To replace any spare parts
for your tap, why not
scan the QR Code or
visit www.bristan.com
and search for your
product.

Maintenance - Valve Replacement

 PLEASE NOTE - Taps shown in these instructions are for illustration purposes only. All taps can be maintained using these instructions.
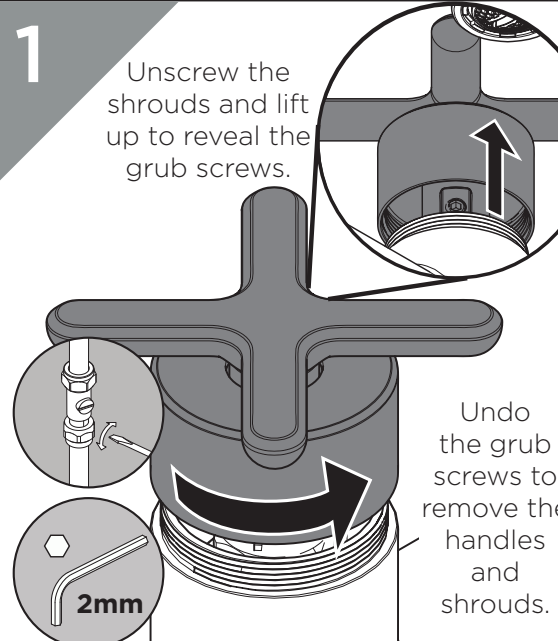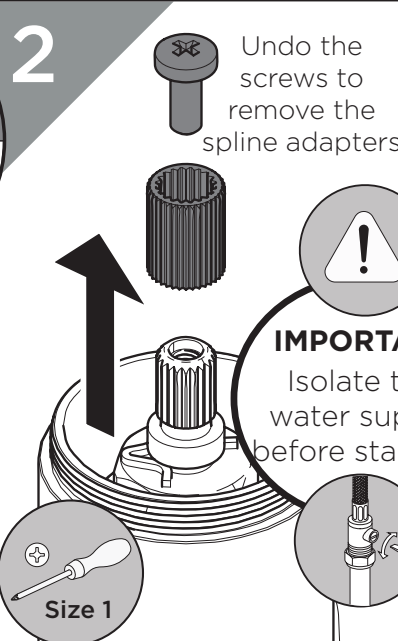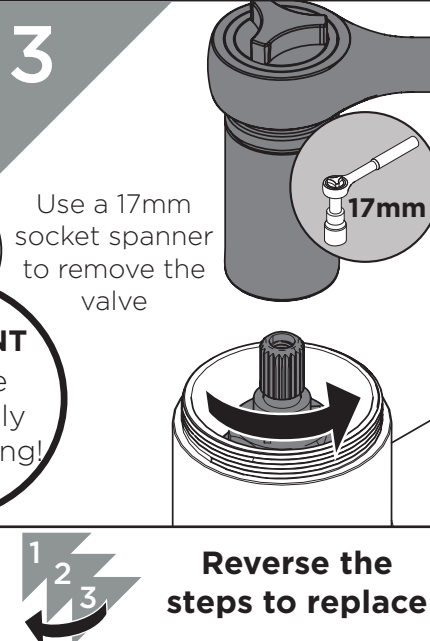
<p>1</p> <p>Unscrew the shrouds and lift up to reveal the grub screws.</p>  <p>Undo the grub screws to remove the handles and shrouds.</p> <p>2mm</p>	<p>2</p> <p>Undo the screws to remove the spline adapters</p>  <p>IMPORTANT Isolate the water supply before starting!</p> <p>Size 1</p>	<p>3</p> <p>Use a 17mm socket spanner to remove the valve</p>  <p>17mm</p> <p>Reverse the steps to replace</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Maintenance - Diverter Replacement
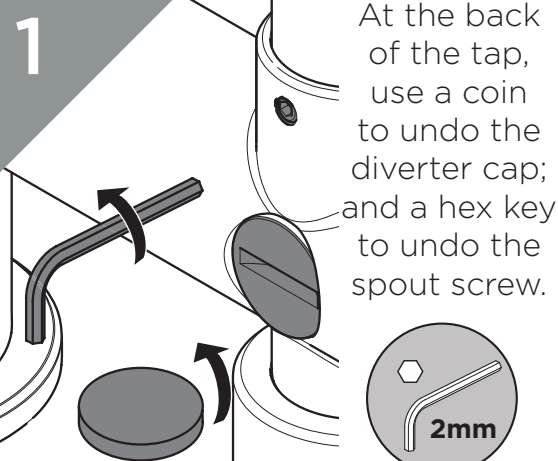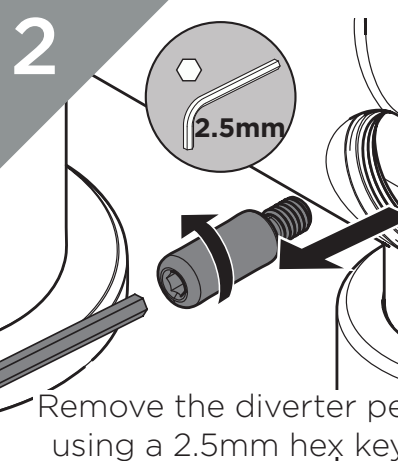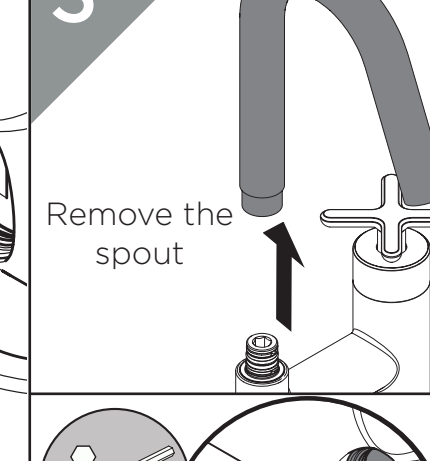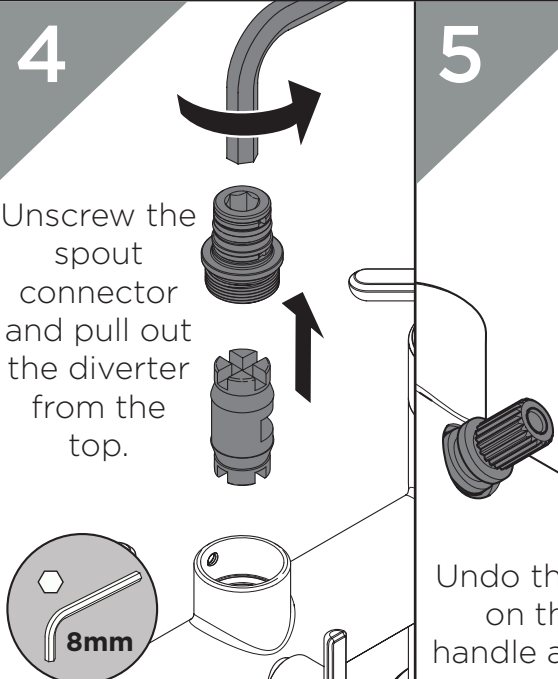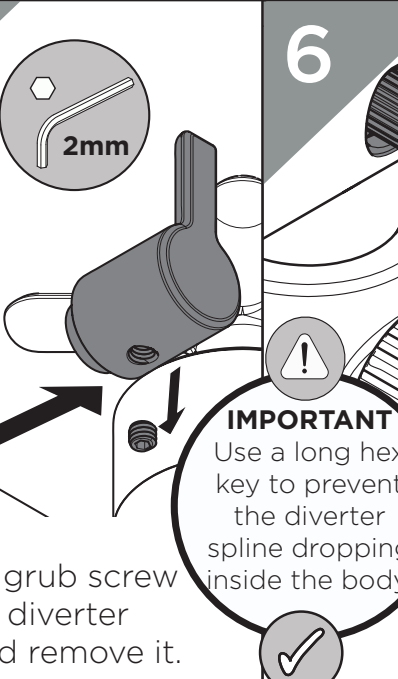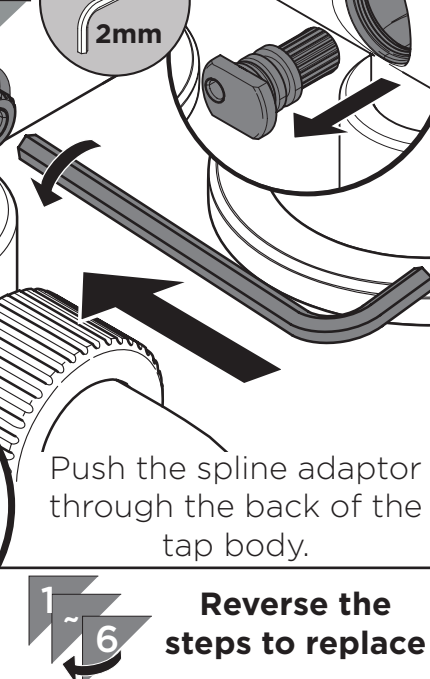
<p>1</p> <p>At the back of the tap, use a coin to undo the diverter cap; and a hex key to undo the spout screw.</p>  <p>2mm</p>	<p>2</p> <p>Remove the diverter peg using a 2.5mm hex key.</p>  <p>2.5mm</p>	<p>3</p> <p>Remove the spout</p> 
<p>4</p> <p>Unscrew the spout connector and pull out the diverter from the top.</p>  <p>8mm</p>	<p>5</p> <p>Undo the grub screw on the diverter handle and remove it.</p>  <p>2mm</p>	<p>6</p> <p>IMPORTANT Use a long hex key to prevent the diverter spline dropping inside the body</p> <p>Push the spline adaptor through the back of the tap body.</p>  <p>2mm</p> <p>Reverse the steps to replace</p>



Important

The images shown are for illustrative purposes only.


The tap you have purchased may look different to those pictured in this booklet but will follow the same installation steps.

Your contents page will be specific to your product.

If you find your product or any of its components differ from those shown on the contents page, please contact our customer support.

Installation

1

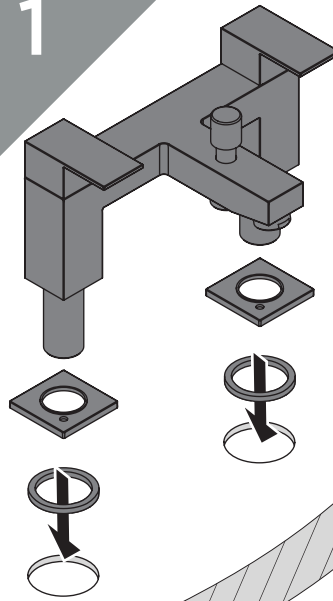


Feed the tap body through the plinths and ensure rubber plinth seals are in place

Once aligned, feed the threaded tails through tap holes

IMPORTANT
Your model may come with a plinth and will either be included pre-attached or loose in the box*


1*

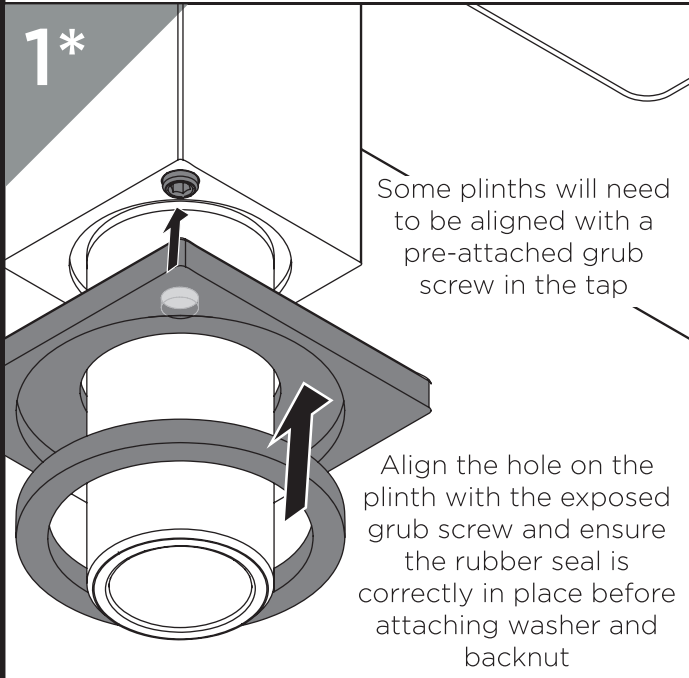

Some plinths will need to be aligned with a pre-attached grub screw in the tap

Align the hole on the plinth with the exposed grub screw and ensure the rubber seal is correctly in place before attaching washer and backnut


2

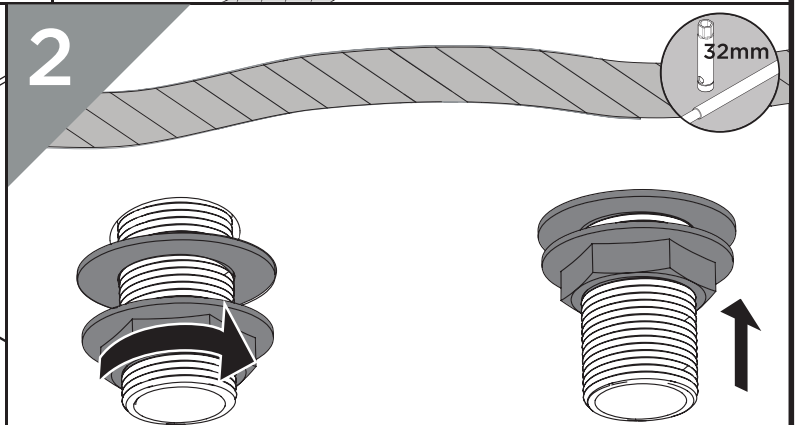

32mm

To secure the taps to the bath, use a box spanner to tighten the metal backnuts underneath ensuring the washer is correctly positioned in between the backnuts and the bath

3

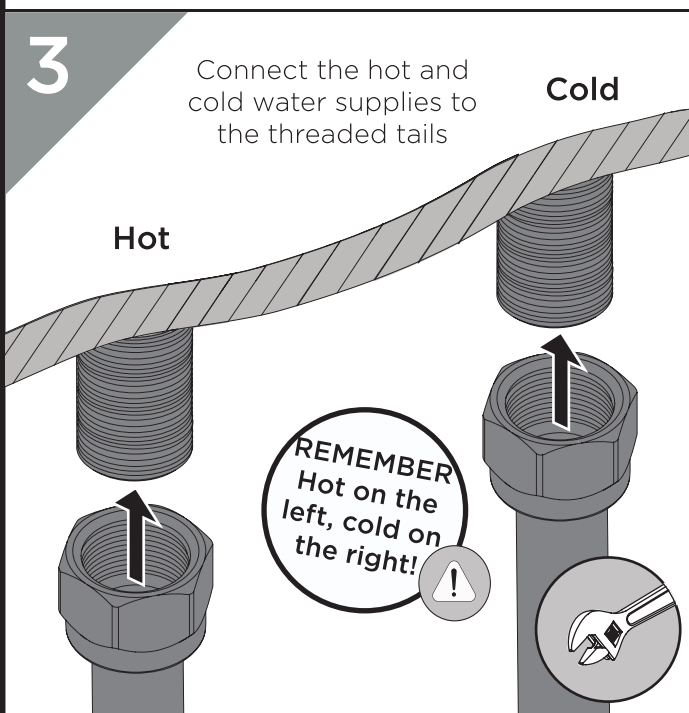


Connect the hot and cold water supplies to the threaded tails

Cold

Hot

REMEMBER
Hot on the left, cold on the right!

4

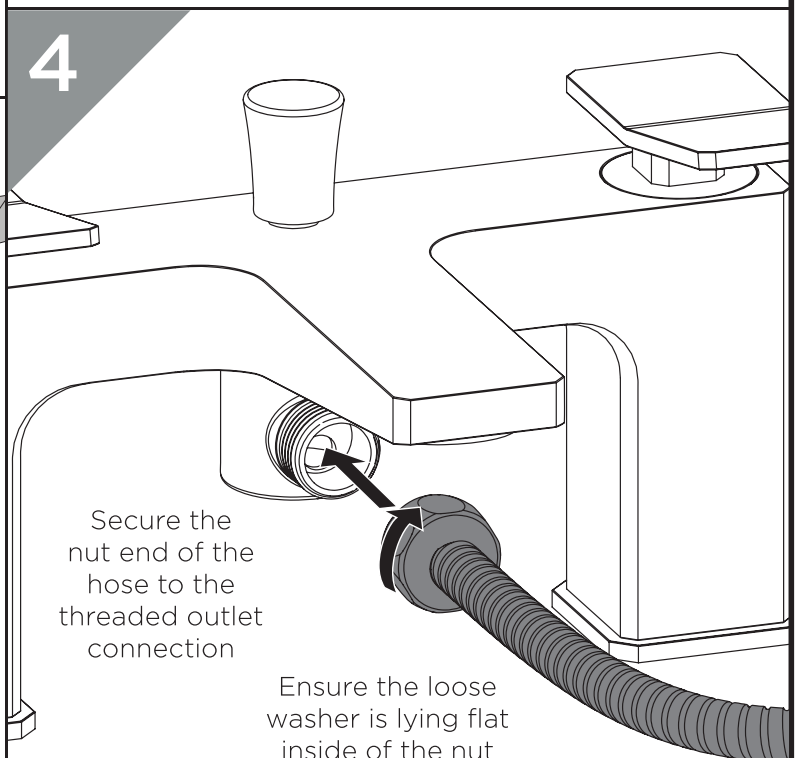

Secure the nut end of the hose to the threaded outlet connection

Ensure the loose washer is lying flat inside of the nut


5

Secure the cone end of the hose onto the threaded inlet connection of the handset

If your model has one, ensure the loose washer is lying flat inside of the cone connection


IMPORTANT
Turn on water supply for a few minutes and check all joints and connections for any leaks.

Your tap is now ready to use

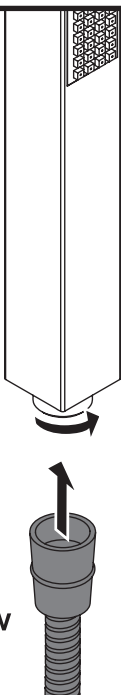

6

Please refer to your product's contents page to install the wall bracket.

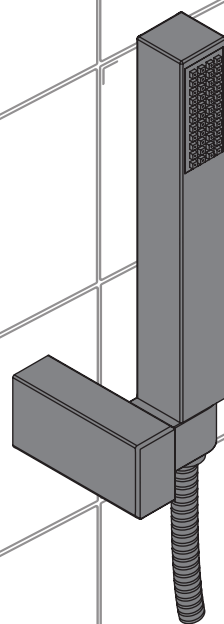


Maintenance - Valve Replacement

PLEASE NOTE - Taps shown in these instructions are for illustration purposes only. All taps can be maintained using these instructions.

1

Unscrew the shrouds and lift up to reveal the grub screws.

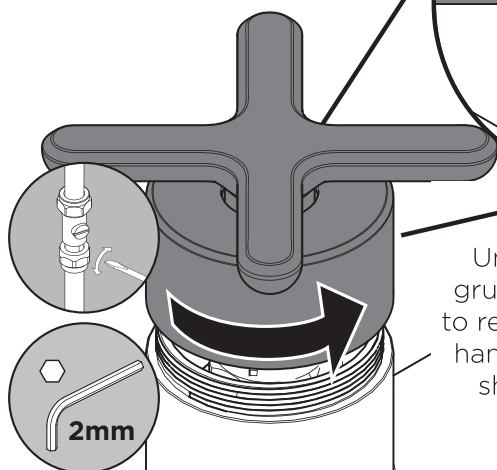


Undo the grub screws to remove the handles and shrouds.

2


Undo the screws to remove the spline adapters

IMPORTANT
Isolate the water supply before starting!

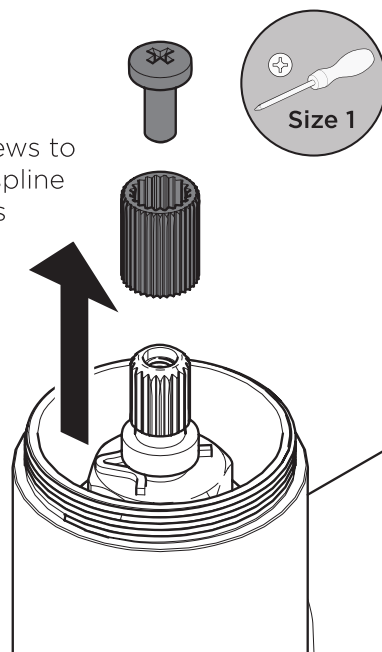


3

Use a 17mm socket spanner to remove the valve

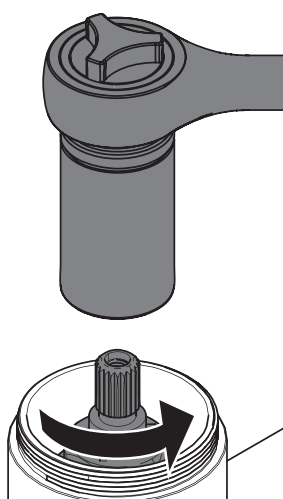


4

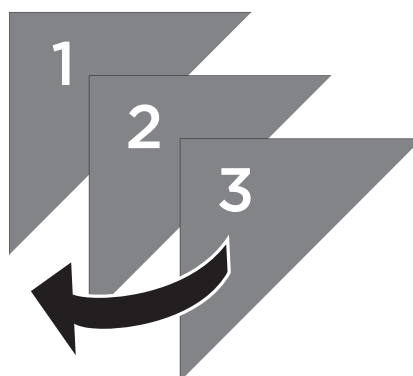

Reverse the steps to replace the cartridge.

Maintenance - Valve Replacement

4

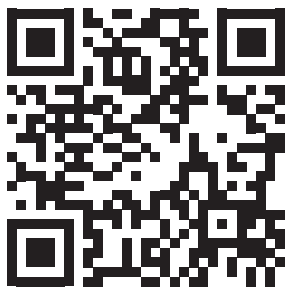

Visit **www.bristan.com** or scan the QR Code and search for your product code to replace the cartridge for your tap.

5



Reverse the steps to replace the valves and handles.


Maintenance - Clean/ Replace Outlet

Housed Outlet


1a

Using an adjustable spanner, unscrew gently to remove the outlet


IMPORTANT
Refer to your contents page to see what outlet your model has

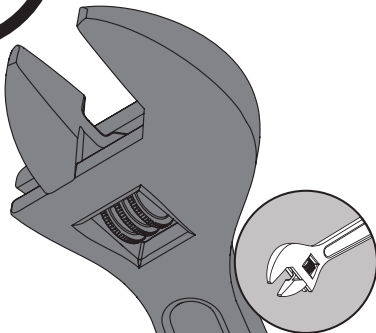

1b

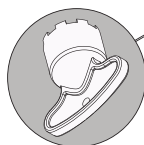


Recessed Outlet

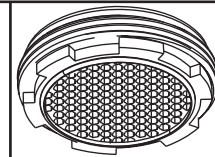


If provided, insert the key tool into the outlet and twist to release it

1c

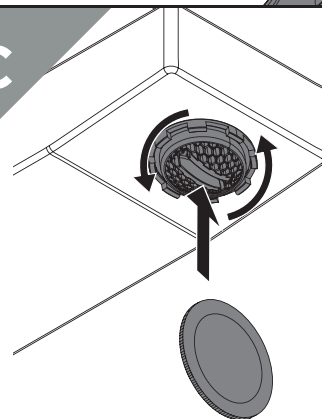


Coin Slot Outlet

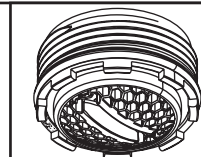


Using a coin, insert into the slot on the outlet and twist to release it

2

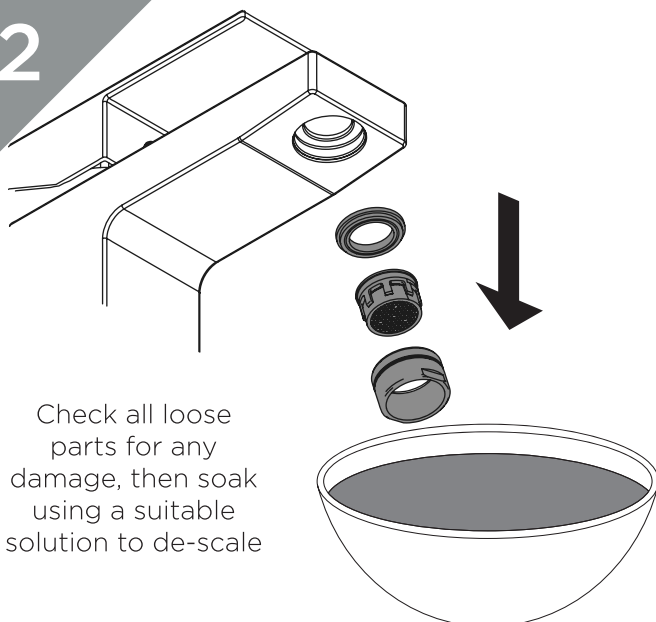

Check all loose parts for any damage, then soak using a suitable solution to de-scale

3

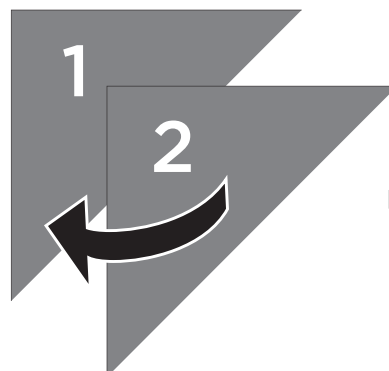

Reverse the steps to replace the outlet

Troubleshooting		Troubleshooting
Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and replace, refer to 'Maintenance' section.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.
Water not coming from handset when in use	Diverter mechanism not fully open.	Ensure diverter is fully open.
	Kink or blockage in hose	Make sure hose is free of any kinks and free to move. Remove handset and flush through hose.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.

Spares



Visit **www.bristan.com** or scan the QR Code and search for your product code to replace the cartridge for your tap.

Contact Us

BRISTAN

Bristan Group Ltd.

UK: Bristan Group, B78 1SG.

EU: Masco Europe S.à.r.l.
14 Rue Strachen
6933 Mensdorf
Luxembourg

Customer Service: +44330 026 6273

Web: www.bristan.com

Email: enquire@bristan.com

A Masco Company

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.

