
## BRENO INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

This product must be fitted only by a fully qualified installer.				
DESCRIPTION ILLUSTRATION		DESCRIPTION	ILLUSTRATION	
			Fixing choose the appropriate fixing for the wall material if required	
			PTFE tape	
			Electric drill	
	Radiator x1		Masonry drill bit approplate to the fixings	
	Brackets x2		Adjustable spanner	
THE	Wall Anchors x 2		Radiator valve hex key	
	Fixing Screws		Flat head and philips head screw drivers	
Washers x2		Security Screws	1 lock shield valve and 1 gate or thermostatic valve	
			Spirit level	0 0
			Measuring tape	O.

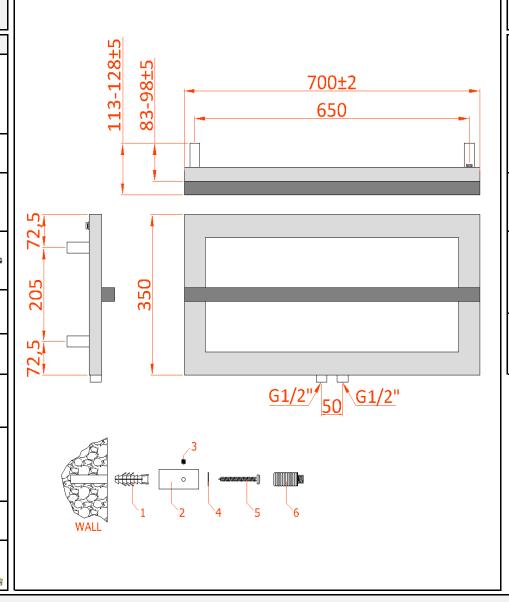

## REINA

The radiator should not be mounted closer than 50mm below any overhanging surface (i.ei shelf) and no lower than 100mm from the floor. Transfer the bracket drill position measurements to the wall.

- **B** Drill the wall and insert wall anchors (1) (or other suitable fixings).
- Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).
- Insert brackets (6) into
  the brackets (2) and
  tighten the security
  screws (3)

## **GENERAL RECOMMENDATION**

- ■Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- ■When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- ■In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- ■If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- ■Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb on the radiator.
- ■Maximum working temperature 95°C, maximum working pressure 4 bar.